

OTTOMAN TV BED


DOUBLE, KING AND SUPER-KING SIZES

PLEASE READ: this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly. Please ensure that the packaging is disposed of in a safe environmentally friendly way.


CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children during assembly, to avoid the danger of choking.

IMPORTANT: BEFORE STARTING TO ASSEMBLE THE BED - PLEASE READ THESE INSTRUCTIONS CAREFULLY.


If the media tray is needed on the left side of the bed, fit side rail (3) to left and (4) to right.

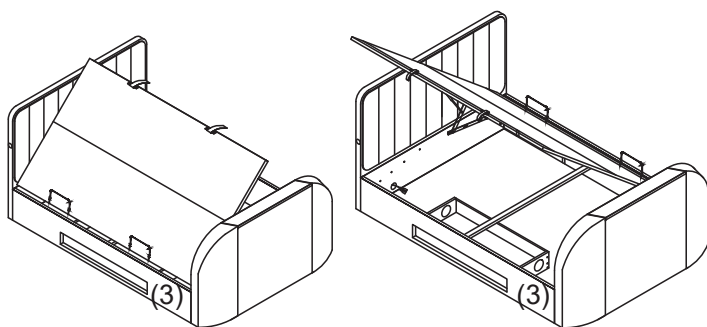

If the media tray is needed on the right side of the bed, fit side rail (4) to left and (3) to right.

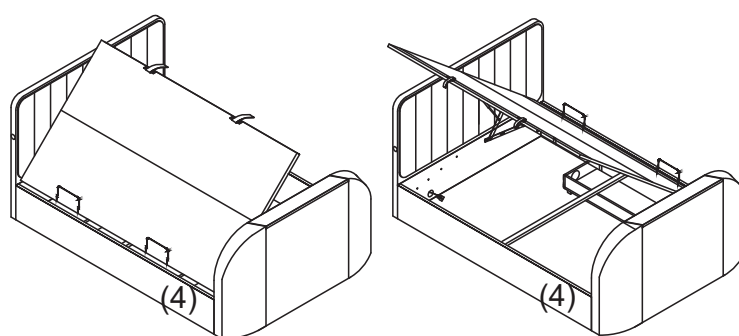

Parts Identification


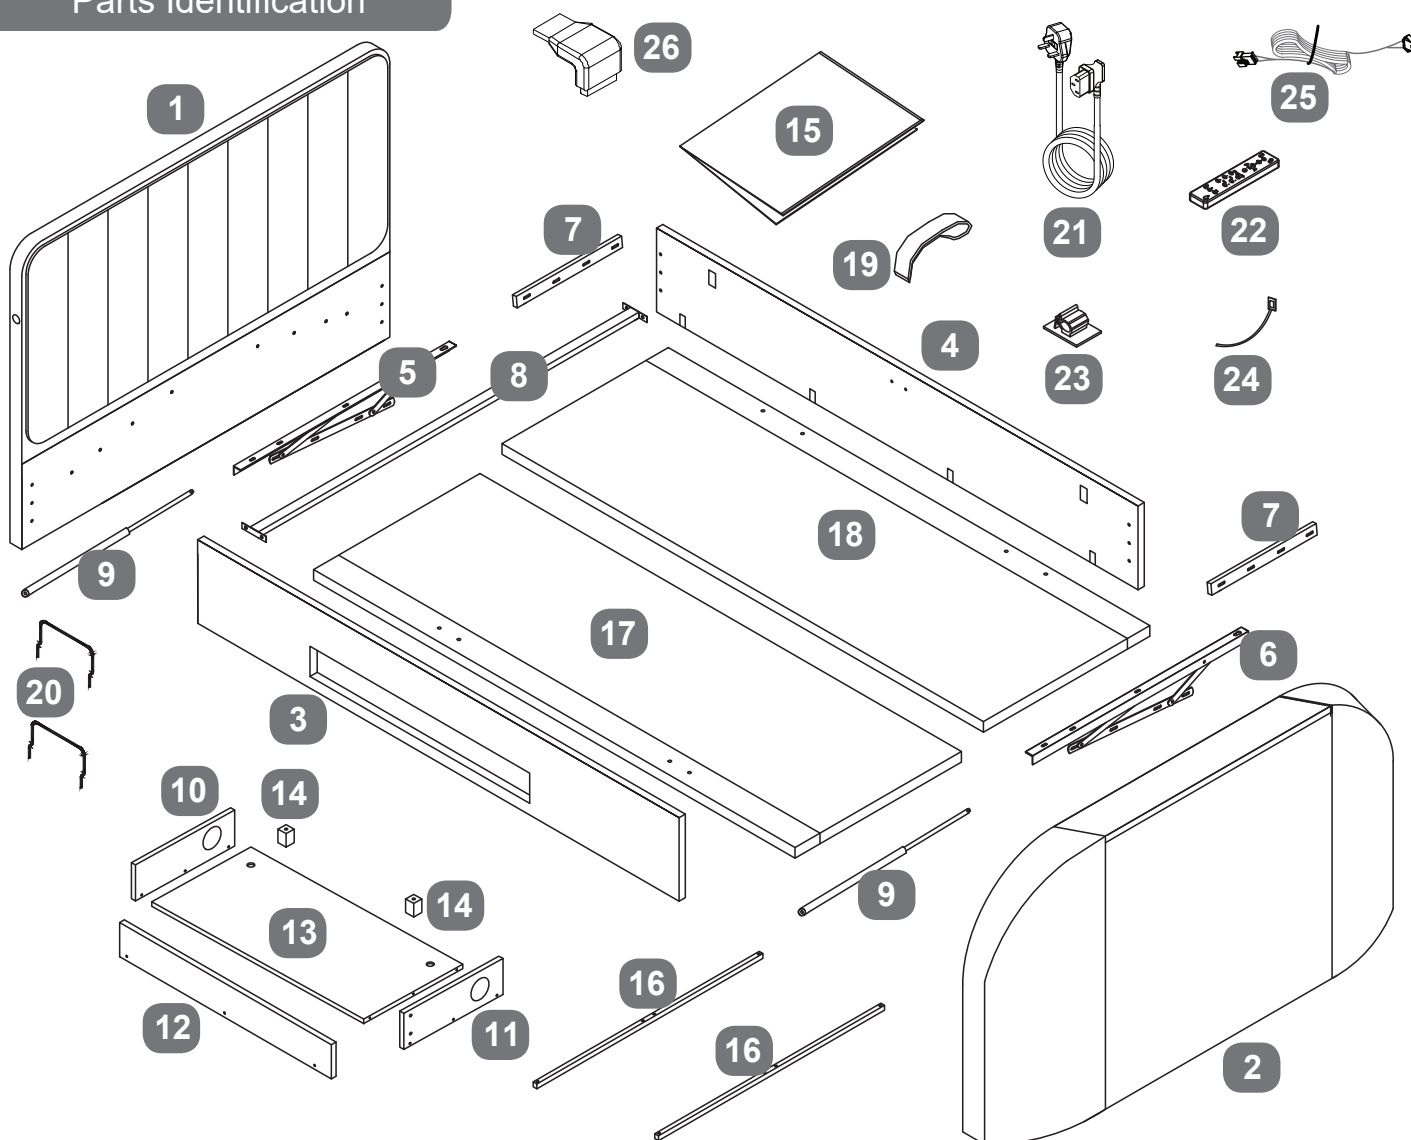


Parts Checklist


Ref.	Description	Qty	Box	Ref.	Description	Qty	Box
1	Headboard	1	1	14	Media Tray Support Legs	2	2
2	Footboard	1	2	15	Fabric Base Cover	1	4
3	Side Rail - with Media Tray	1	3	16	Mattress Base Board Support Rails	2	1
4	Side Rail - without Media Tray	1	3	17	Mattress Base Board - Upper	1	4
5	Gas-Lift Mechanism - LH	1	1	18	Mattress Base Board - Lower	1	4
6	Gas-Lift Mechanism - RH	1	1	19	Fabric Handle Strap	2	2
7	Spacer Rails for Mechanisms	2	1	20	Mattress Stoppers	2	2
8	Cross Bar	1	1	21	Mains Power Lead - 3.5mt	1	2
9	Gas Lift Pistons	2	1	22	Remote Control for TV lift	1	2
10	Media Tray LH Side Panel	1	1	23	Cable Clips	3	2
11	Media Tray RH Side Panel	1	1	24	Cable Ties	3	2
12	Media Tray Back Panel	1	1	25	USB Cconnection Lead	1	2
13	Media Tray Base Panel	1	1	26	HDMI 90° Adapter	1	2

Fittings Checklist

  HARDWARE NEEDED FOR BED ASSEMBLY

Code	Description	Qty	Code	Description	Qty
A	Bolt sets (M8x20mm) 	x30	F	Allen Key for M8 bolts 	x1
B	Bolt sets (M8x35mm) 	x8	G	Angle Brackets - LH 	x2
C	Carcass Screw (Ø4x40mm) 	x13	H	Angle Brackets - RH 	x2
D	Media Tray Bracket - RH 	x1	K	Allen Key for Carcass Screws 	x1
E	Media Tray Bracket - LH 	x1			

 HARDWARE NEEDED FOR MATTRESS BASE BOARD ASSEMBLY

Code	Description	Qty	Code	Description	Qty
A	Bolt sets (M8x20mm) 	x4	M	Flanged M8 Lock-nuts 	x4
B	Bolt sets (M8x35mm)  Double & King x8 Super King x10		N	Spanner for Flanged M8 Lock-nuts 	x1
J	Bolt (M8x35mm) 	x2	P	Bolt sets (M8x50mm) 	x12
L	Fabric Handle Strap Plate 	x2			

TV INSTALLATION KIT - Inside Pack (B)

a

Counter-Sunk Screws (M4x12mm)



x2

Counter-Sunk Screws (M6x12mm)



x2

Screw-Washer sets (M8x25mm) - Use 5mm Allen Key (D)



x2

b

Allen Key (2.5mm)



x1

Allen Key (4mm)




x1

c

TV support glide block




x2

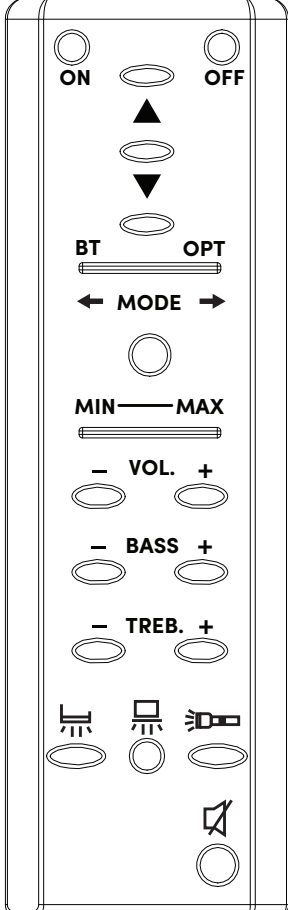2.1 STEREO SYSTEM 	TURN AMPLIFIER ON or OFF. 1) Turn on the mains power to the TV Bed. 2) Press the Remote Control (RC) ON button for 2 seconds to synchronise and prepare the system, system voice shall say 'Power On'. 3) When finished press the OFF button for 2 seconds. LIFT or LOWER THE TV. Press once and TV will rise to it's upper working position. Power to the TV will be connected automatically - operate the TV using it's Operation Guide. Press once and TV Lift will stop. Press once and TV will go down - as soon as the lower resting position is reached power to the TV is switched off to prevent it overheating. NOTE: BLUETOOTH WILL WORK NORMALLY WHEN TV IS UP OR DOWN. SELECT OPTICAL or BLUETOOTH MODE. Select the required mode by pressing OPT (Optical) to watch TV or Select BT (Bluetooth) to connect to your smart device to play music. Pair your device in the normal way searching for -- 'MY BT'. Two devices can pair with the system but each will need to disconnect to allow the other to connect. If device previously connected, system will immediately say PAIRED. If not previously connected, system shall say PAIRING. Note you cannot play films through the system from any BT device. The same blue LED light bar is used to show steps for all the following controls: VOLUME, BASS & TREBLE. VOLUME CONTROL Use --- + or - --- button to increase or decrease the volume. Note that this control operates step by step and as it is adjusted, the blue LED light bar follows each step until full volume is reached, then the blue lights are all on. BASS CONTROL Adjust the Bass attenuation - these buttons increase or decrease the lower frequencies of the sound. TREBLE CONTROL Adjust the Treble attenuation - these buttons increase or decrease the higher frequencies of the sound until the preferred sound level is achieved. Note: if higher frequency sound is reduced, the volume of the sound appears to be reduced too - this is normal.
 This button switches on the torch.	
 These buttons are to control the lights when fitted - they are not fitted in this version of your TV Bed.	
 MUTE This button turns the sound off and back on again.	

USB / HEADPHONE MODULE, FITTED TO EACH SIDE OF THE HEADBOARD

HEADPHONE SOCKET
PLUG A 3.5mm HEAD-PHONE JACK PLUG INTO THIS SOCKET AND SOUND FROM THE MAIN SPEAKERS IS CUT OFF

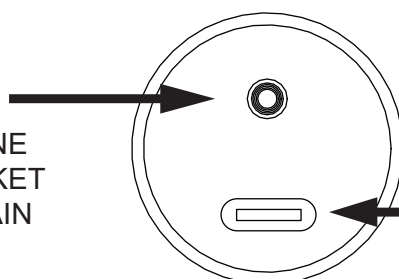

TYPE-C CHARGING SOCKET
THIS IS A FAST CHARGE SYSTEM
PLUG A TYPE C USB INTO THIS SOCKET TO CHARGE A DEVICE

NOTE THIS USB IS ONLY FOR CHARGING - IT CANNOT PLAY MUSIC OR VIDEOS THROUGH THE SYSTEM

Care & Maintenance

In the unlikely event of missing or damaged parts, please contact your retailer. Please have this guide at hand quoting the part code reference numbers shown when requesting spare or replacement parts.



Warnings



General Hints & Tips

Please retain your assembly instruction and tools provided for future use.
Periodically check that all bolts are still tight.



Approximate time to assemble this product

NOTE: Before moving the slat frame, place the mattress on the slats. Without a mattress in place, the speed of movement is quick and may cause injury so great care is needed.

Carefully lower the frame with the fabric hand-strap (19) ensuring the frame sides are aligned with the side rails; there should be an even gap on each side.

If not aligned, check bed is still square (see Stage 4) and if it is, but gaps are still not even, re-align. Depending on the weight of the mattress, the rising speed will vary so be careful until you get used to the speed.

Always use the hand-strap to lift or lower the frame - keep fingers well away from the moving parts.

When fully assembled and the mattress in position, please raise & lower the ottoman 4/5 times to ensure the gas pistons are fully lubricated.


Warnings

- You must ensure that the mattress is on the bed frame before operating the lift mechanism. Failure to do so could result in injury.
 - Keep hands clear of the mechanism when opening or closing the ottoman.
 - Beware of entrapment – Never reach in through the mechanism to access the storage area.
 - Always ensure that the ottoman is FULLY opened before accessing the storage area.
- Do not exceed the maximum weight as specified in the table below:

Bed	Bed Size	Min Weight (kg)	Max Weight (kg)
OTTOMAN BED	Double	10	40
	King	15	45
	Super King	20	50





Don't lift without mattress

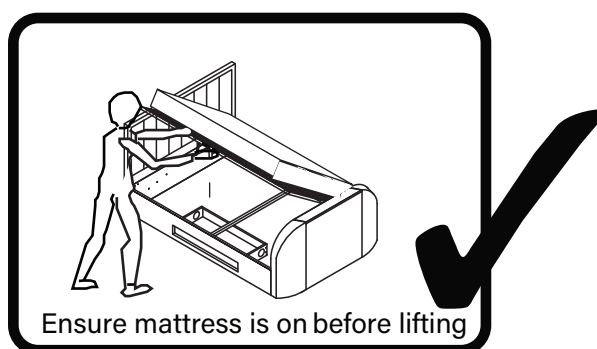



Ensure mattress is on before lifting

- Use caution when operating, always use the handle when lifting.
- Note: This bed uses a pressurised mechanism.
- To be operated by adults only.
- Please ensure that children and pets are kept away from the bed when operating the lift mechanism.
- Keep children and pets away from the storage area.
- Do not overload the internal storage base.
- Do not stand inside the internal storage area of the bed.
- Before removing the mattress secure the frame to ensure it does not open unexpectedly.
- Do not attempt to lie on the mattress when the ottoman is in the raised position.
- When lifting the ottoman remove all bedding except the fitted sheet.

Stage
1

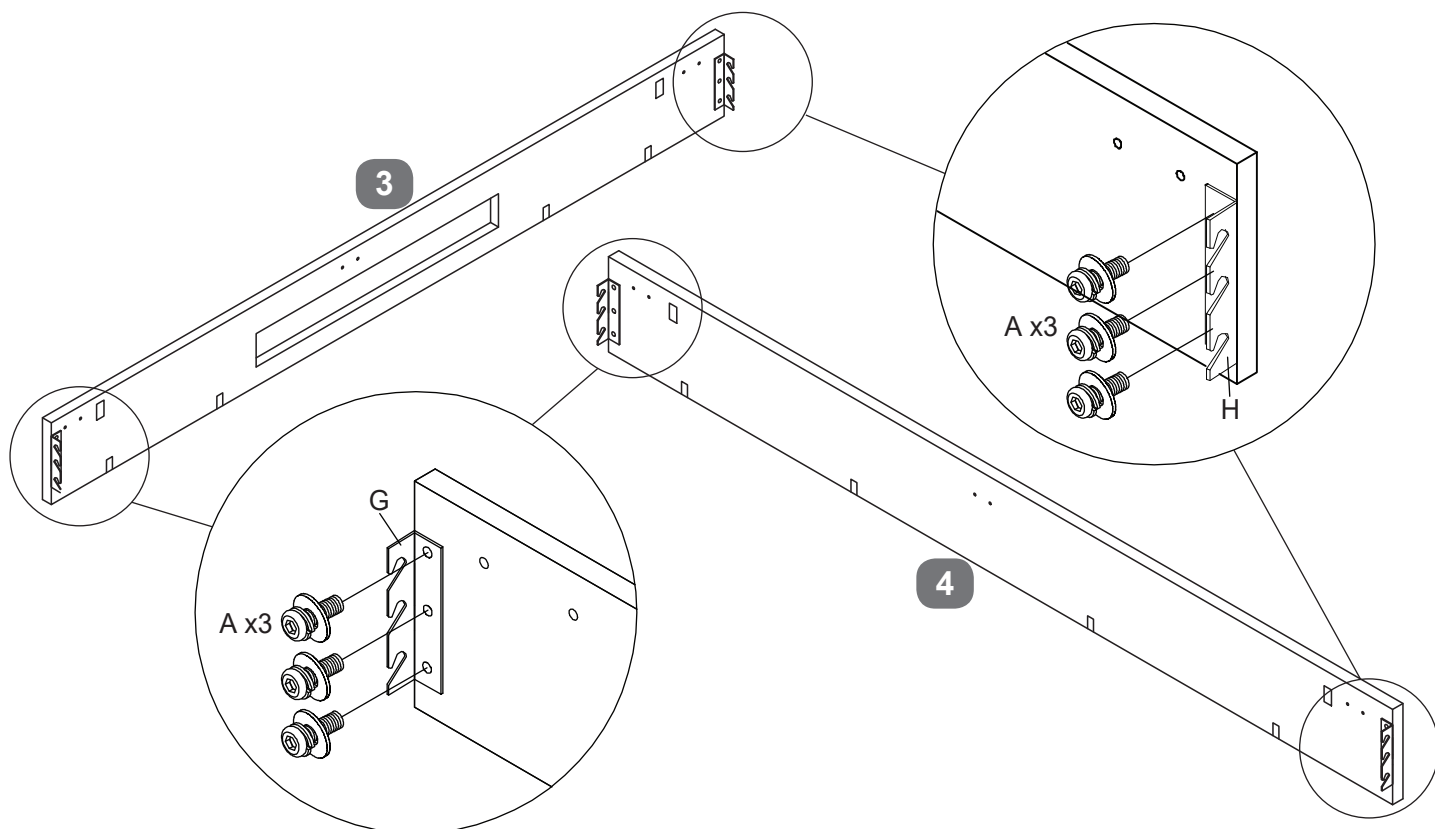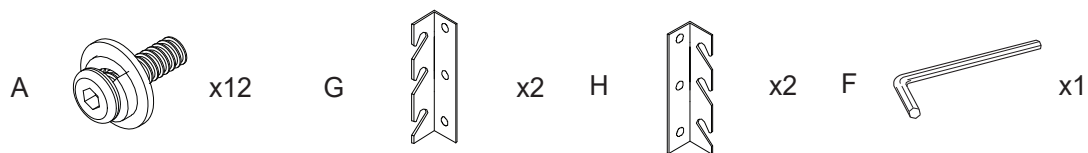


Stage
2

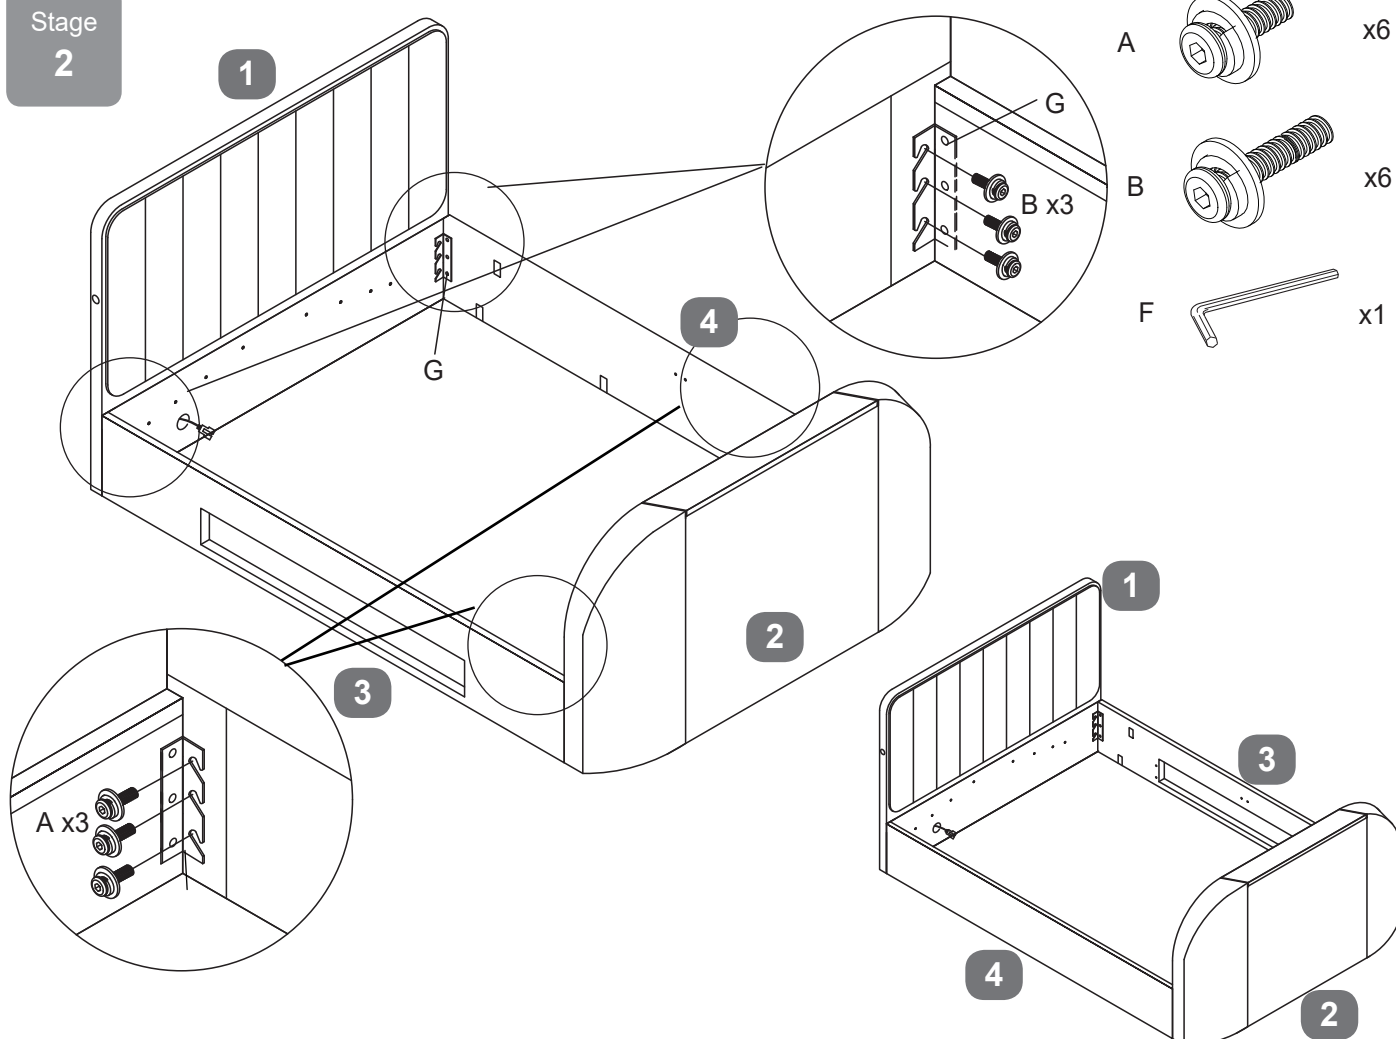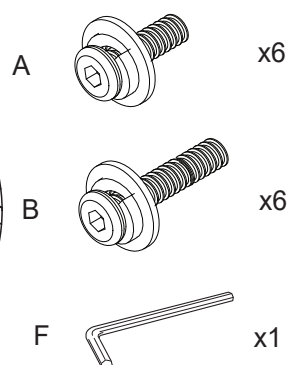


Stage
3

Fit the fabric base cover (15) evenly around the inside of the bed.


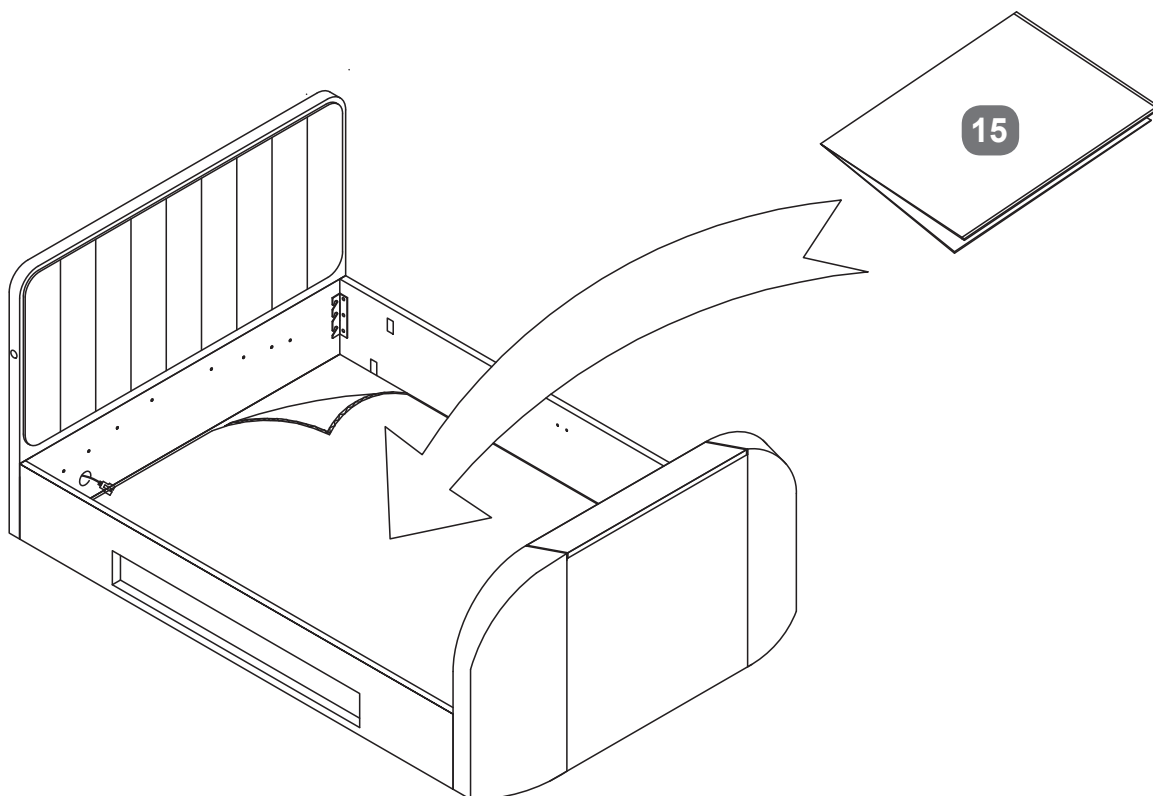


Stage
4

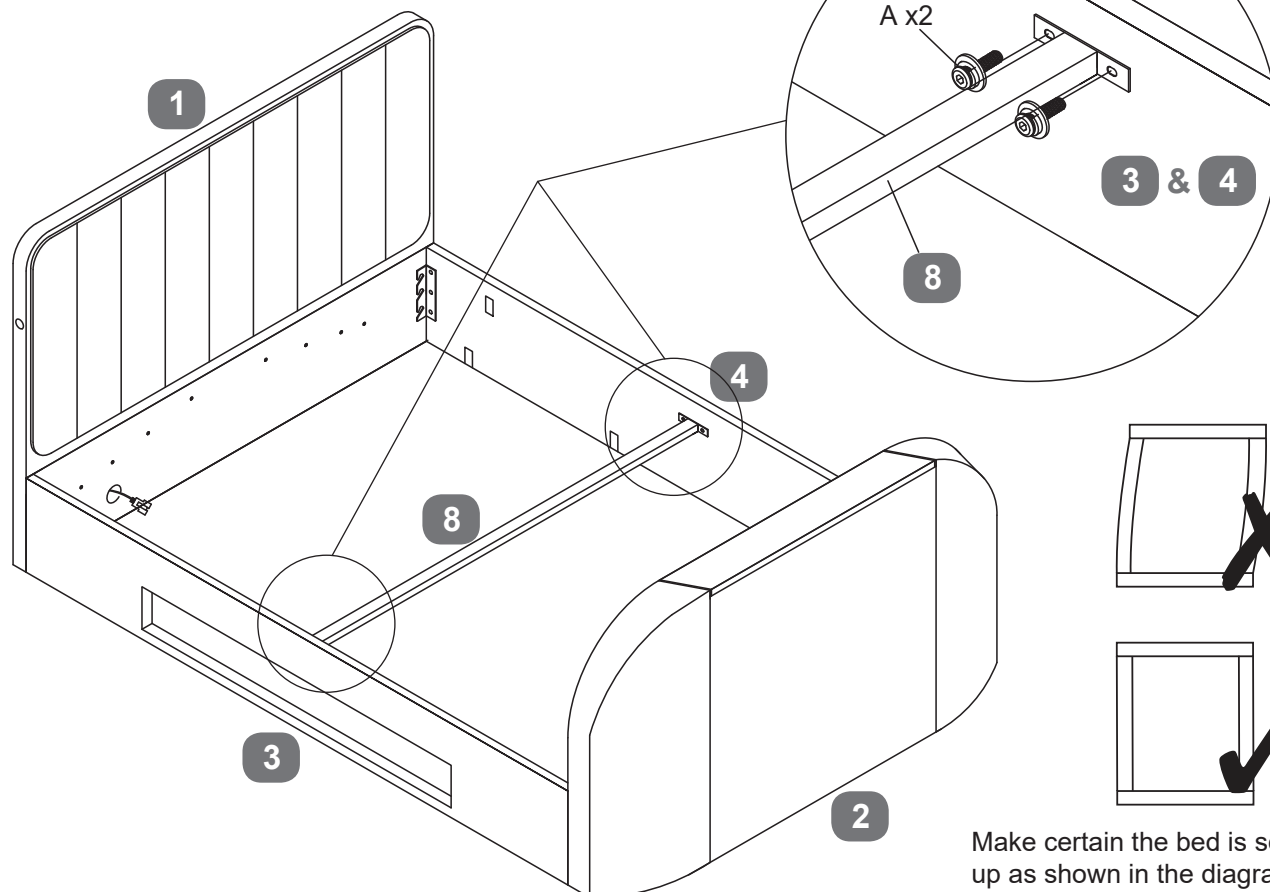


Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.


Stage
5

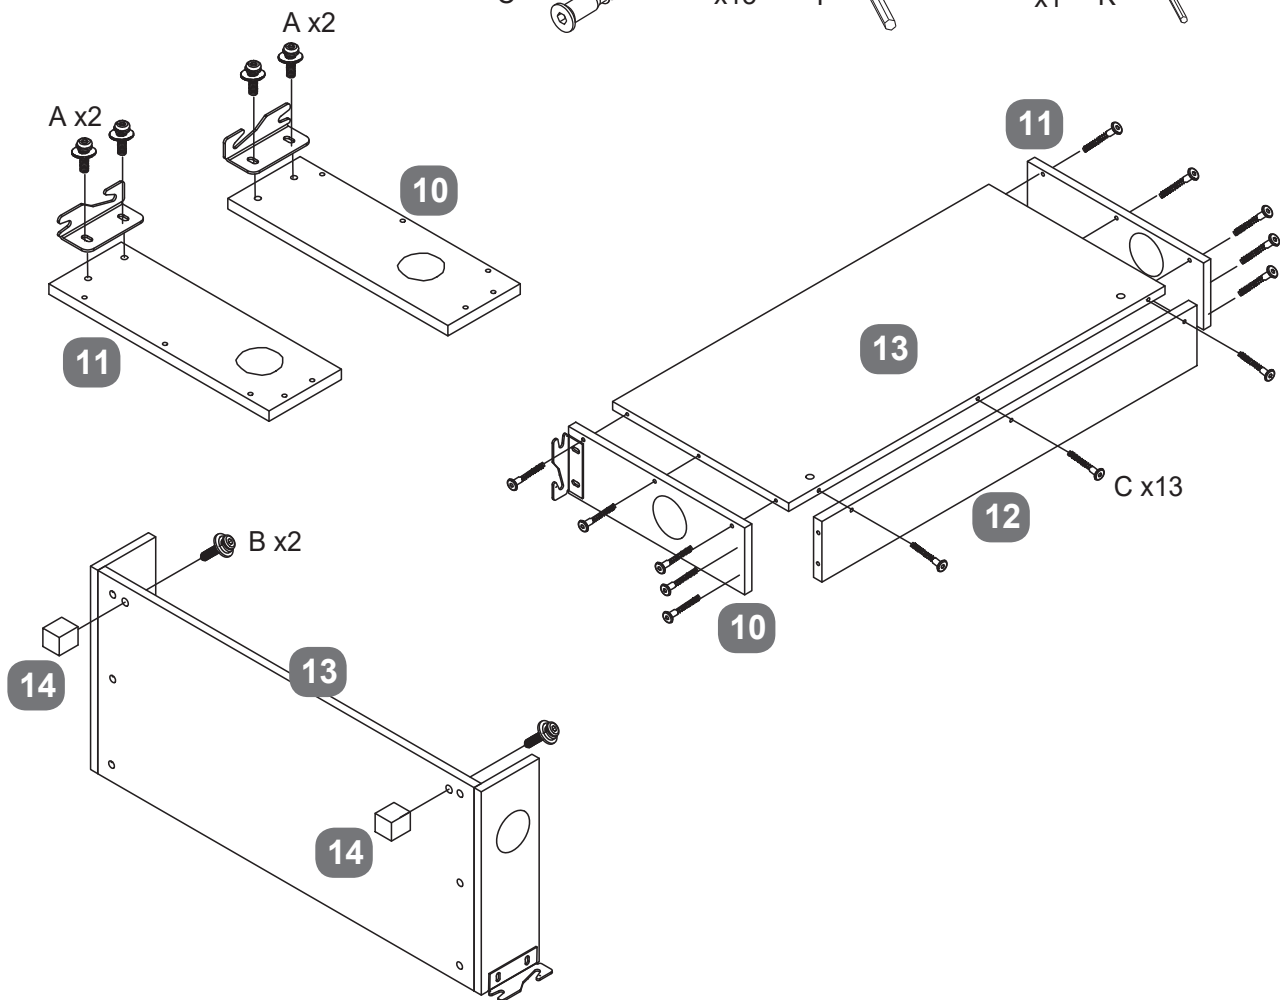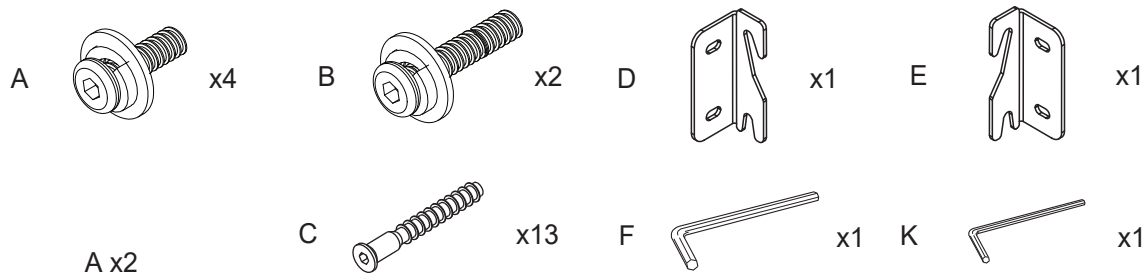


Stage
6

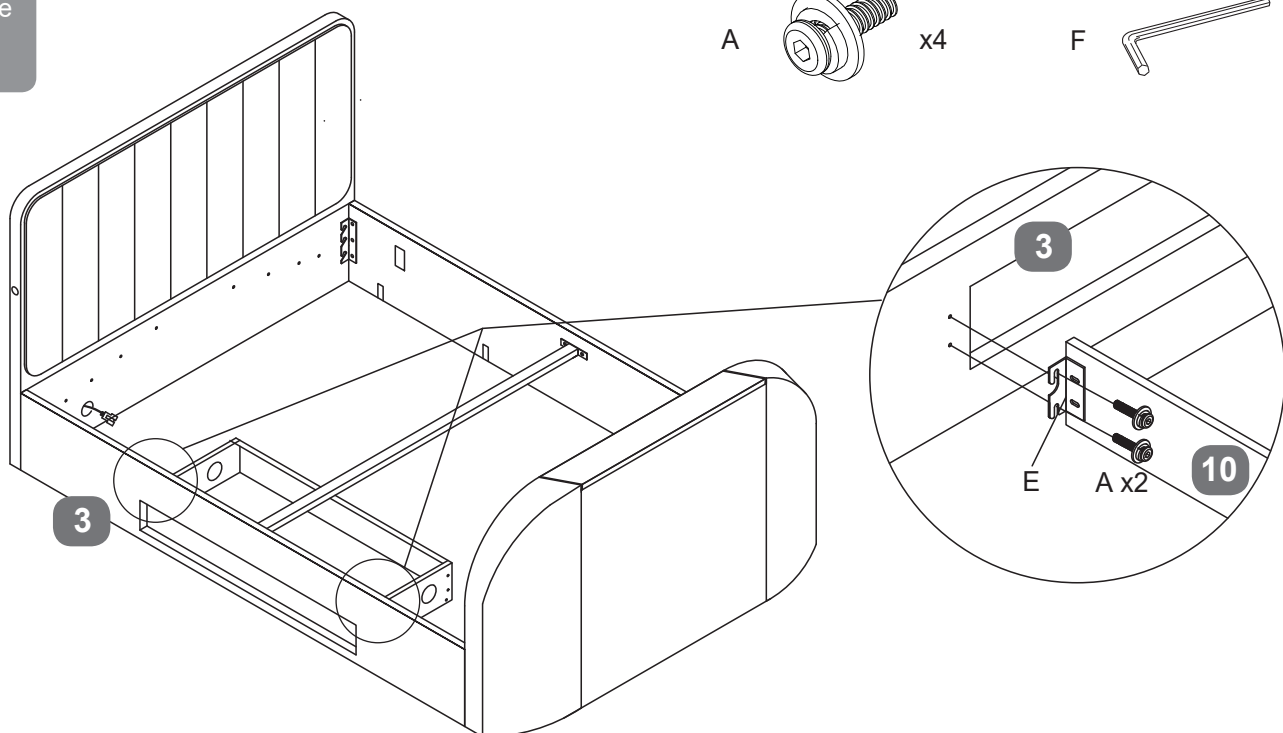


Stage
7a

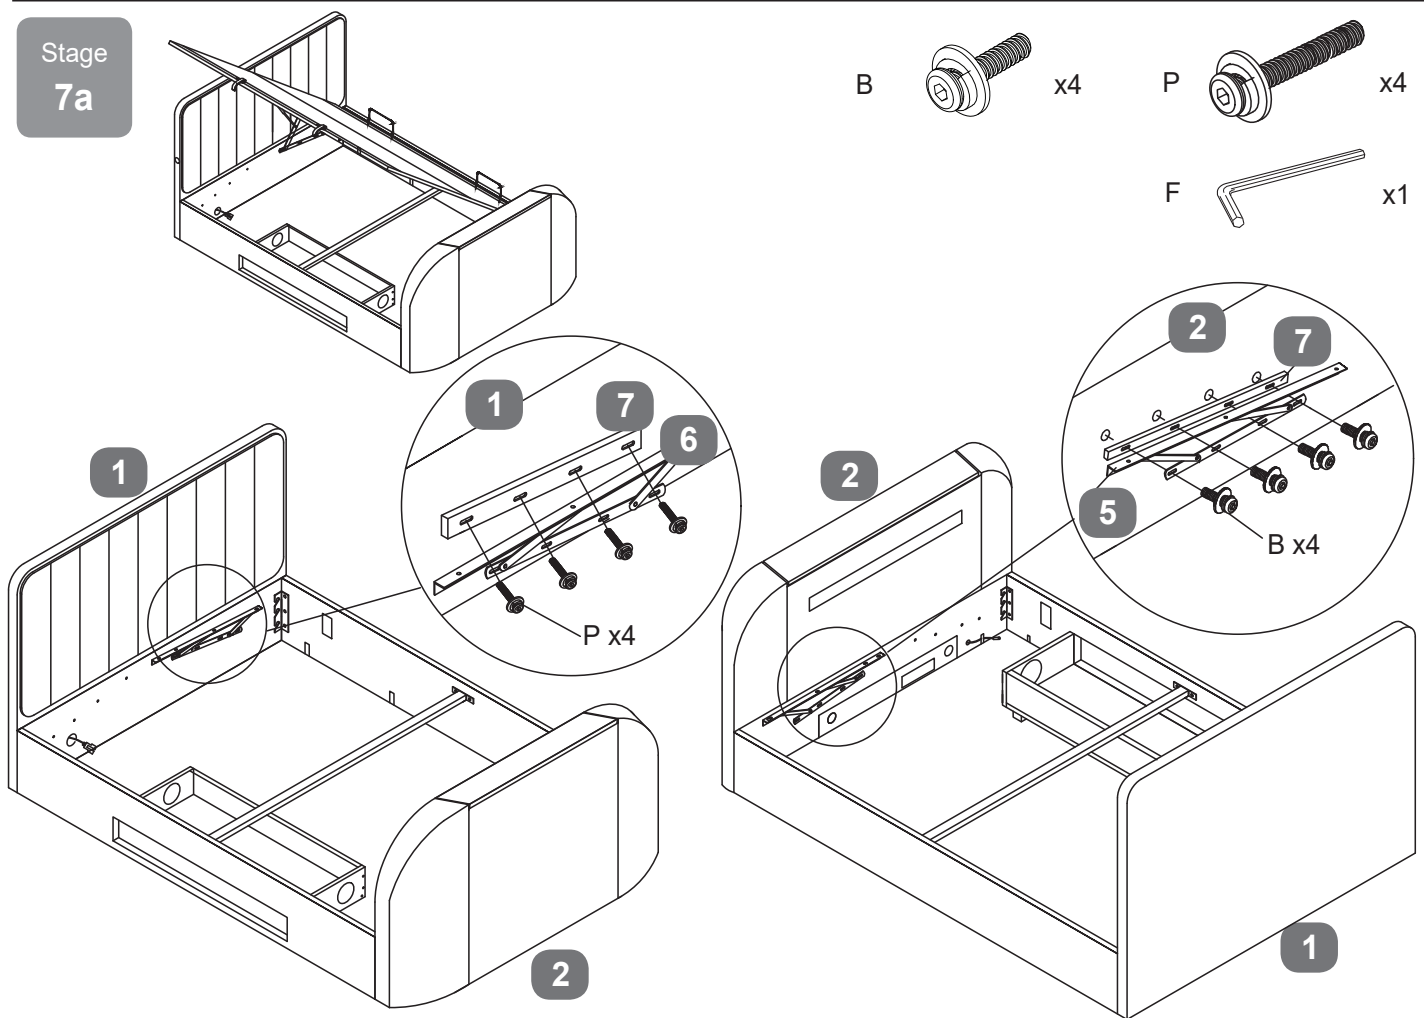

Stage
7b

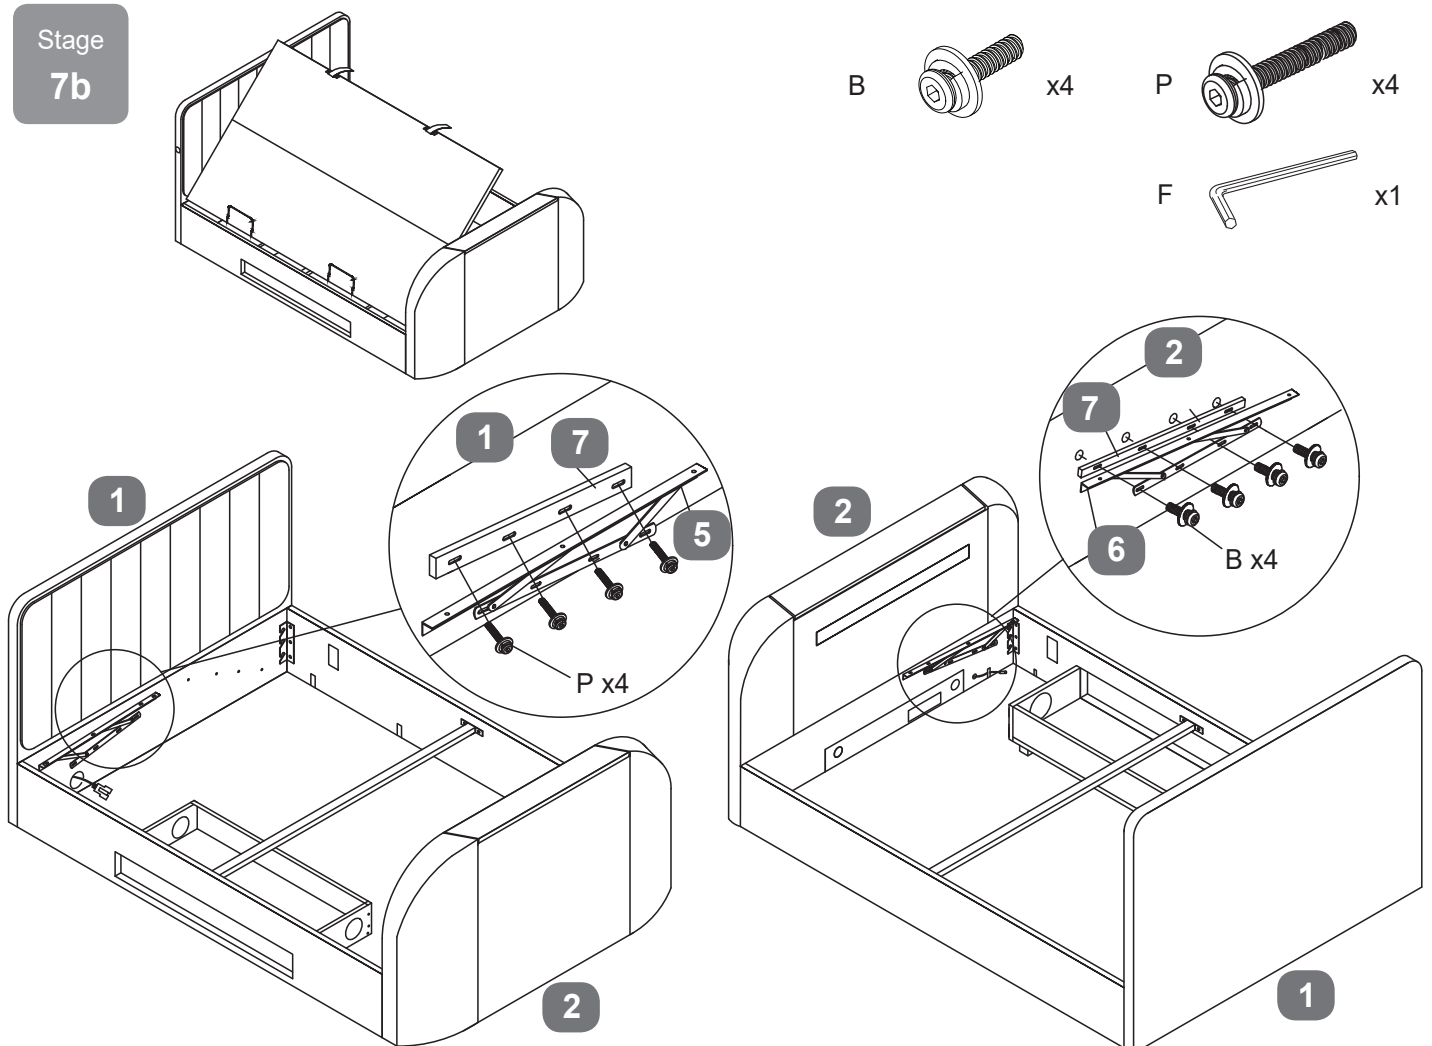


Stage
8

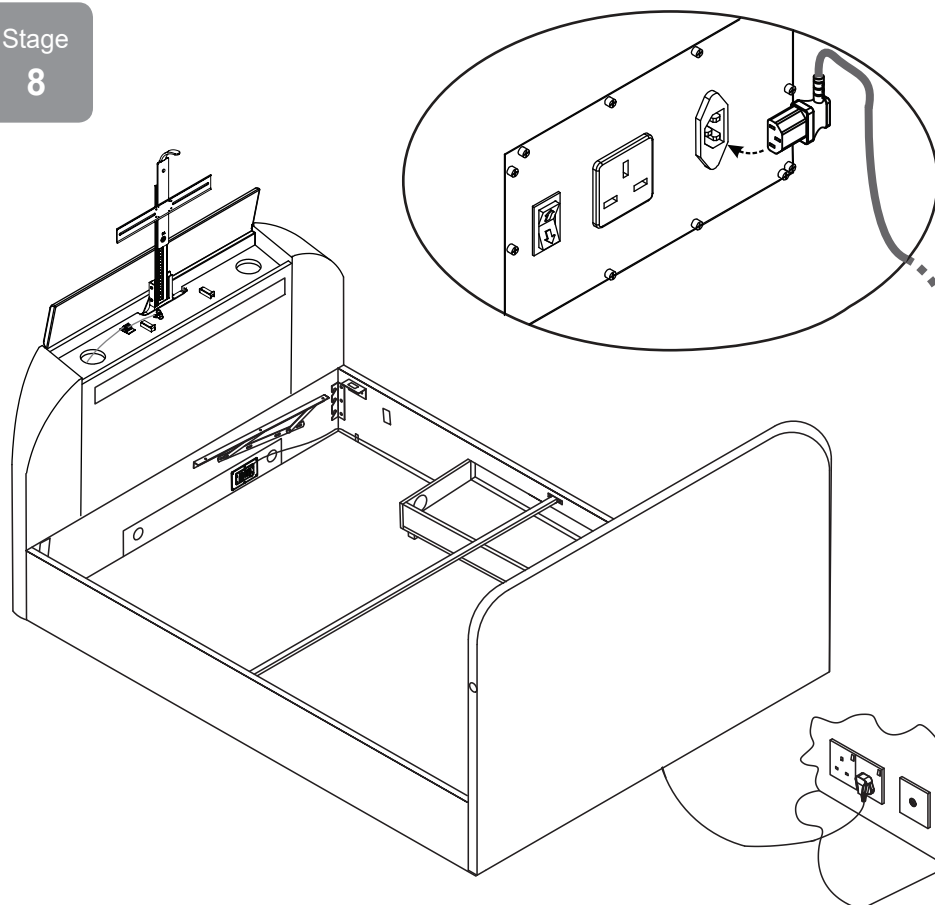

- i) Connect the mains power lead to your wall socket - for safety this must be an earthed power supply.

21

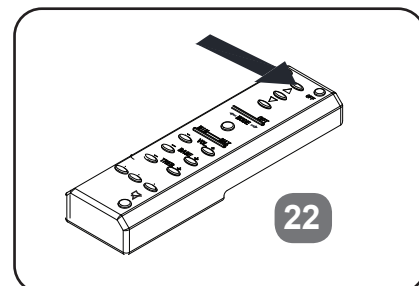

22


- ii) Press the "UP" button to raise the TV lift.

Note: For illustration purposes only, TV connections may vary.

Stage
9

Tip: Before fitting the television, push any leads through each duct from the top. Choose the best side to use depending on where the connection ports are on back of your TV. Never cross cables from one side to the other unless great care is taken to make sure no snagging occurs.

**TV power lead
supplied with
your own TV**

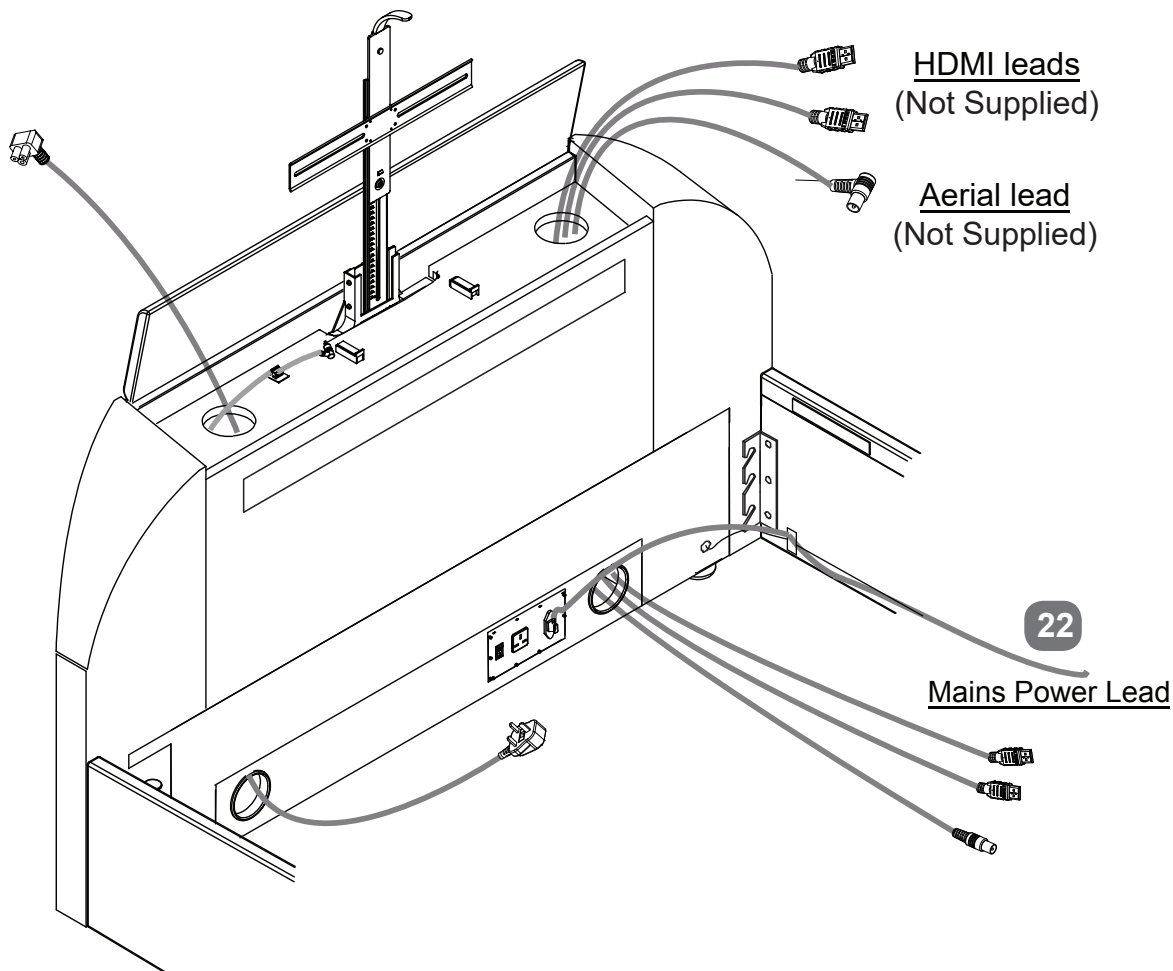


HDMI leads
(Not Supplied)

Aerial lead
(Not Supplied)


22

Mains Power Lead

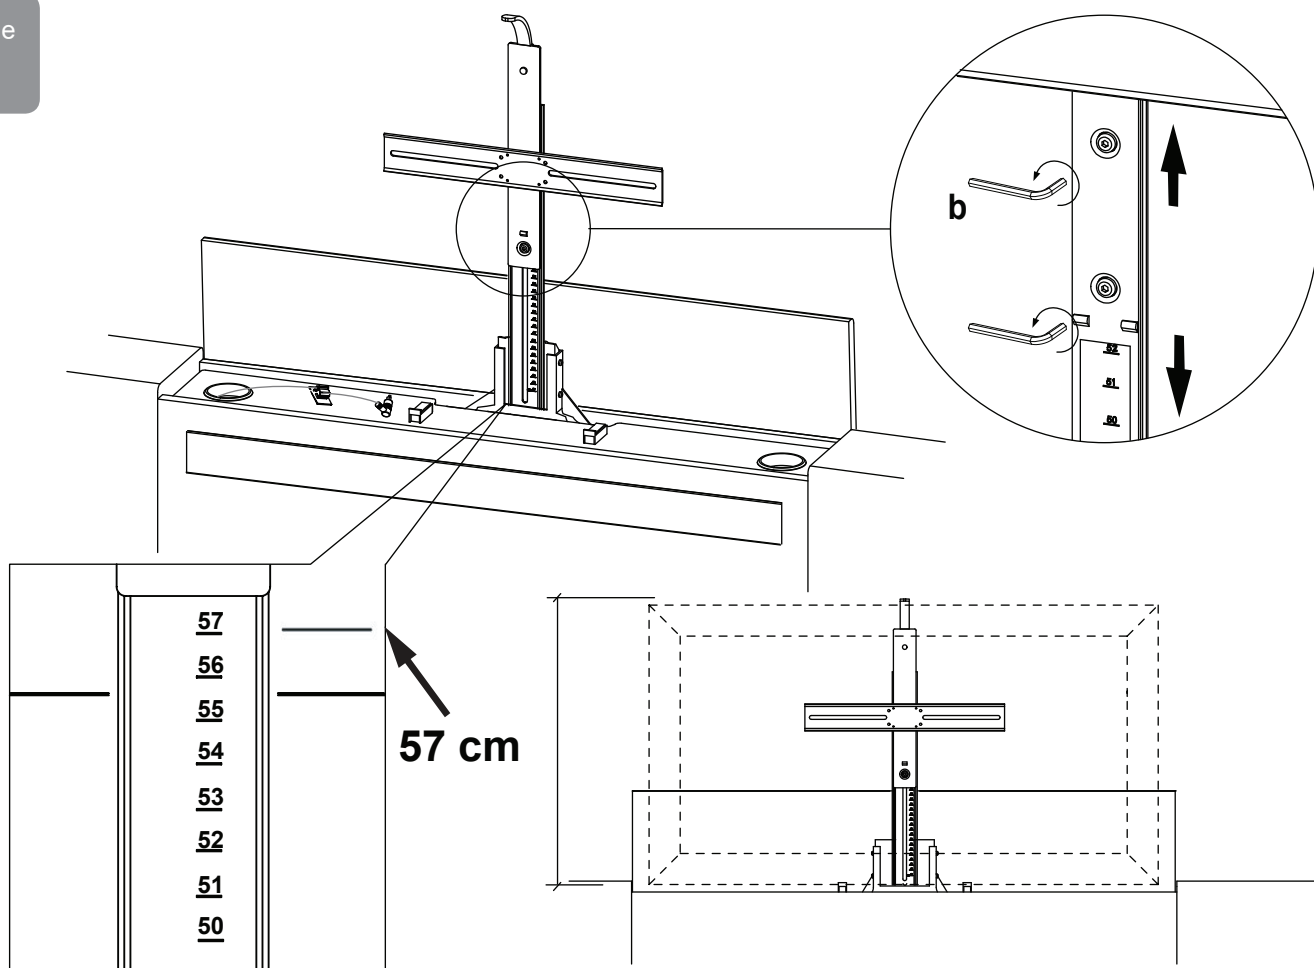


Fitting the television. Maximum TV dimensions: W98 x H57 x D8cm


IF HARDWARE IS SUPPLIED WITH THE TV, PLEASE USE THIS IN PREFERENCE TO THE TV KIT SUPPLIED.

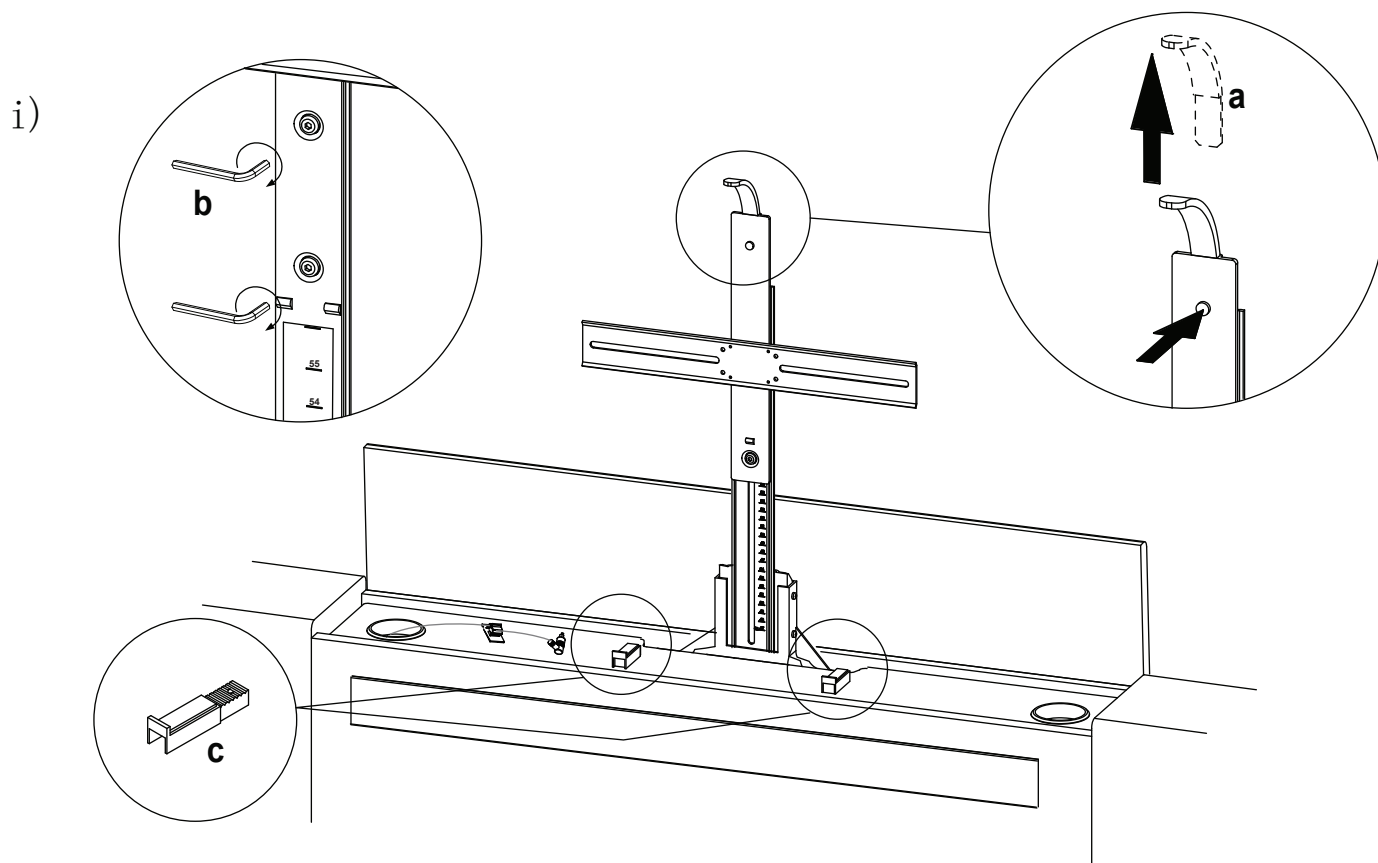

ii)

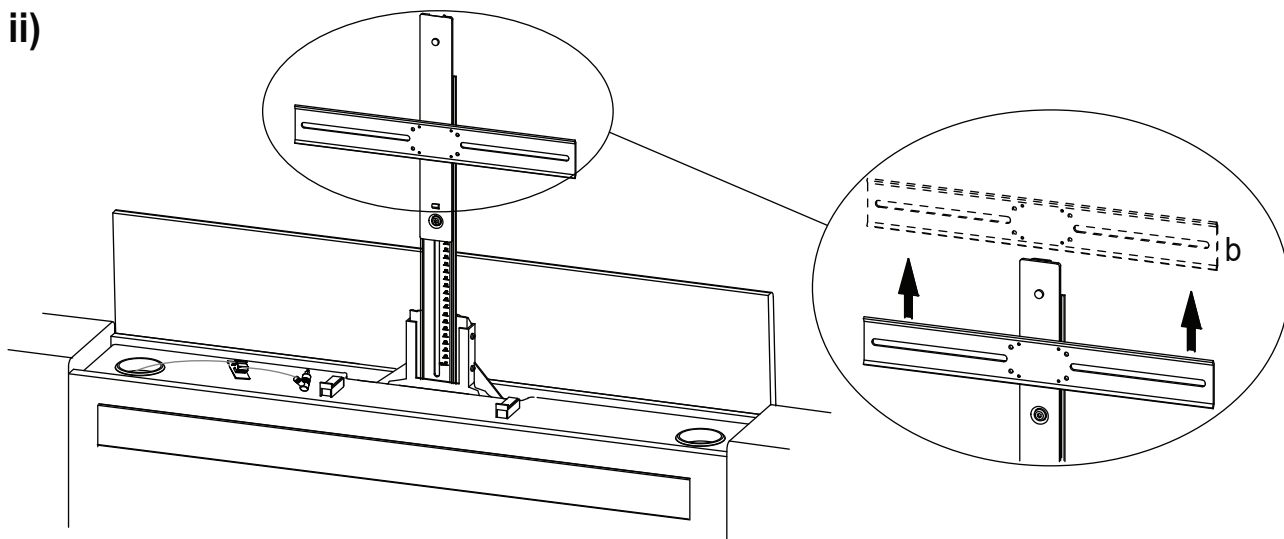


iii)

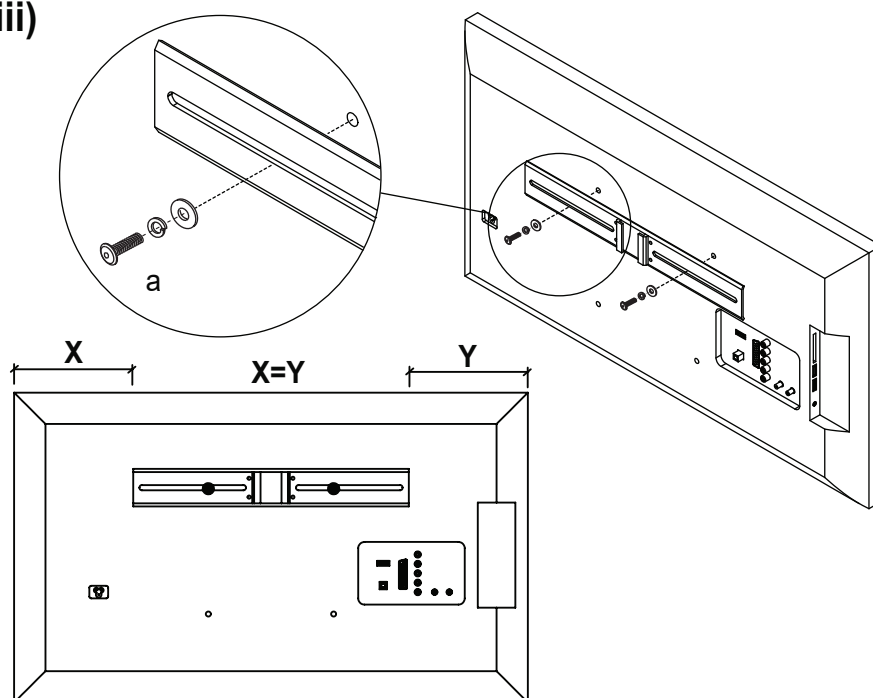


If hardware is not supplied
with the TV, choose suitable
fittings from the TV Kit

 Bolt sets
(M8 x 25mm)



 
a Countersunk screw
sets (M6x12mm).
Countersunk screw
sets (M 4 x12mm).



b Allen Key (4mm).
Allen Key (2.5mm).



iv)

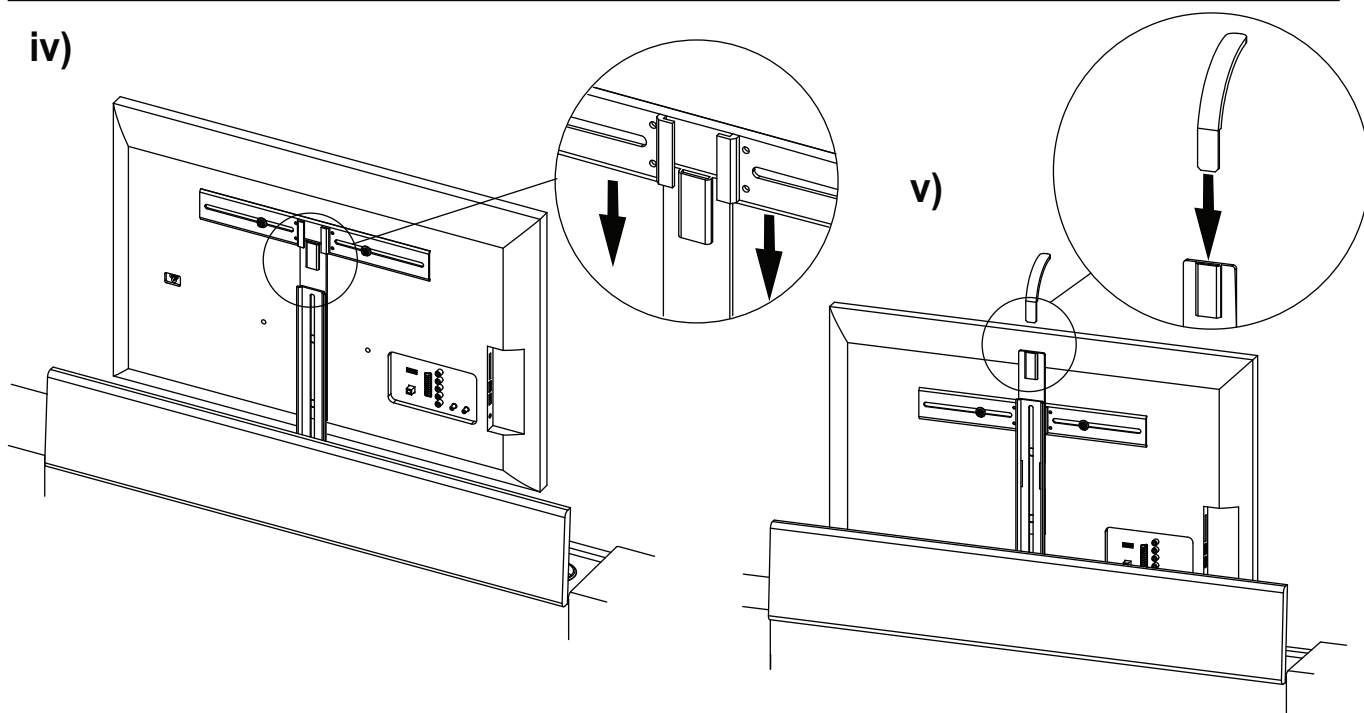


v)

Stage


12

Note: For illustration purposes only, TV connections may vary.


REMOVE DUST-CAP

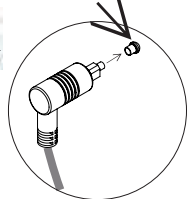


OPTICAL
SOCKET

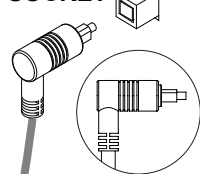


90° HDMI ADAPTOR

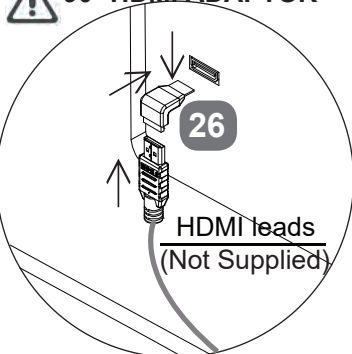


HDMI leads
(Not Supplied)

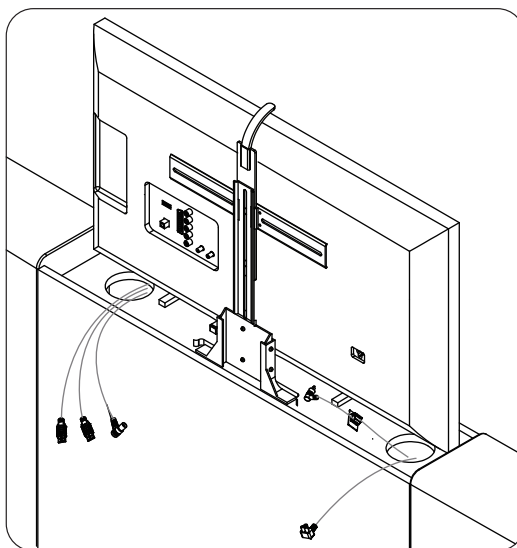


TV power lead supplied
with your own TV

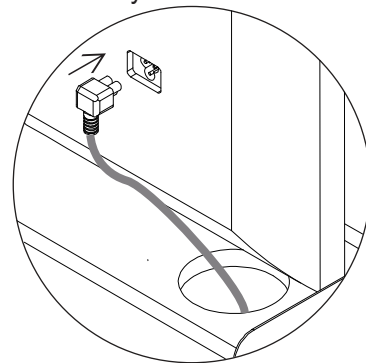


PLUG IN - KEEP ALL
CABLES TIGHT USE
CLIPS & TIES PROVIDED.

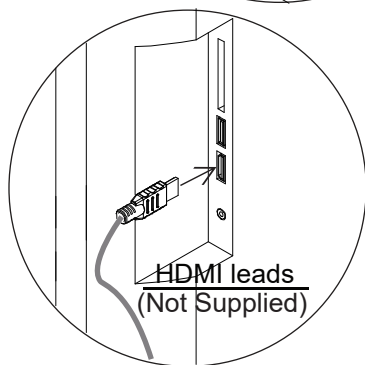


HDMI leads
(Not Supplied)

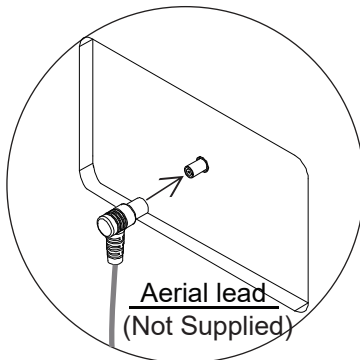

Aerial lead
(Not Supplied)


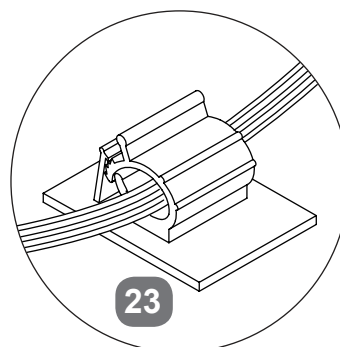


Keep wires tight - peel off
cover from cable clips &
adhere to back of TV.

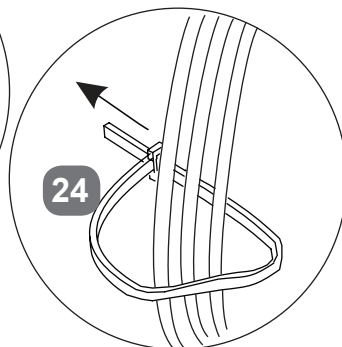


Stage


13

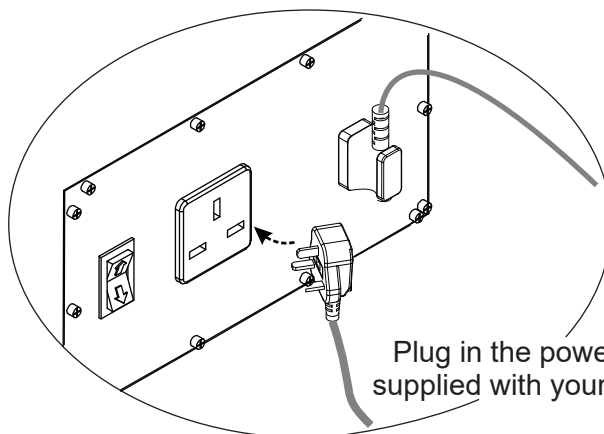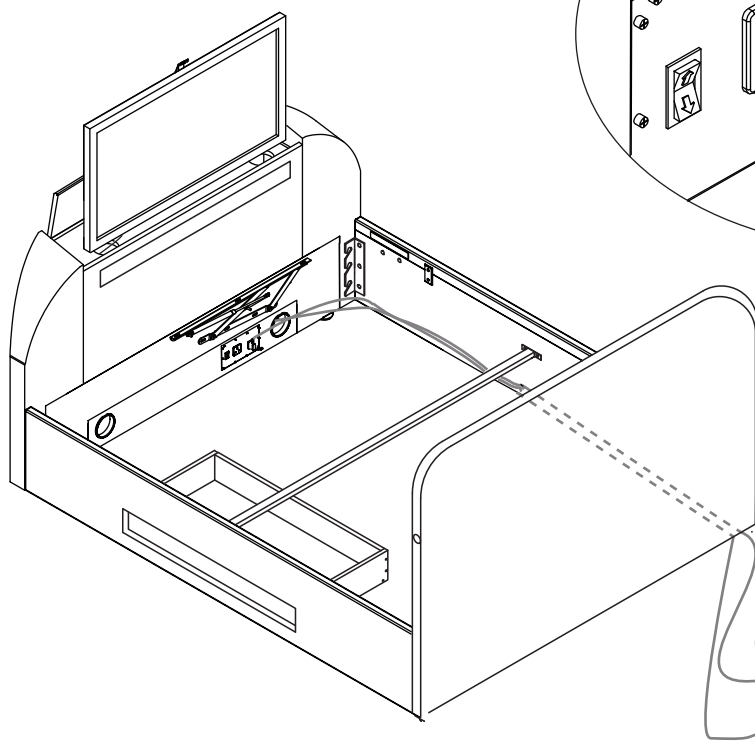


Plug in the power lead
supplied with your own TV

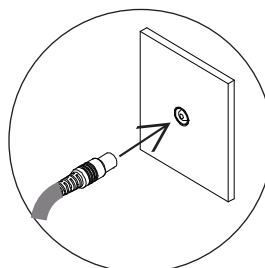


Press the "DOWN"
button to lower the
TV lift.

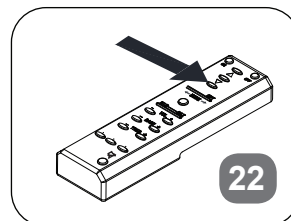


Stage
14

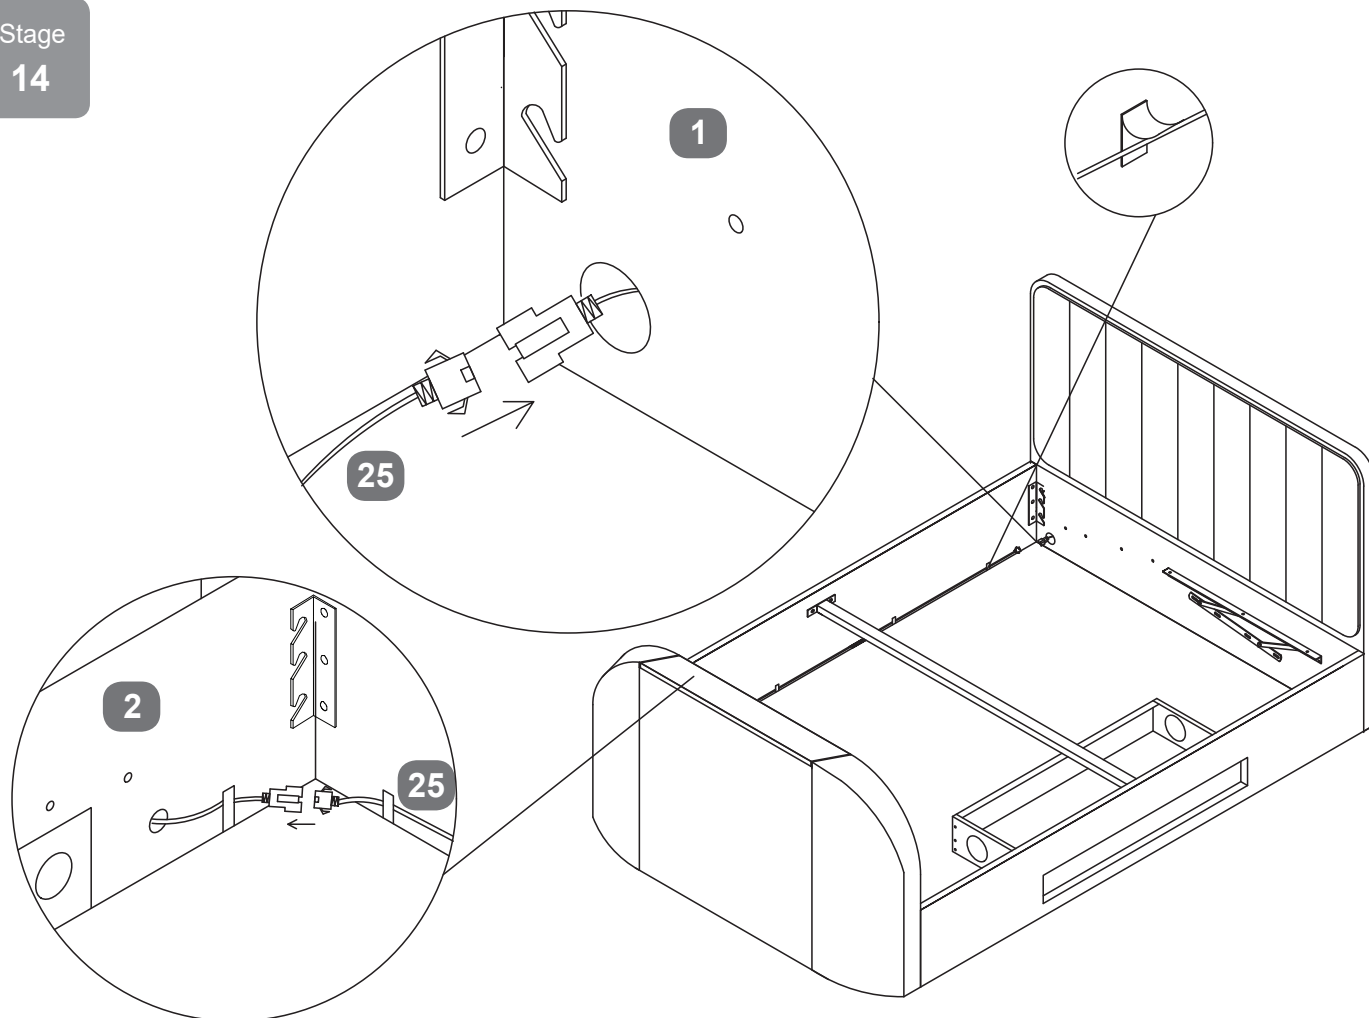


Stage
15

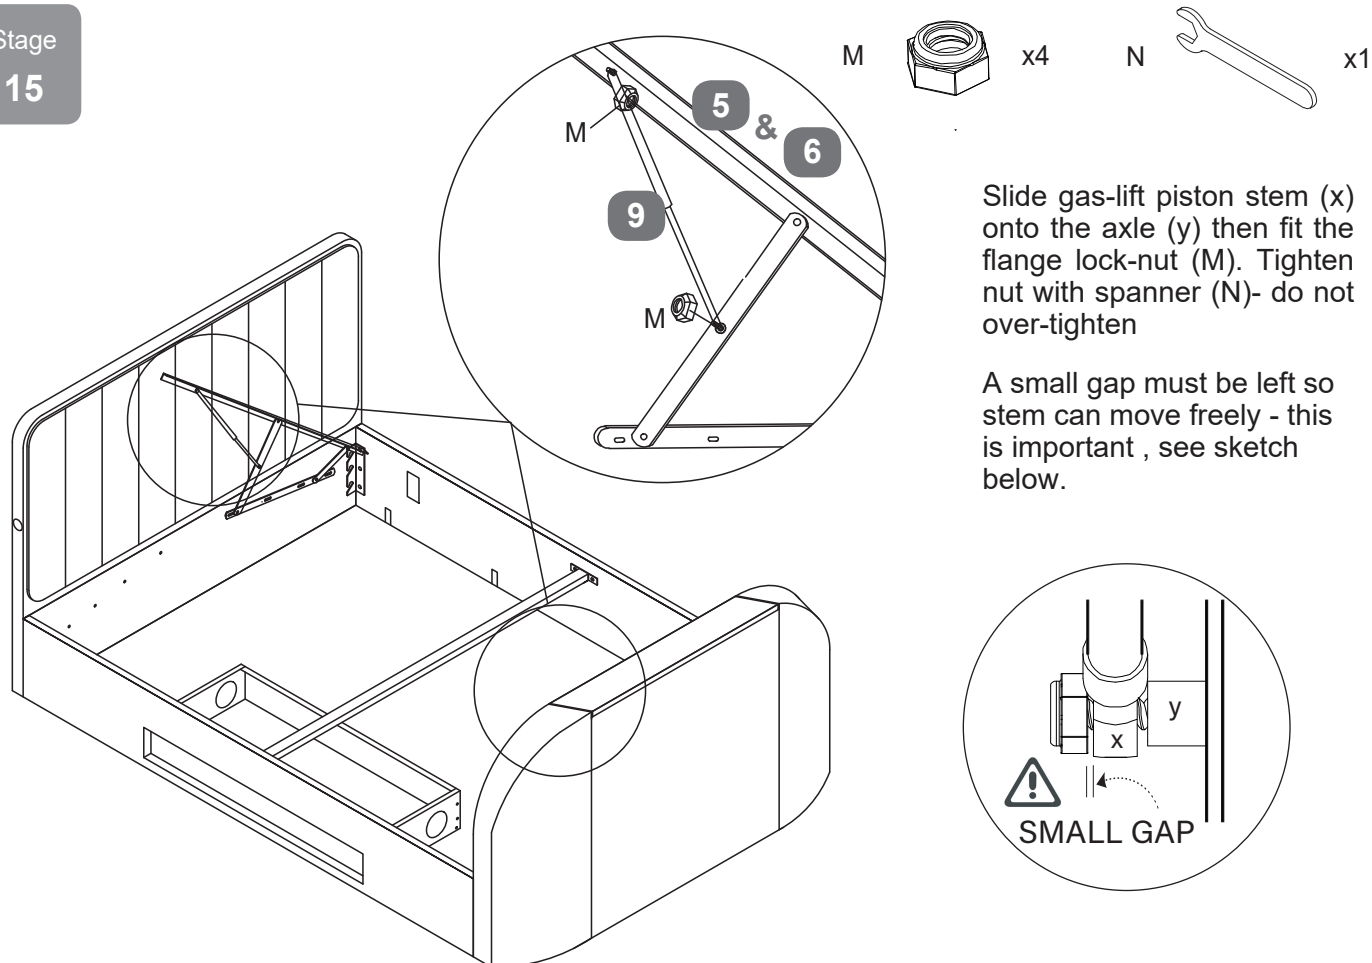


Stage
16

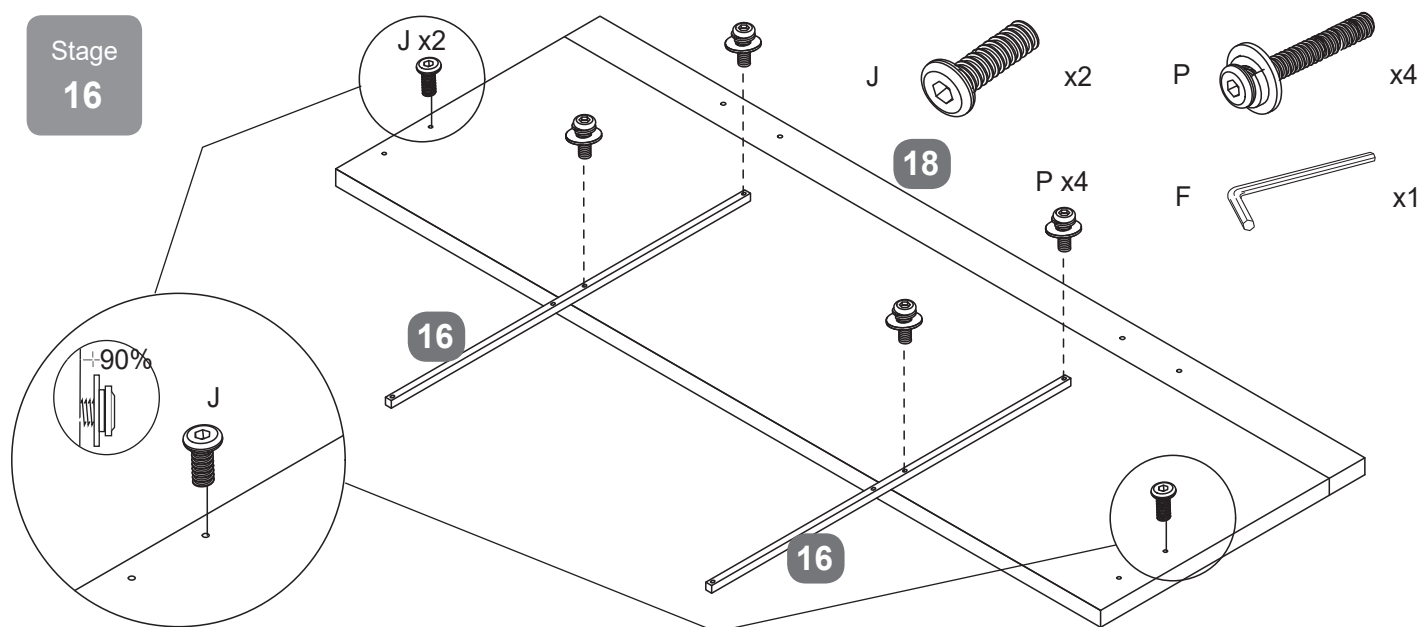

Stage
17

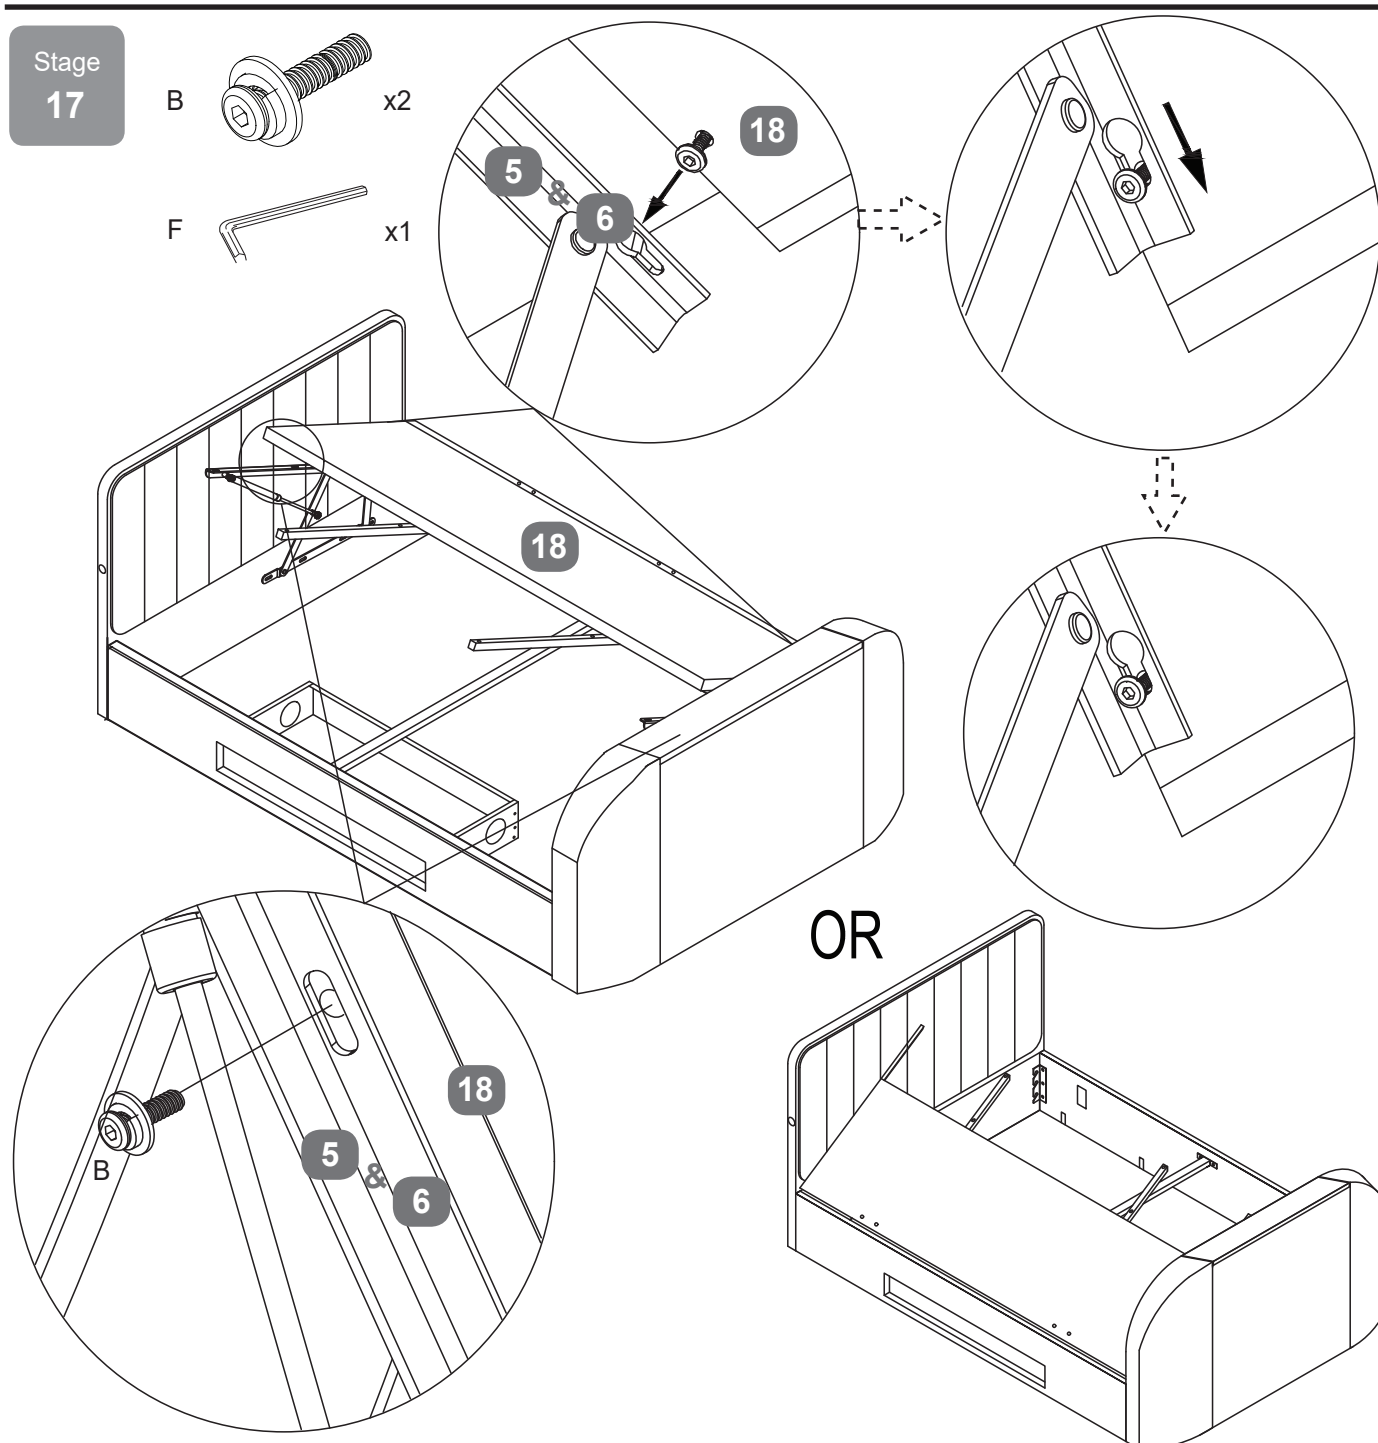


B  Double & King x2
Super King x4



 
P  x4

F  x1







Double & King

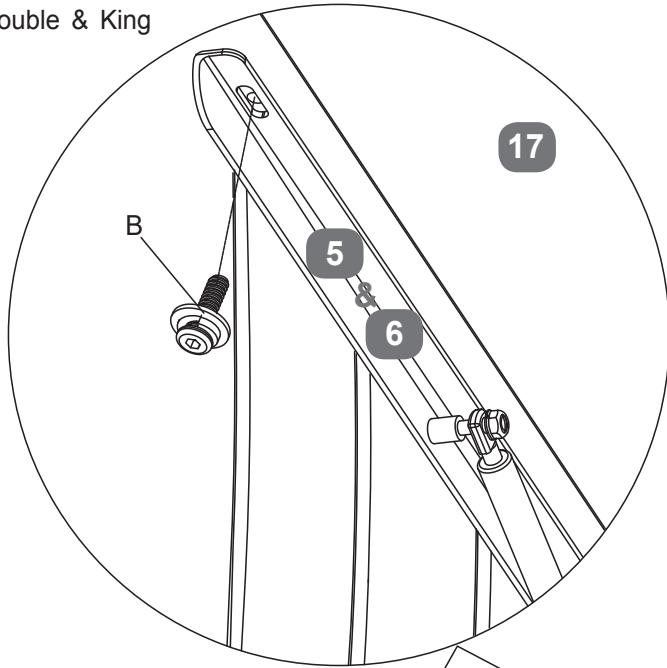

Super King

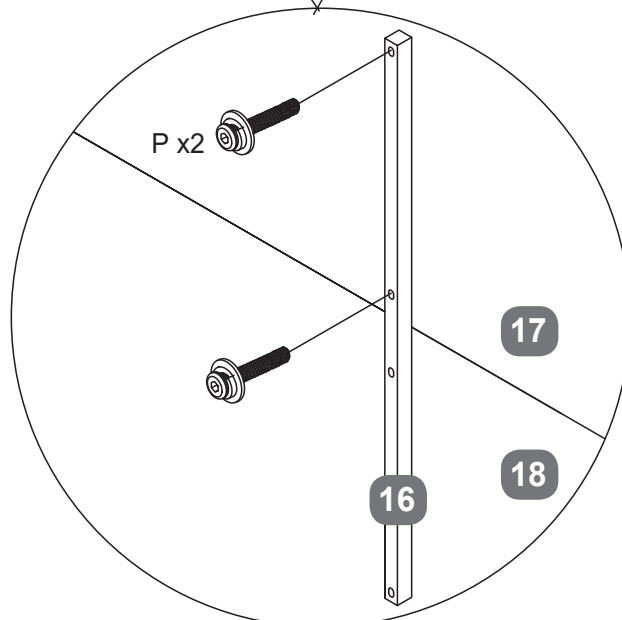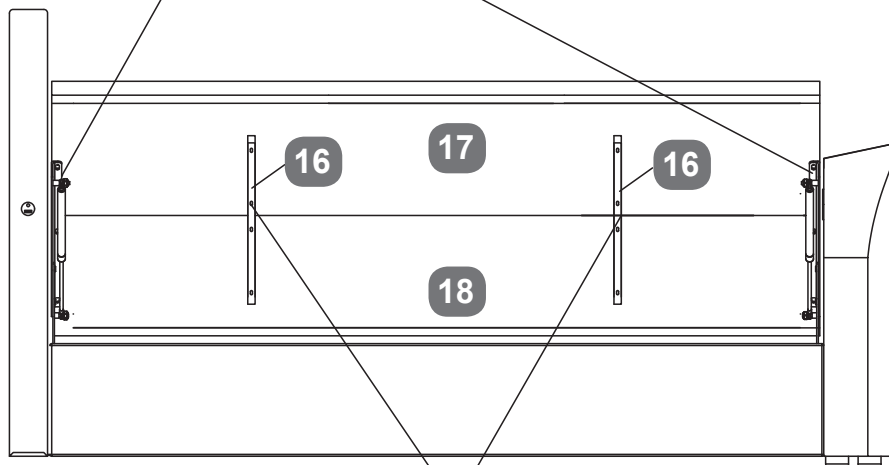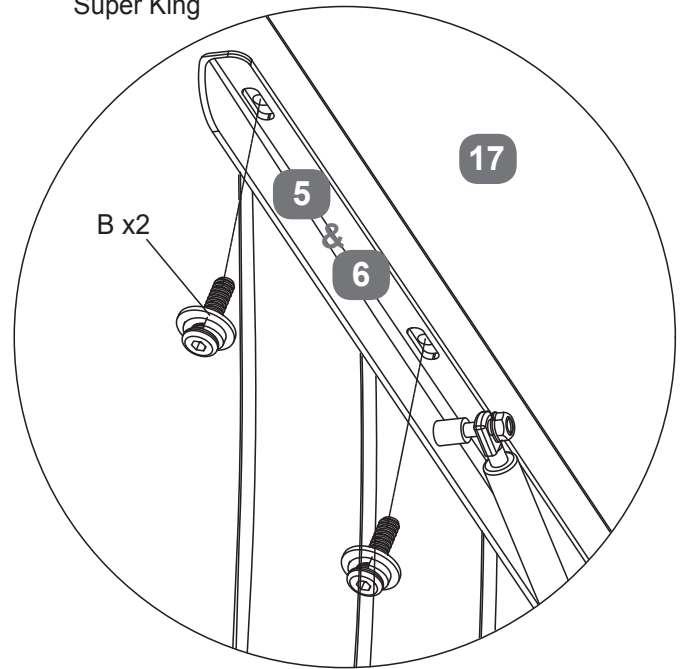

Stage
19

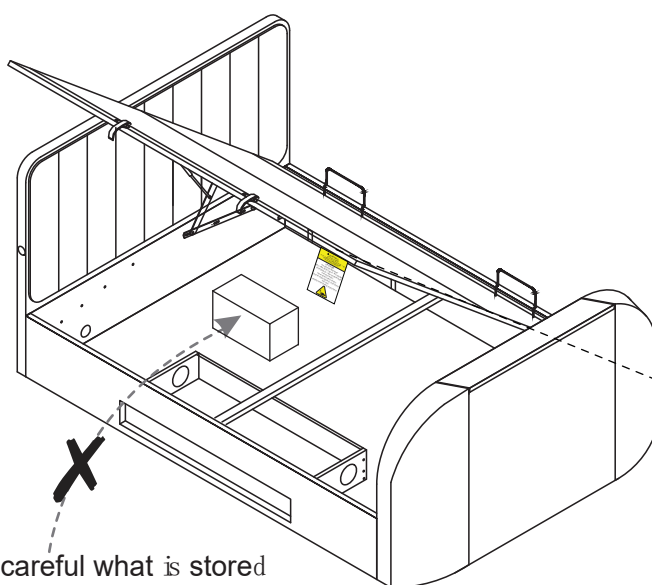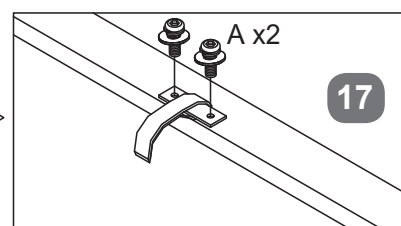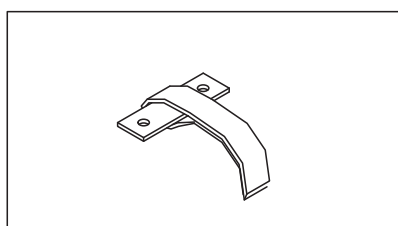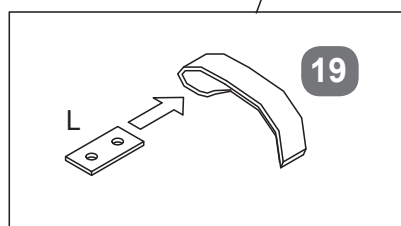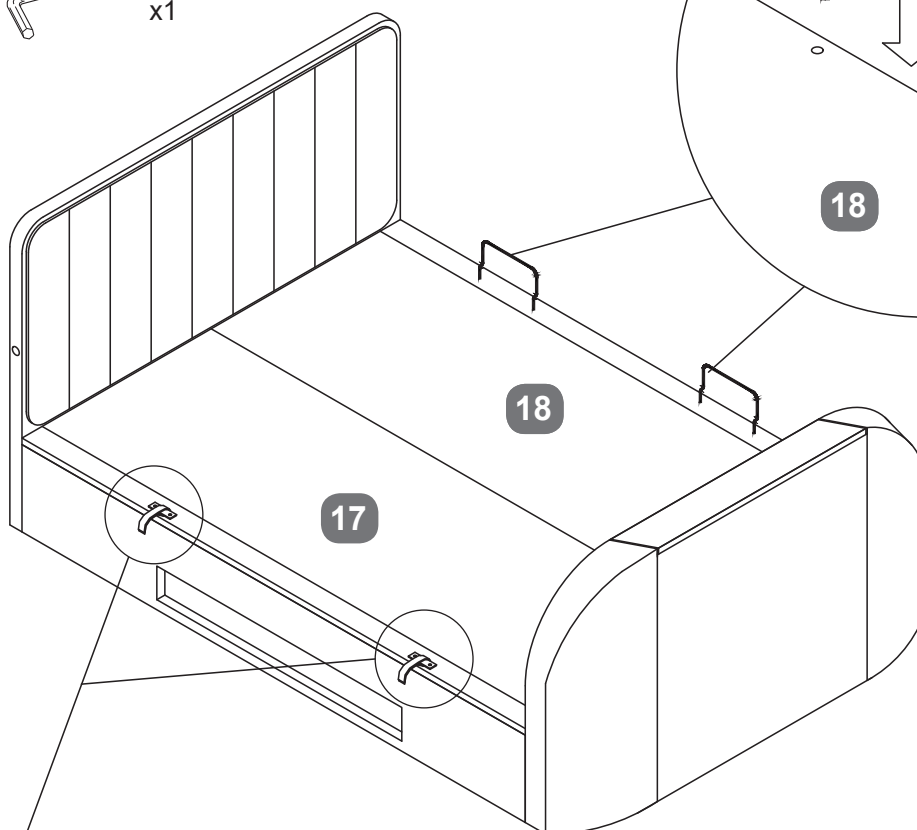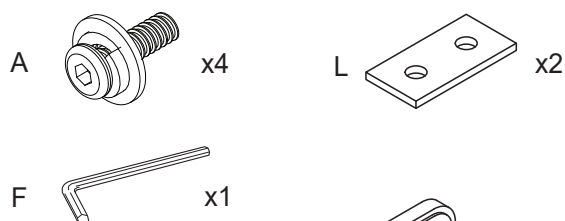


Note: Be very careful what is stored under the bed - the top of an item, like a suitcase or a box, must not touch the slats or they may be damaged.
Maximum storage height is 285mm

⚠ WARNING

TO AVOID ACCIDENTS
To access the storage area, the ottoman frame **MUST BE FULLY OPENED** and then **FULLY CLOSED** afterwards.

CAUTION

To be operated by **ADULTS ONLY**.
Keep children and pets away from the storage area.
Avoid trapping your fingers by using the handle to lift & lower the base.
Only lift when the mattress is in place.
Ensure the ottoman support bar is secure when the base is open.
Regularly air internal storage area and contents.

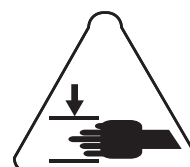

Technical Specifications

Overall Dimensions (LWH mm)


Double: 2310 x 1400 x 1250
King: 2410 x 1550 x 1250
Super King: 2410 x 1850 x 1250

Internal Dimensions (LWH mm)

Double: 1960 x 1320 x 285
King: 2060 x 1470 x 285
Super King: 2060 x 1770 x 285

Ottoman Piston Strength

Double: 900N
King: 1000N
Super King: 1200N

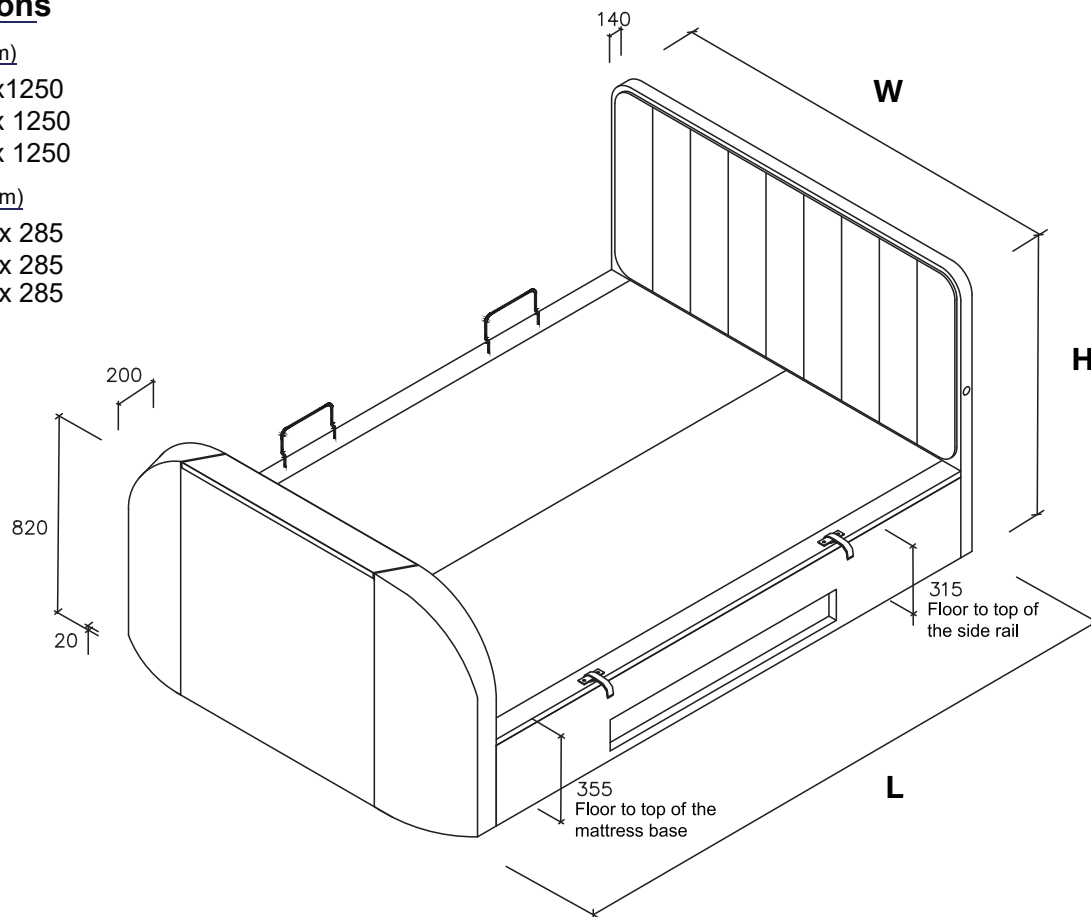

TV BED SAFETY INFORMATION



GENERAL INFORMATION

It is very important not to place any vessel containing liquids, e.g. drinks or vase of flowers, on top of the TV footboard which may accidentally spill and enter the TV compartment as this could cause damage to the TV and/or the TV lifting equipment.

If this happens, please contact your retailer.

Do not expose the bed to an undue level of heat - keep away from radiators.

Never allow anyone to sit on the foot end of the bed - keep children well away from moving parts.

To keep bed clean, we recommend that it be wiped over with a slightly dampened cloth or if fabric, use a light vacuum cleaner; disconnect power before cleaning.

Supplied with the bed is a remote control to operate the TV Lift and when you fit your own TV there is a remote control to operate it as well. Both these remotes use batteries - there are no batteries in the rest of the equipment.

There are strict controls for disposal of batteries - your local council can advise on how to safely dispose of them.

Never burn batteries on an open fire as they could explode.

IMPORTANT POWER INFORMATION

It is essential that the mains power lead is connected to an earthed socket be it a wall socket or extension lead - otherwise there is risk of damage or even electric-shock.

The socket providing the power must be accessible at all times in case you need to switch off the power quickly.

During an electrical or lightening storm - disconnect the power completely as a precaution.

Always un-plug the power when going on holiday or when the bed is not used for an extended period.

If you have young children in the home always disconnect the power at the wall socket for extra safety.

Power outlets, extension leads or adapters must not be overloaded beyond their limit - this can result in fire or electric shock. Leads supplied with this bed, or other approved mains powered extension leads used to power the equipment, must not be placed where they can be walked on - this is dangerous and could lead to accidents.

Do not interfere with or modify any cables already fitted and do not add any extra media leads unless they are routed through the ducts. All leads must be tightly connected to back of TV, never hanging loose.

Never touch moving parts or any part of the equipment - if something needs to be checked, disconnect the power first.

Do not insert anything into the footboard as this could seriously damage the TV and/or the TV lifting equipment and could, if done carelessly, cause serious damage or injury.

If the equipment doesn't operate normally or if there is any unusual noises, disconnect the power.

IMPORTANT: Care should be taken when connecting electrical items. If you are in any doubt about the connections please consult an approved electrician. If you still have a problem please contact your retailer for advice.

TELEVISION INSTALLATION

Before fixing the base boards to the bed, please follow the television installation instructions below.

Raise the TV Lift by pressing the TOP button of the remote control. Connect the TV using the hardware supplied with the TV itself or use suitable hardware from the TV Installation Kit that came with the bed.

Connect the TV to the mounting bracket plate.

If necessary mounting plate can easily be adjusted to move TV up or down.

Connect the TV Power Lead (supplied with TV) by passing plug down one of the ducts, plugging it into the adaptor if supplied, then into the TV power socket which is on the face of footboard. This socket is only to be used for the TV.

If required, connect your own media cables through either of the ducts - connect your media equipment when ready. Please use the cable clips & cable ties to make certain there are no loose wires to snag

The TV can now be operated following the TV Operation Guide supplied with your TV.

When finished viewing, lower the TV back into the footboard by pressing the DOWN button of the remote control.

The TV will retract into the footboard automatically - power shall be turned off when TV reaches the bottom.

When the UP button is pressed - the TV Lifting Column rises and power to the TV turns back on automatically.

TROUBLE SHOOTING

If your equipment does not operate please check all the power connections, to the wall and to the socket in the footboard.

Make sure TV is switched on. (Note: TV will only work when it is in the up position).

If the television or TV Lift still fails to operate contact your retailer.

IMPORTANT: Care should be taken when connecting electrical items. If in any doubt please consult an approved electrician to advise you on the electrical supply to achieve safe connections, to the electrical equipment of the TV Bed.

Product Information

- Upholstered Bed Using Polyester Fabric. Conforms to BS EN 1725 & BS 5852.
- TV Lift system has a maximum load capacity of 14 Kg
- Compatible with slimline LED television with a screen size of 42".
- Maximum TV dimensions: W98 x H57 x D8cm

Care Instructions

- Avoid exposing the furniture to excessive heat or direct sunlight as this can cause cracking and deterioration of the colour.
- Periodically check & re-tighten any fastener.
- Periodically wipe with a soft damp cloth or if fabric, dust lightly using a small vacuum cleaner..
- Do not use silicone based furniture polish.
- Any spills should be removed immediately with a soft damp cloth.
- TAKE CARE WHEN MOVING THE FURNITURE AND NEVER DRAG THE PIECES ACROSS THE FLOOR, AS THIS WILL CAUSE DAMAGE TO THE JOINTS.

 We cannot be held responsible for any damage caused to the TV, TV cabling or the TV Bed itself due to incompatibility of any additional equipment installed by the end-user or due to loose and poorly installed cables. Please read this Assembly Instruction carefully and follow the recommendations.



TV LIFT REF: LC V3 CONFORMS TO ALL STANDARDS FOR USE IN THE UK