

Instructions by Time4Sleep Products



## Lyon Upholstered Oak Bed Frame - LFE

Assembly instructions for Lyon Upholstered Oak Bed Frame - LFE  
by Time4Sleep

### Product Information


## Lyon Upholstered Oak Bed Frame - LFE

### Description

The Lyon low foot end bed is a beautiful French inspired frame which combines the beauty of weathered oak. Available in a wide range of colour options the Lyon is shown here is upholstered in Opulence Armour fabric to create a design that is elegant and sophisticated. Each frame is carefully crafted with gentle curves and subtle design detailing that gives the bed a luxurious and opulent feel.

Classically styled, the bed will work equally well in either a traditional or more contemporary interior. The Lyon features a traditional wooden slatted base system which helps to support your mattress and ensure you have a better nights sleep.

The underbed clearance on this bed frame is 26cm approx.

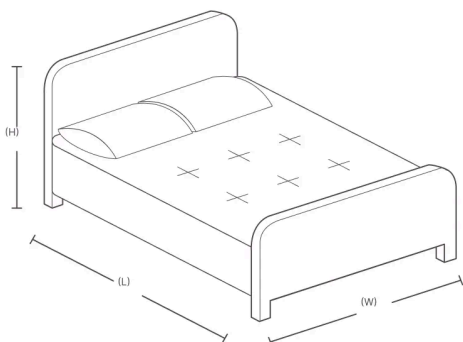

### Product specifications

	Double	King Size	Super King
Width	147 cm	161 cm	191 cm
Length	214 cm	224 cm	224 cm







Head End Height	120 cm	120 cm	120 cm
Foot End Height	40 cm	40 cm	40 cm


SKU

LYON46EDSELBED, LYON46HUPOLBED, LYON46HUWELBED, LYON460BOIVLBED, LYON460HUROLBED, LYON460KIIVLBED, LYON460OPARLBED, LYON460OPTELBED, LYON460ARNALBED, LYON50EDSELBED, LYON50HUPOLBED, LYON50HUWELBED, LYON500BOIVLBED, LYON500HUROLBED, LYON500KIIVLBED, LYON500OPARLBED, LYON500OPTELBED, LYON500ARNALBED, LYON60LILILBED, LYON60EDSELBED and 8 more

Tools


H1 Screws 8		H2 Screw 1	
H3 Screws 6		H4 Allen Key 1	

Parts

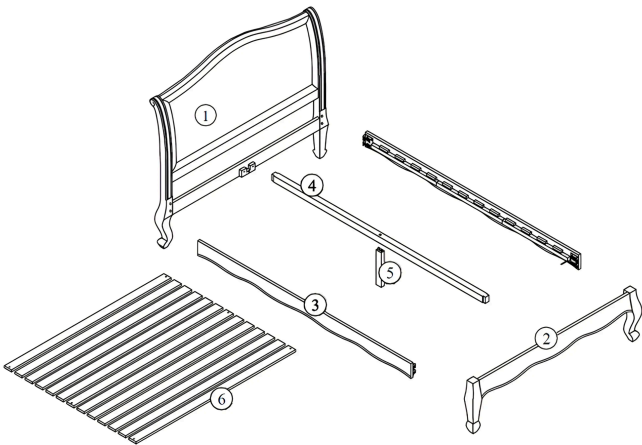


- 1 Headboard
- 2 Footboard
- 3 Side Rails
- 4 Center Support Beam

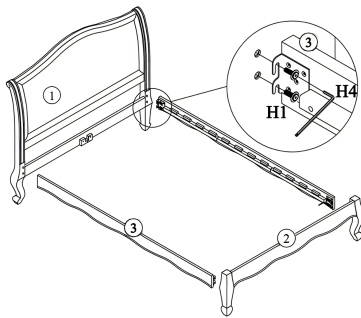

**5 Center Support Leg****6 Slats****Steps (4)****1. Attach the Side Rails****Attach the Side Rails to the Headboard and Footboard**


1. Position the side rails (3) between the headboard (1) and footboard (2).
2. Align the brackets on the side rails with the mounting points on the headboard and footboard.
3. Secure the side rails using screws (H1) and tighten them with the Allen key (H4), as shown in the close-up detail.

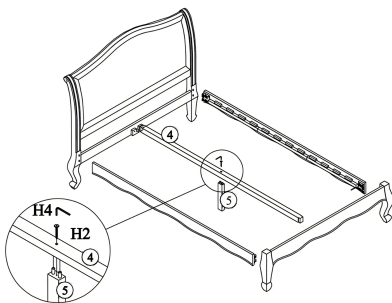**2. Center Support Beam****Install the Center Support Beam**

1. Place the center support beam (4) across the middle section of the bed frame.
2. Attach the center leg (5) to the bottom of the support beam.
3. Secure the center leg (5) using screw (H2) and tighten it with the Allen key (H4) as shown in the close-up detail.




### 3. Slats

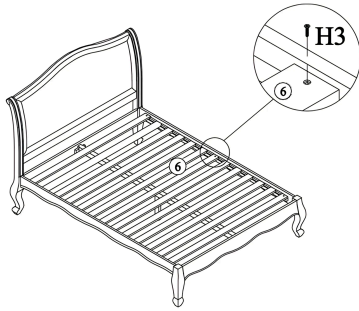

#### Install the Slats

1. Lay out all the slats (6) evenly across the bed frame, ensuring they are aligned properly with the side rails and center support.
2. Using the H3 screws, fasten the six slats with pre-drilled holes to the side rails.
3. Check that the attached slats provide adequate support and stability for the mattress.

### 4. Final Check

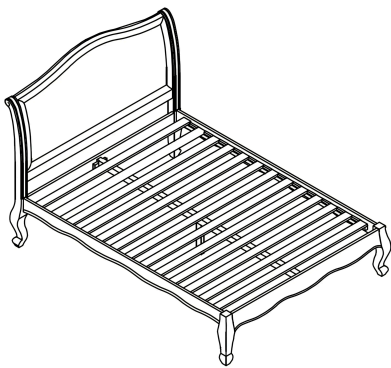

- Verify that all slats are securely fastened and evenly spaced.
- Check for any loose connections and tighten the screws if necessary.

Need Help? Call 01484 500 560 or email [hello@time4sleep.co.uk](mailto:hello@time4sleep.co.uk) - please include your order number if you have one!

