

Instructions by Time4Sleep Products

Malvern 3 Drawer Wooden Double Bed With Trundle

Assembly instructions for Malvern 3 Drawer Wooden Double Bed With Trundle by Time4Sleep.




Product Information

Malvern 3 Drawer Wooden Double Bed With Trundle

Description

Create a space saving bedroom with the Malvern Oak Finish Trundle & Drawers! This stylish design features a beautiful oak finish that warms any room. Its rubberwood frame ensures both style and durability. A pull-out trundle with built-in drawers offers a convenient guest bed solution and additional storage space for clothes, bedding, or toys. This space-saving and versatile bed is perfect for guest rooms, children's rooms, or anywhere you need extra sleeping and storage options. The underbed will accommodate a mattress with a maximum height of 15cm.

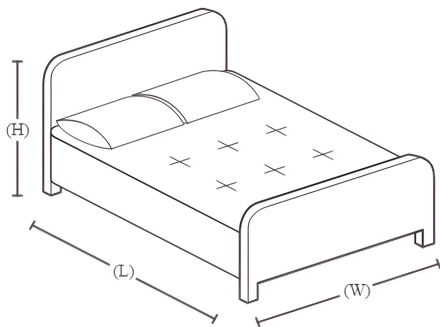

Product specifications

	Double
Width	149 cm
Length	202.5 cm
Height	102.5 cm
Foot End Height	61 cm



SKU

Mal46OakGB, Mal46WhiteGB

Assembly Tips

Remove hardware from box and sort by size to check that all hardware and parts are present before assembling. Follow instructions below in the proper sequence to ensure fast, easy and correct assembly.

Warning

Do not fully tighten all bolts until all parts are in place.

Failure to follow this instruction may cause the bolts to be misaligned during the assembly

Note: During assembly, do not tighten any screws until the complete unit has been assembled.

Before you start

Thank you for purchasing this quality product. Be sure to check all packed material carefully for small parts which may have come loose inside the carton during shipment. Place all parts on a clean , smooth surface such as a rug or carpet to avoid scratching the parts. Be sure you have all the parts and hardware before you begin assembly.

Tools

1 - JCBC (M6 x 70mm)(for bed)

8



2 - Barrel Nut (M6 x 15mm)(for bed)

5



3 - Wood Dowel (M10 x 30mm)(for bed)

4



4 - Center Rail Bracket (for bed)

2



5 - CSK (M4 x 16mm)(for bed)

8



6 - CSK (M4 x 25mm)(for bed)

26



7 - M4 Allen Key (for bed)

1



1 - Caster (for underbed)

4



2 - CSK (M3.5 x 16mm)(for underbed)

22



3 - JCBC (M6 x 35mm)(for underbed)

16



4 - CSK (M4 x 25mm)(for underbed)

34



5 - Minifix Housing (Short)(for underbed)

18



6 - Connecting Bolt (for underbed)

18



7 - M4 Allen Key (for underbed)

1



Phillips Screwdriver (not supplied)

1

Parts

A - Headboard

1 piece(s)



B - Footboard

1 piece(s)



C - Side Rail

2 piece(s)



D - Center Rail

1 piece(s)



E - Set of Slats

1 piece(s)



F - Front Panel

1 piece(s)



G - Back Panel

1 piece(s)



H - Side Panel

2 piece(s)



I - Bottom Support Center

2 piece(s)



J - Center Support

1 piece(s)



K - Drawer Front Panel

3 piece(s)



L - Drawer Side Panel

6 piece(s)



M - Drawer Back Panel

3 piece(s)



N - Drawer Bottom Panel

3 piece(s)



O - Drawer Support

3 piece(s)



P - Set of Slats


1 piece(s)



Steps (15)




1. Assemble Bed Frame

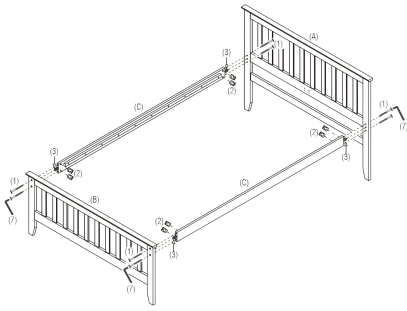


1. Position the Headboard (A) and Footboard (B) upright.
2. Insert Wood Dowels (3) to the Side Rails (C) and attach them to the headboard and footboard.
3. Insert JCBC Bolt (1) through the aligned holes as shown on the diagram.
4. Fasten with a Barrel Nut (2).
5. Use the M4 Allen Key (7) to fully tighten the bolts.

2. Attach Center Rail Bracket

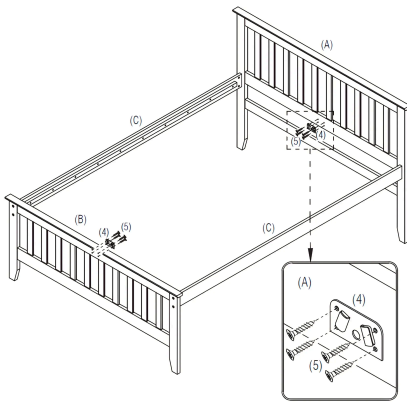

1. Place the Center Rail Bracket on the Headboard (A) and Footboard (B) as showed on the diagram.
2. Attach with CSK Screws (5).
3. Tighten with screwdriver.


3. Install the Center Rail

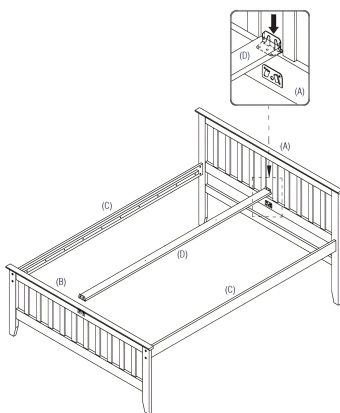

1. Position the Center Rail (D) between the headboard and footboard.
2. Attach as shown in the diagram.
3. Ensure all parts are properly aligned.




4. Attach Slats to Bed

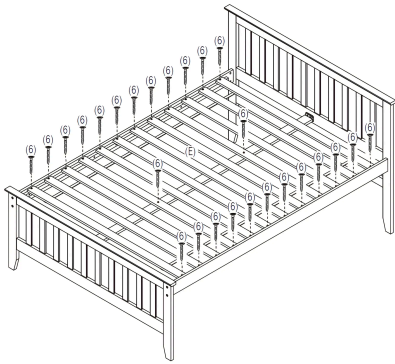


1. Place the Bed Slats (E) across the bed frame.
2. Secure each slat using CSK Screws (6) as shown in the diagram.
3. Use a screwdriver to tighten each screw, ensuring the slats are firmly attached to the frame.

5. Attach Casters to Underbed

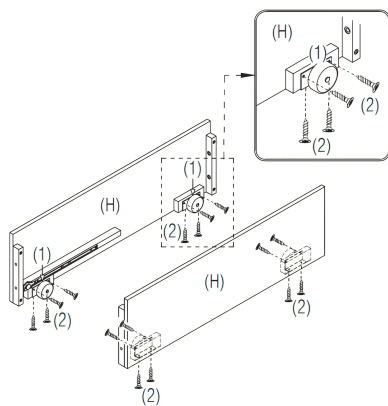

1. Fit the Casters (1) to the underbed Side Panel (H).
2. Secure them with four CSK Screws (2) for each caster.
3. Use a screwdriver to tighten each screw.


6. Assemble Underbed Frame

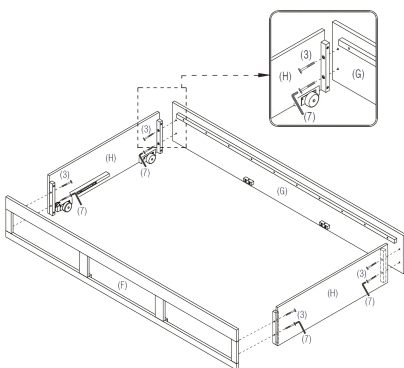

1. Place the Front Panel (F) and Back Panel (G) upright and align them to the Side Panels (H).
2. Use JCBC Bolts (3) to firmly attach all the panels together.
3. Tighten all bolts by using the M4 Allen Key (7).




7. Attach Bottom Support Center

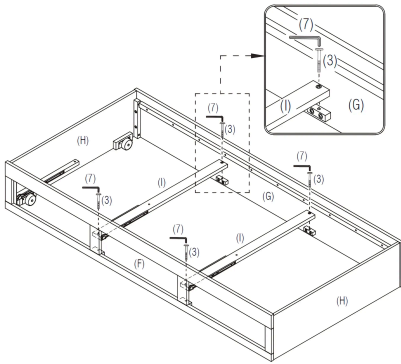


1. Position the Bottom Support Center (I) between the front and back panels.
2. Align the pre-drilled holes of the parts and insert JCBC Bolts (3) to attach them.
3. Use Allen Key (7) to secure them in place.

8. Attach the Center Support

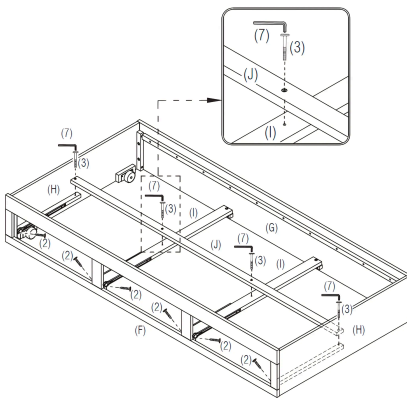

1. Attach the Center Support (J) onto the Bottom Support Center (I) and Side Panels (H).
2. Use JCBC Bolts (3) to secure it in place and tighten them with the Allen Key (7).
3. Tighten the Bottom Support Center (I) and Side Panel (H) to the Front Panel (F) with CSK Screws (2), use a screwdriver to tighten them in place.


9. Attach Slats to Underbed

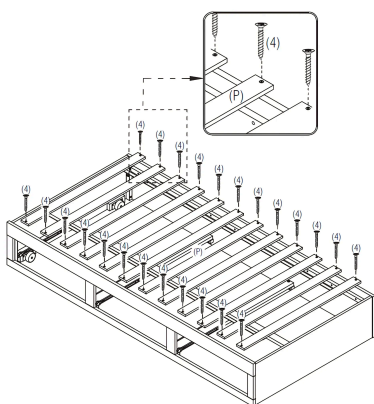

1. Place the Underbed Slats (P) across the bed frame.
2. Secure each slat using CSK Screw (4) as shown in the diagram.
3. Use a screwdriver to tighten each screw, ensuring the slats are firmly attached to the frame.




10. Assemble Drawers

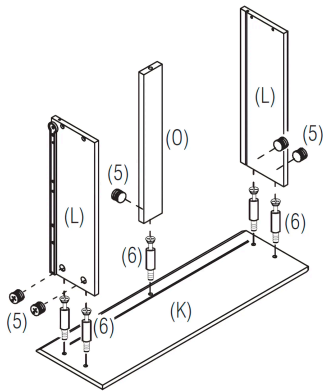

1. Insert Connecting Bolts (6) in the pre-drilled holes of the Drawer Front Panel (K) as shown on the diagram.
2. Attached the Drawer Side Panels (L) and Drawer Support (O) to the Drawer Front Panel (K).
3. Fasten with the Minifix Housing (5).
4. Use a screwdriver to fully tighten them.


Follow these steps for all drawers.

11. Add Bottom Panel

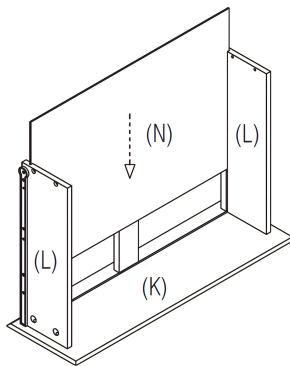

Slot the Drawer Bottom Panel (N) into the Drawer Side Panel (L) and Drawer Front Panel (K).


12. Attach Back Panel to Drawer

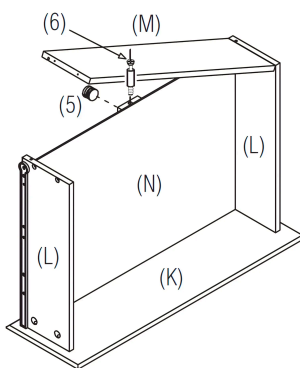

1. Insert Connecting Bolts (6) in the pre-drilled holes of the Drawer Support (O) as shown on the diagram and attach the Drawer Back Panel (M).
2. Fasten with the Minifix Housing (5).
3. Use a screwdriver to fully tighten them.




13. Finish Drawer

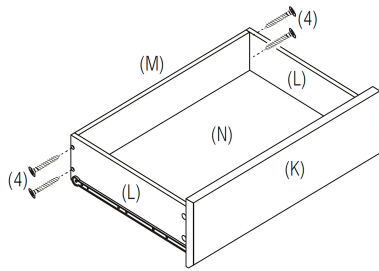


1. Finish attaching the Drawer Back Panel (M) with four CSK screws (4).
2. Insert them in the pre-drilled holes and tighten with a screwdriver.

Step 14 of 15

Insert the Drawers into the Trundle Bed frame.

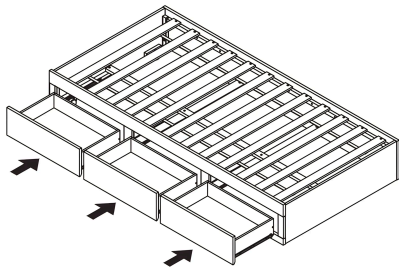

15. Finish and Final Check

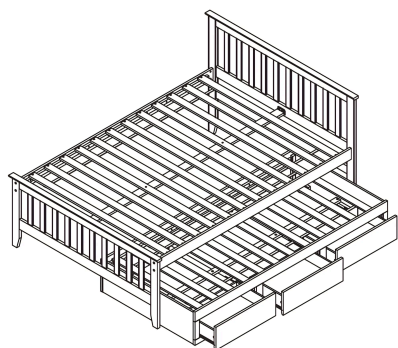

- Slot the entire Trundle Bed under previously assembled Bed.
- Verify that all slats are securely fastened and evenly spaced.
- Check for any loose connections and tighten the screws if necessary.

Need Help? Call 01484 500 560 or email hello@time4sleep.co.uk - please include your order number if you have one!

