


Instructions by Time4Sleep Products

Matilda Rattan Bedside

Assembly instructions for Matilda Rattan Oak Bedside by Time4Sleep

Product Information

Matilda Rattan Oak Bedside

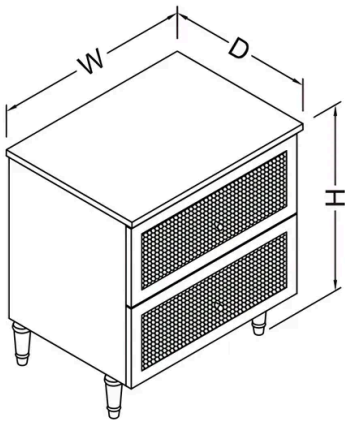

Description

With it’s rattan detail and wood finish, the Matilda 2 drawer bedside table will create a relaxed and stylish feel for your home. With 2 drawers with durable metal drawer runners, the Matilda bedside table is contemporary yet elegant, and is the ideal place to keep your essentials to hand.

Product specifications

Product Dimensions

Width	490 mm
Height	540 mm
Depth	360 mm

SKU

Matratoakbedside

Before you start

- Please read this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list.



- Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.
- Please ensure that the packaging is disposed of in a safe environmentally friendly way.
- **Caution:** There are small components used in the construction of this unit. These loose items should be kept away from young children during assembly, to avoid danger of choking.

Care Instructions

- Please do not sit RU stand on this cabinet.
- In general use, our furniture will sustain normal wear and tear with minimal attention.
- Wood expands and contracts with differences in temperature and humidity throughout its life. Take care not to place furniture next to radiators or anywhere subject to any excessive changes in temperature or moisture as this can harm the joints.
- Over time, sunlight may cause dark woods to lighten and light woods to darken.
- To clean the surface, wipe with a slightly damp cloth and buff with a dry cloth.
- Stubborn marks can be removed with a clean cloth, slightly dampened using a solution with a mild detergent. Silicone based polished should not be used as it builds up and leaves a sticky residue on the surface. Silicone based polsihed can also damage furniture joints.

Care & Maintenance








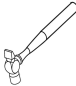



- In the unlikely event of missing or damaged parts, please contact your retailer.
- Please have this guide at hand quoting the part code reference numbers shown when requesting spare or replacement parts.

General Hints & Tips


- Two person assembly
- Please retain your assembly instruction and tools provided for future use. Periodically check that all bolts are still tight
- Approximate time to assemble this product: 15 min



Tools


A - Handle (Ø19mm)	2		B - Screw (M4 x18mm)	2	
C - Screw (Ø4 x16mm)	2		D - Tie for anti-tilt bracke	1	
E - Anti-tilt bracket	2		F - Wall-plug	2	
G - Screw (Ø4 x30mm)	2		H - Hammer	1	
I - Handheld electric drill	1		J - Pencil	1	
K - Phillips screwdriver	1				

Parts

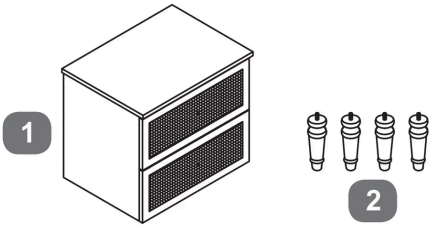


1	Bedside cabinet	1 piece(s)
2	Foot	4 piece(s)

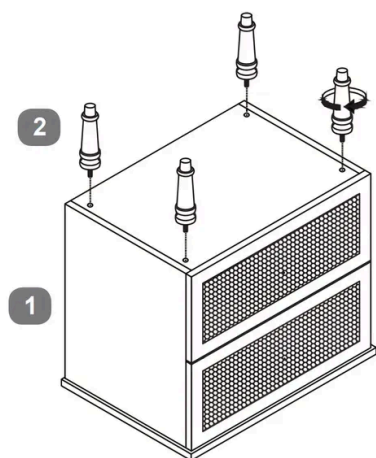

Steps (9)**1. Feet Installation**

- Insert the four feet into the pre-drilled holes on the bottom of the bedside cabinet.
- Secure each foot by turning it clockwise until tight.


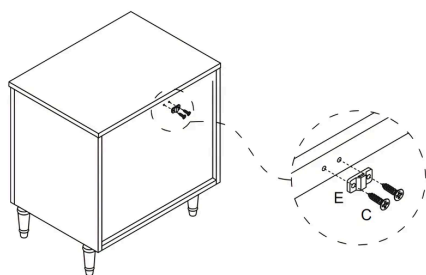
2. Bracket Installation and Alignment

1. Attach the anti-tilt bracket (E) to the back of the bedside cabinet using two screws (C).
2. Add the bracket left or right to suit the position of the cabinet.
3. Ensure the bracket is aligned with the pre-drilled holes and secure it tightly with a Phillips screwdriver.




3. Position Marking for Wall Plug

1. Use a pencil (J) to mark the position for the wall-plug (F) on the wall, aligning it with the anti-tilt bracket (E) already attached to the cabinet.
2. Fit the wall bracket a little lower than the one on the cabinet.

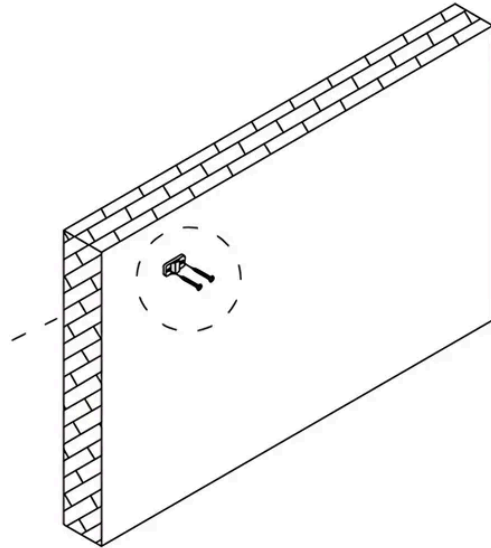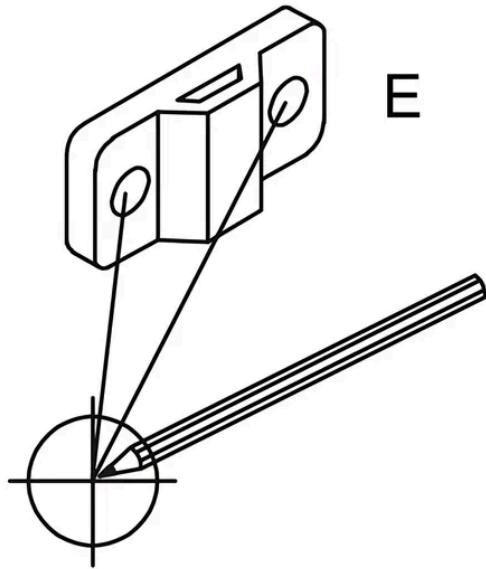

4. Wall Hole Drilling

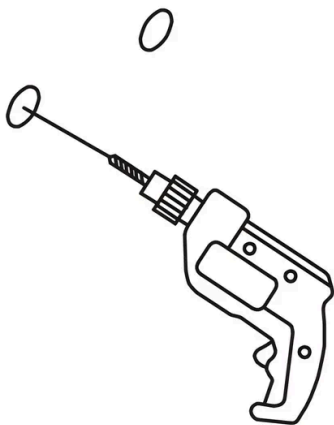


1. Using the handheld electric drill (I), carefully drill a hole into the wall at the marked position for the wall-plug (F).
2. Ensure the drill is perpendicular to the wall for an accurate and secure fit.

Note: Be careful and please make sure there are no pipes or electric cables in the area being drilled.




5. Wall Plug Insertion and Securing

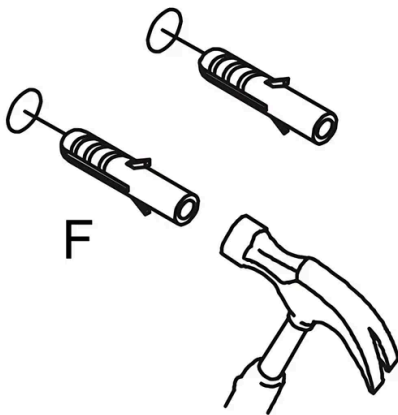


1. Insert the wall-plug (F) into the drilled hole in the wall.
2. Use a hammer (H) to gently tap the wall-plug until it is flush with the wall surface, ensuring a secure fit.

6. Bracket Wall Attachment

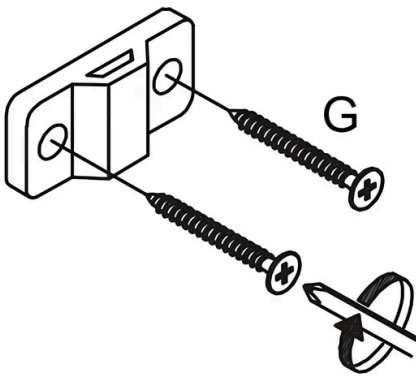

1. Attach the anti-tilt bracket (E) to the wall by aligning it with the wall-plug (F) and securing it using two screws (G).
2. Use a Phillips screwdriver (K) to tighten the screws, ensuring the bracket is firmly fixed to the wall.


7. Cabinet Wall Stabilization

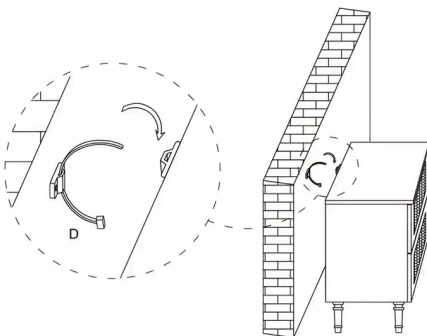

Secure the cabinet to the wall by attaching the tie for the anti-tilt bracket (D) to the bracket on the wall.




8. Cabinet Stabilization and Securing

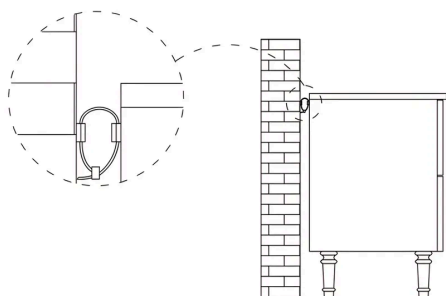

Ensure the tie for the anti-tilt bracket (D) is securely fastened to both the cabinet and the wall bracket. This will stabilize the cabinet and prevent it from tipping over.

9. Handle Attachment and Securing

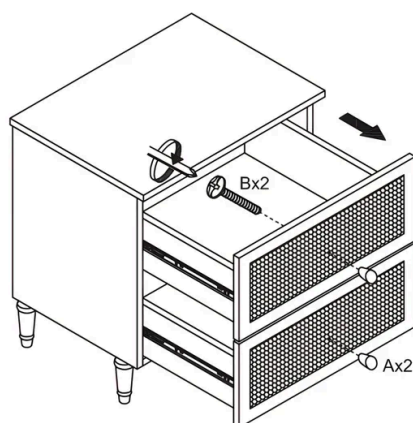

1. Attach the handles (A) to the front of each drawer by aligning them with the pre-drilled holes.
2. Secure each handle using two screws (B) and tighten with a Phillips screwdriver (K).

Need Help? Call 01484 500 560 or email hello@time4sleep.co.uk - please include your order number if you have one!



Instructions by Time4Sleep Products

Matilda Rattan Bedside