


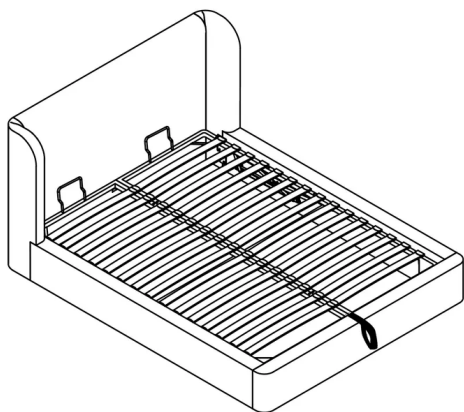


Instructions by Time4Sleep Products

Orsella Ottoman Bed Frame

Assembly instructions for Orsella Ottoman Bed Frame by Time4Sleep.

Product Information

Orsella Ottoman Bed Frame

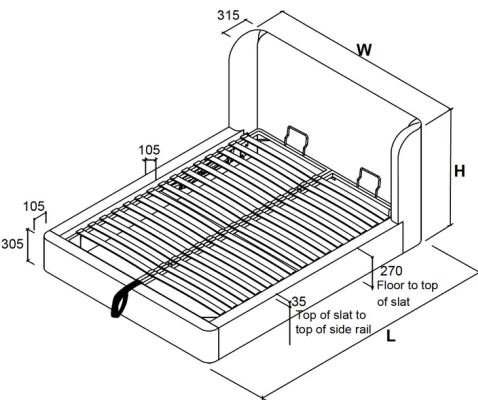

Description

The Orsella Ottoman Bed Frame combines elegant design with practical functionality, offering a stylish solution for modern bedrooms. Upholstered in high-quality fabric, it features a sturdy frame and a smooth gas-lift mechanism that reveals spacious under-bed storage. The slatted base provides excellent mattress support and ventilation, while the deep storage area is ideal for keeping bedding, clothing, or seasonal items neatly hidden. Designed for both comfort and convenience, the Orsella bed frame maximizes space without compromising on aesthetics.

Product specifications

	Double	King	Super King
Length (mm)	2150	2250	2250
Width (mm)	1595	1745	2045
Height (mm)	1055	1055	1055
Storage Dimensions (LWH 1930 x 1380 x 220 mm)		2030 x 1530 x 220	2030 x 1830 x 220
Ottoman Piston Strenght	800 N	800 N	900 N

Safety and usage guidelines

- Ensure the bed is operated by adults only and not used by children under 12 years old.



- Always lift and lower the bed with the mattress in place, using the handle and keeping clear of the mechanism to avoid entrapment.
- Make sure the ottoman is fully open before accessing the storage area.
- Do not reach into the storage area through the hinge mechanism.
- Keep children and pets away from the storage area and do not stand inside it.
- Regularly inspect the bed to ensure it is functioning correctly.

Best Practices

Note: Be careful what you store under the bed. Items such as suitcases or boxes must not touch the slats, as this may cause damage.

Maximum storage height is 220 mm.

Best Practices

Tip: Make sure the hooks are facing upward and toward the inside of the bed frame.

Tip: Ensure the frame is square before fully tightening in the next steps.

Tip: Ensure all brackets are evenly positioned before tightening.

Tip: Check that all corners are aligned before final tightening.

Tip: Ensure both mechanisms are installed symmetrically before tightening.

Tip: Ensure the cover is evenly spread with no folds or creases.

Tip: Ensure the cross bar is centered and securely fixed.

Tip: Ensure the slat frame is centered and properly aligned before tightening.

Tip: Do not over-tighten the nut, as the piston must be able to move smoothly.

Tip: Do not fully tighten the bolts until the frame is correctly aligned.

Tip: Do not over-tighten the nut, as the piston must move smoothly during operation.



Tools

A - Bolt M8x25mm (44 Double / King, 48 Super King)

48



B - Bolt M8x35mm

8



C - Bolt M8x50mm

6



D - Nut for M8 Bolts

6



E - Spring Washer for M8 Bolts

6



F - Flat Washer for M8 Bolts

6



G - Hooked Corner Bracket - Left

1



H - Hooked Corner Bracket - Right

1



I - Allen Key for M8 Bolts

1



J - Spanner for M8 Nuts

1



K - Flanged Lock-Nut M8

4



L - Metal Connection Plates for Slat Frame

2




M - Flat Hooked Bracket

2



Materials

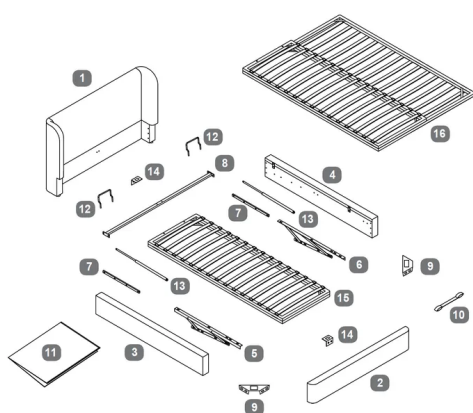

1	Headboard	1 piece(s)
2	Footboard	1 piece(s)
3	Side Rail - Left	1 piece(s)
4	Side Rail - Right	1 piece(s)
5	Gas-lift Mechanism - Left	1 piece(s)
6	Gas-lift Mechanism - Right	1 piece(s)
7	Spacer Rail for Gas Lift Mechanism	2 piece(s)
8	Side Rail Cross Bar	1 piece(s)
9	Angled Corner Bracket	2 piece(s)
10	Fabric Lifting Strap	1 piece(s)
11	Fabric Base Cover	1 piece(s)
12	Mattress Stopper	2 piece(s)
13	Gas-lift Piston	2 piece(s)




14	'L' Shape Bracket. (2 for Double/King, 4 for Super King)	2 piece(s)
15	Metal Slat Frame (Double/King)	1 piece(s)
16	Metal Slat Frame (Super King)	1 piece(s)



Steps (13)


1. Attach the Corner Hooks to the Side Rails

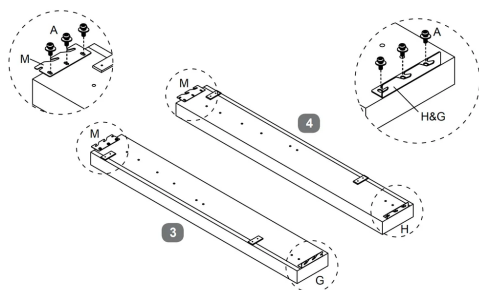

- 1. Place the Side Rail - Left (3) and Side Rail - Right (4) on the floor with the fixing holes facing upward.
- 2. Position the Hooked Corner Bracket - Left (G) and Hooked Corner Bracket - Right (H) on the inner ends of the side rails as shown.
- 3. Align the holes and secure using Bolt (A), tightening with the Allen Key (I).

Tip: Make sure the hooks are facing upward and toward the inside of the bed frame.


2. Attach the Headboard and Footboard Bolts

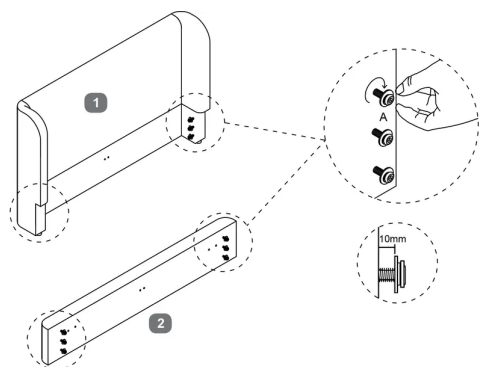

- 1. Place the Headboard (1) and Footboard (2) upright with the fixing holes facing inward.
- 2. Insert Bolt (A) into each of the pre-installed inserts on both ends.
- 3. Tighten by hand, leaving approximately 10 mm of each bolt exposed.



3. Attach the Side Rails to the Headboard and Footboard

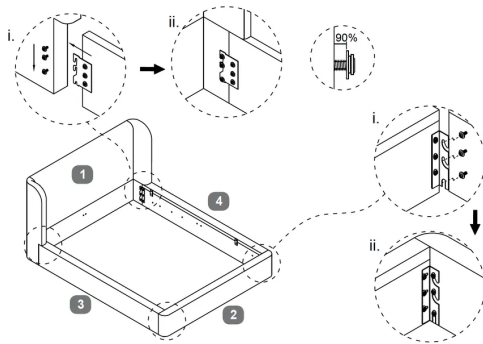


- **1.** Position the Side Rail - Left (3) and Side Rail - Right (4) between the Headboard (1) and Footboard (2).
- **2.** Align the hooks with the bolts and lower the side rails to lock them into place.
- **3.** Tighten the bolts to 90 percent using the Allen Key (I).

Tip: Ensure the frame is square before fully tightening in the next steps.


4. Attach the 'L' Shape Brackets

- **1.** Position the 'L' Shape Brackets (14) on the Headboard or Footboard of the bed frame as shown (2 brackets for Double/King, 4 brackets for Super King).
- **2.** Align the holes with the pre-drilled holes on the Headboard and Footboard.
- **3.** Secure each bracket using Bolt (A) and tighten with the Allen Key (I).

Tip: Ensure all brackets are evenly positioned before tightening.

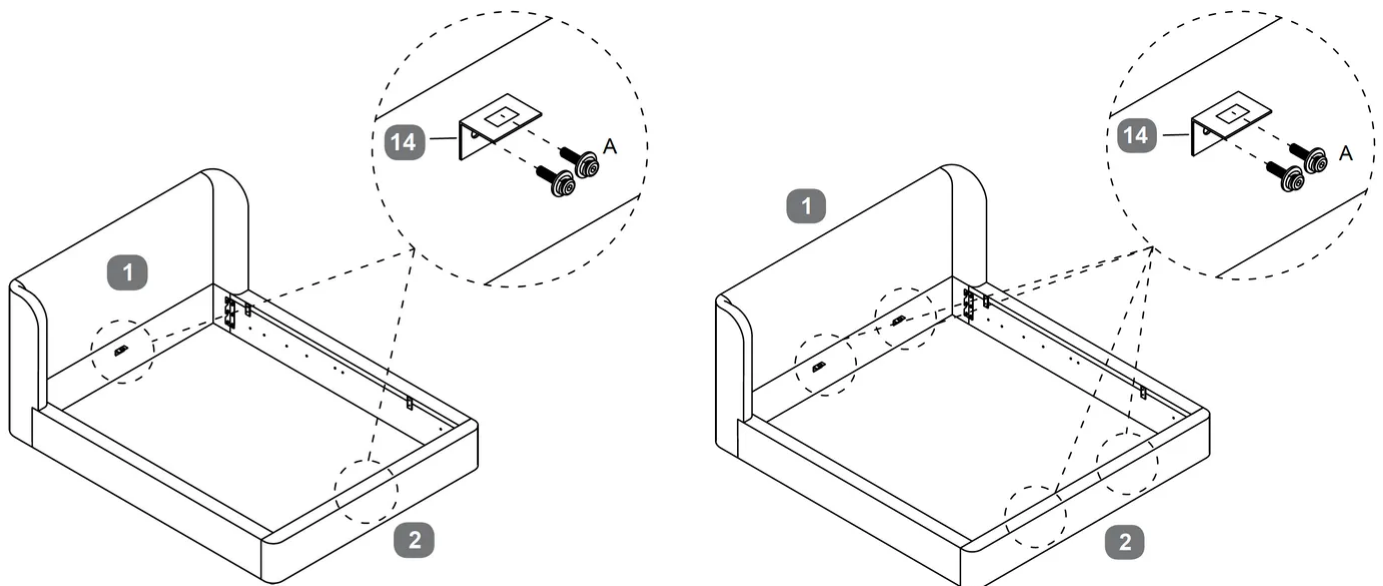


5. Attach the Angled Corner Brackets and tighten the frame

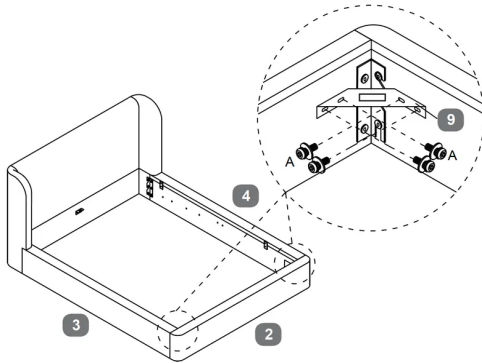

- **1.** Position the Angled Corner Brackets (9) inside each corner of the bed frame as shown.
- **2.** Align the holes with the pre-drilled holes on the side rails and footboard.
- **3.** Secure each bracket using Bolt (A) and tighten with the Allen Key (I).
- **4.** Ensure the bed frame is squared as shown.
- **5.** Tighten all bolts to 100 percent.

Tip: Check that all corners are aligned before final tightening.

6. Attach the gas-lift mechanisms

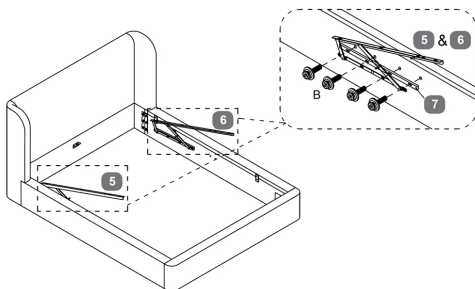


- Position the Gas-lift Mechanism - Left (5) and Gas-lift Mechanism - Right (6) inside the bed frame as shown.
- Align the mechanisms with the fixing points on the side rails and headboard.
- **Insert the Spacer Rails (7) between the Gas lift mechanism and Siderails where indicated.**
- Secure all components using Bolt (B) and tighten with the Allen Key (I).

Tip: Ensure both mechanisms are installed symmetrically before tightening.




7. Install the fabric base cover

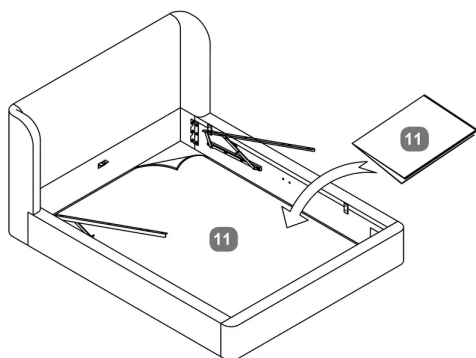

- Position the Fabric Base Cover (11) inside the bed frame.
- Lay the cover flat across the base, aligning it with the inner edges of the frame.

Tip: Ensure the cover is evenly spread with no folds or creases.

8. Attach the side rail cross bar

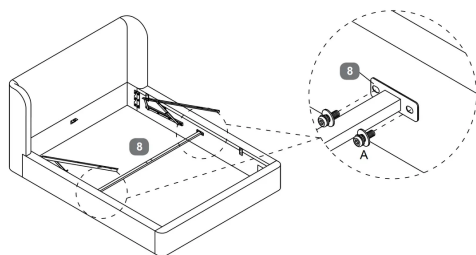

1. Position the Side Rail Cross Bar (08) across the bed frame as shown.
2. Align the ends with the fixing points on the side rails.
3. Secure using Bolt (A) and tighten with the Allen Key (I).

Tip: Ensure the cross bar is centered and securely fixed.







9. Install the slat frame

- Position the Metal Slat Frame (15 / 16) on top of the bed frame as shown (15 for Double/King, 16 for Super King).
- Attach the Mattress Stoppers (12) to the frame.
- Secure the two halves of the slat frame together using Metal Connection Plates (L) and Bolt (A), tightening with the Allen Key (I).
- Attach the Fabric Lifting Strap (10) to the slat frame as shown.

Tip: Ensure the slat frame is centered and properly aligned before tightening.




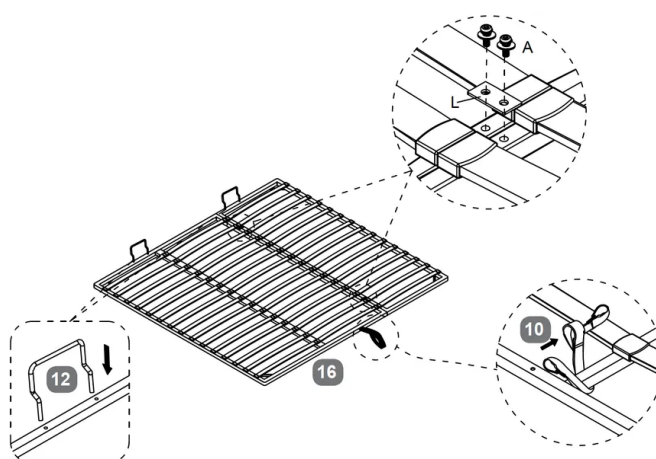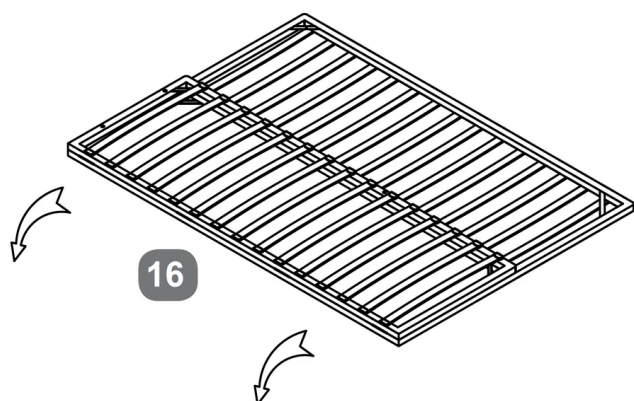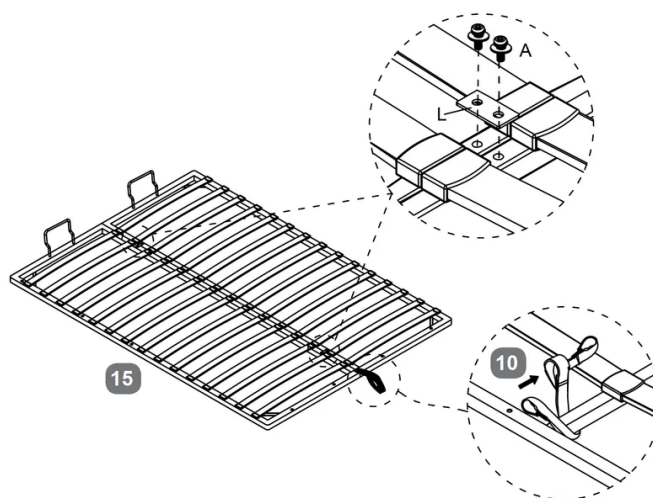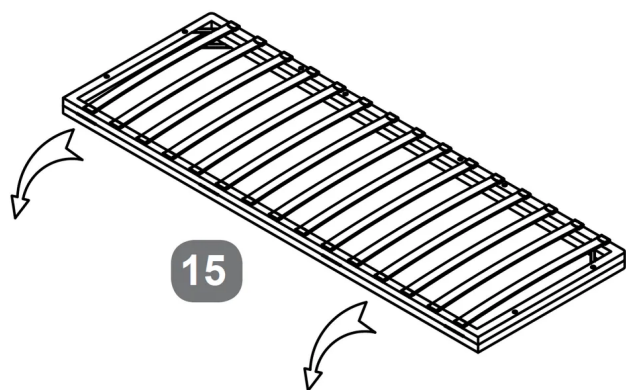

10. Attach the gas-lift piston

- Slide the Gas-Lift Piston Stem (X) onto the Axle (Y).
- Fit the Flange Lock Nut (K) and tighten using the Spanner (J).
- Ensure a small gap is left between the piston stem and the frame so the stem can move freely.



Tip: Do not over-tighten the nut, as the piston must be able to move smoothly.

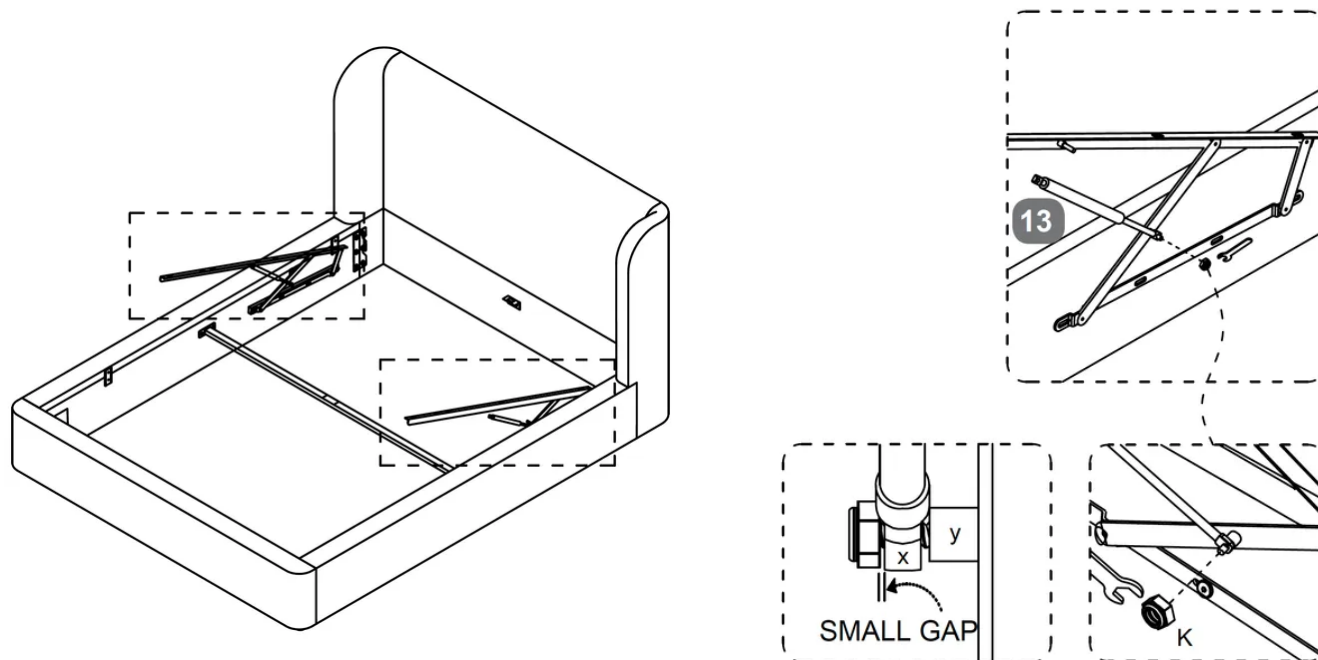

11. Secure the slat frame

- Loosely fit three Bolt Sets on each side using Bolt (C), Washer (F), Spring Washer (E), and Nut (D).
- Hold the slat frame down and align it so there are even gaps on both sides.
- Once aligned, tighten all bolts fully using the Allen Key (M) and Spanner (J).



Tip: Do not fully tighten the bolts until the frame is correctly aligned.

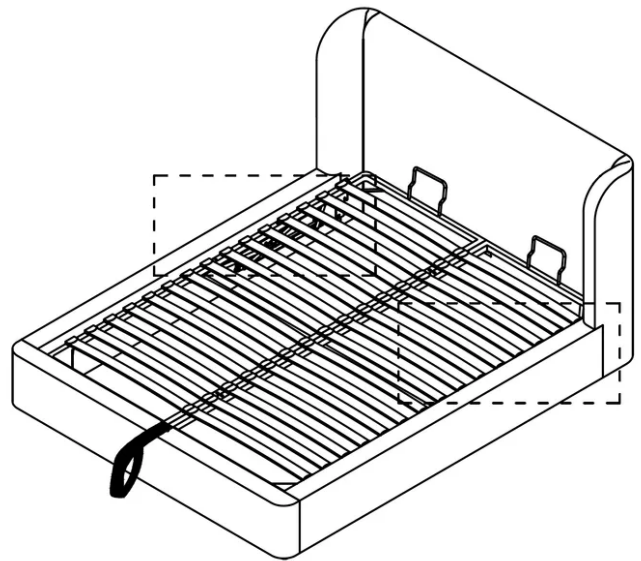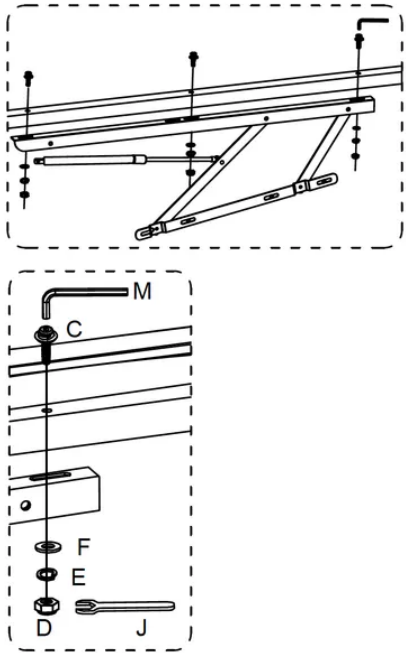

12. Attach the upper gas-lift piston

- Lift the slat frame and slide the Gas-Lift Piston Stem (X) onto the upper Axle (Y).
- Fit the Flanged Lock Nut (K) and tighten using the Spanner (J).
- Ensure a small gap is left between the piston stem and the frame so the stem can move freely.

Tip: Do not over-tighten the nut, as the piston must move smoothly during operation.

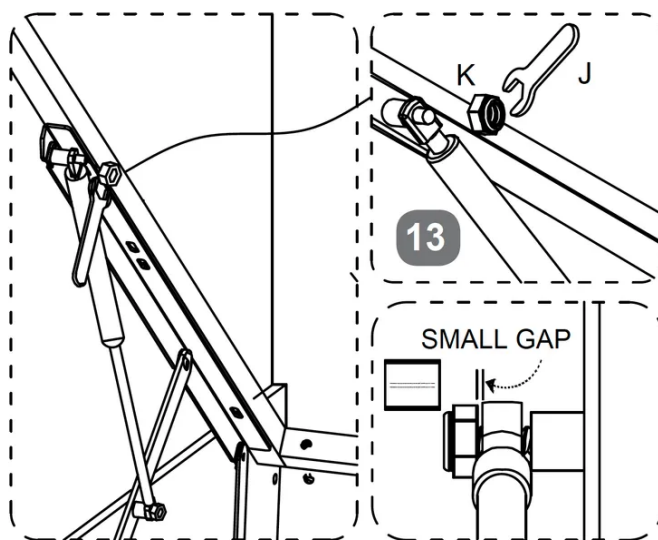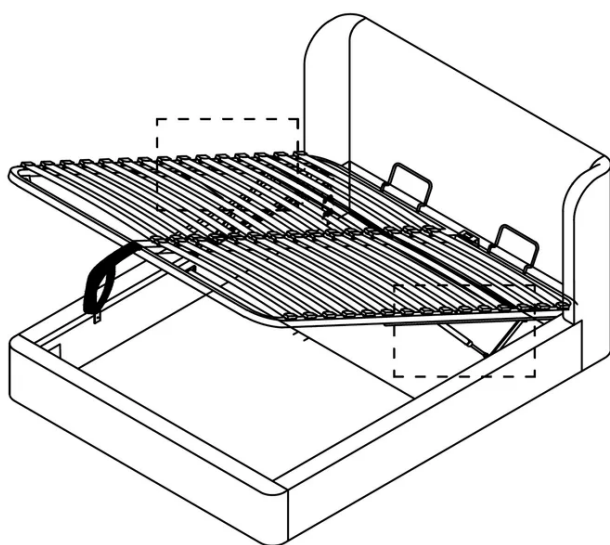

13. Safety and usage guidelines

A: Operating Instructions


- Ensure the bed is operated by adults only and not used by children under 12 years old.
- Always lift and lower the bed with the mattress in place, using the handle and keeping clear of the mechanism to avoid entrapment.

B: Storage Area Safety

- Make sure the ottoman is fully open before accessing the storage area.
- Do not reach into the storage area through the hinge mechanism.
- Keep children and pets away from the storage area and do not stand inside it.
- Regularly inspect the bed to ensure it is functioning correctly.

Note: Be careful what you store under the bed. Items such as suitcases or boxes must not touch the slats, as this may cause damage.

Maximum storage height is 220 mm.

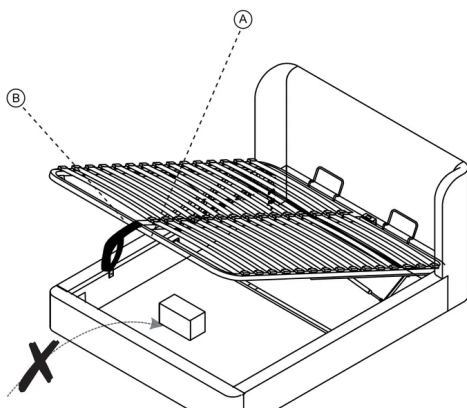

Instructions by Time4Sleep Products

Orsella Ottoman Bed Frame