


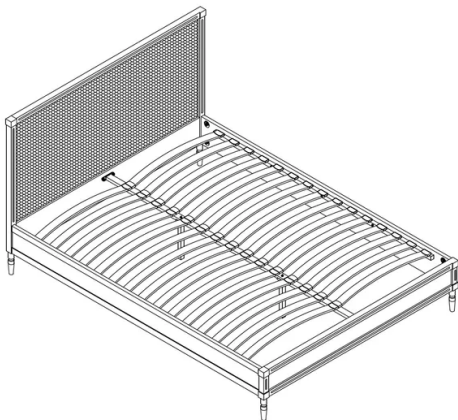


Instructions by Time4Sleep Products

Palais Oak Rattan Bed Frame

Assembly instructions for Palais Oak Rattan Bed Frame by Time4Sleep

Product Information

Palais Oak Rattan Bed Frame

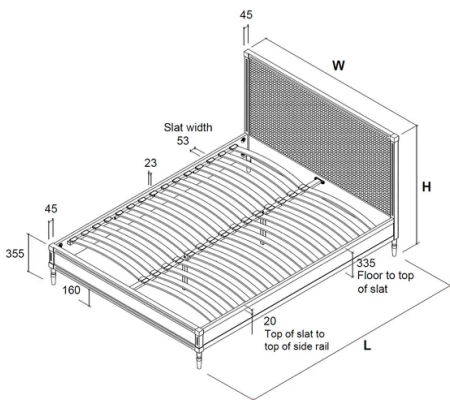

Description

Bring warmth, texture, and contemporary elegance to your bedroom with the Palais Rattan Standard Bedstead. Thoughtfully crafted with a beautifully detailed rattan headboard, this frame blends modern simplicity with natural materials, creating a calm and inviting centrepiece for your space.

Product specifications

	Double	King
Width	144.5 cm	159.5 cm
Length	201.5 cm	211.5 cm
Height	110.5 cm	110.5

SKU

Pal46rattoak, Pal50rattoak, Pal60rattoak

Before you start

- Please read this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list.



- Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.
- Please ensure that the packaging is disposed of in a safe environmentally friendly way.
- **Caution:** There are small components used in the construction of this unit. These loose items should be kept away from young children during assembly, to avoid danger of choking.

General Hints & Tips

- Two person assembly
- Please retain your assembly instruction and tools provided for future use. Periodically check that all bolts are still tight.

Care & Maintenance

In the unlikely event of missing or damaged parts, please contact your retailer. Please have this guide at hand quoting the part code reference numbers shown when requesting spare or replacement parts.



Tools

A - Flat Washer For (M8xØ16mm) Bolts 6 

B - Flat Washer For (M8xØ14mm) Bolts 8 

C - Flat Washer For (M8xØ14mm) Bolts 14 

D - Bolt (M8x18mm) 4 

E - Bolt (M8x40mm) 2 

F - Threaded Stud (M8x65mm) 8 

G - Nut For M8 Bolts 8 

H - Half Moon Bracket M8 8 

I - Wooden Dowel (Ø8x30mm) 4 

J - Allen Key For M8 Bolts 1 


K - Spanner For M8 Nuts 1 

L - Slat End Cap (28 for Double, 30 for King) 28 

M - Slat Centre Cap (14 for Double, 15 for King) 14 



Parts



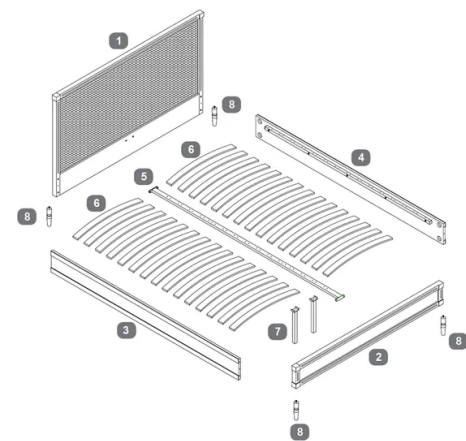


1	Headboard	1 piece(s)
2	Footboard	1 piece(s)
3	Side Rail - LH	1 piece(s)
4	Side Rail - RH	1 piece(s)
5	Centre Support Rail	1 piece(s)
6	Bentwood Slats (28 for Double, 30 for King)	28 piece(s)
7	Leg for Support Rail	2 piece(s)
8	Leg for the Bed Frame	4 piece(s)



Steps (8)**1. Attach the Bed Frame Legs to the Headboard and Footboard**

1. Lay the **Headboard (1)** and **Footboard (2)** face down on a soft surface.
2. Align a **Frame Leg (8)** with the pre-drilled hole in each corner block.
3. Rotate each leg clockwise until fully tightened and secure.
4. Verify that all four legs are straight and firmly attached.


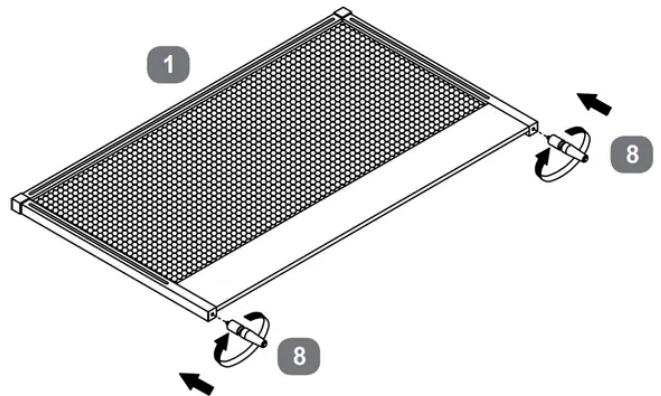
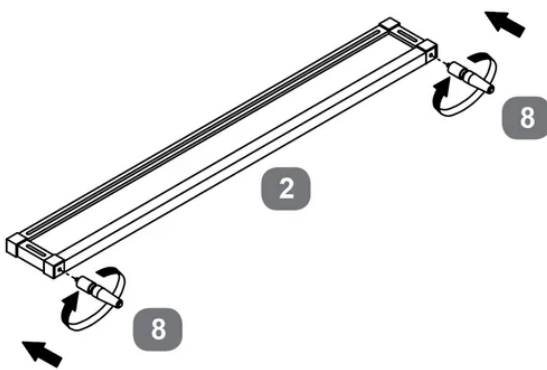
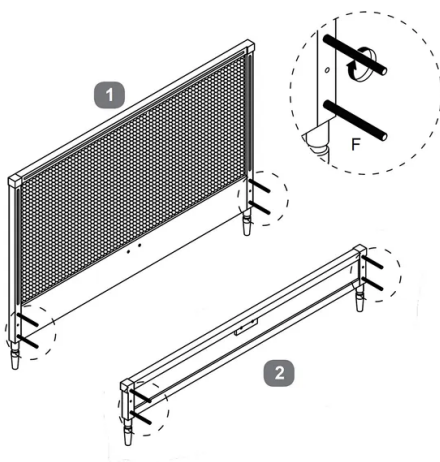
**2. Insert the Threaded Studs into the Headboard and Footboard**

1. Stand the **Headboard (1)** and **Footboard (2)** upright.
2. Insert a **Threaded Stud (F)** into each pre-drilled hole on the inner faces of both panels.
3. Rotate each stud clockwise until fully tightened by hand.
4. Verify that all studs sit straight and securely in place.





3. Secure the Side Rails to the Footboard

1. Insert a **Wooden Dowel (I)** into the small pre-drilled hole at the end of each side rail.
2. Align the **Side Rail - LH (3)** and **Side Rail - RH (4)** with the **Threaded Studs (F)** on the **Footboard (2)**, then slide each rail fully onto the studs.
3. Place a **Half Moon Bracket (H)** over each stud inside the rails, making sure the curved side faces outward.
4. Add **Washer B**, then **Washer C**, and screw on a **Nut (G)**.
5. Tighten each nut using the **Spanner (K)** until the connection is secure.
6. Verify that both side rails sit flush against the footboard and do not move.

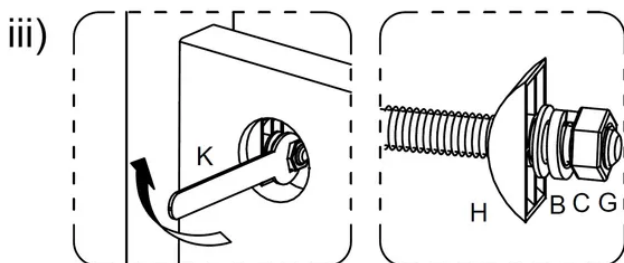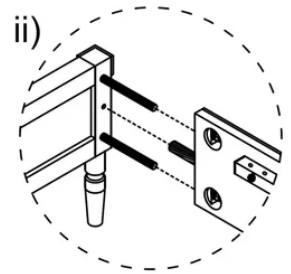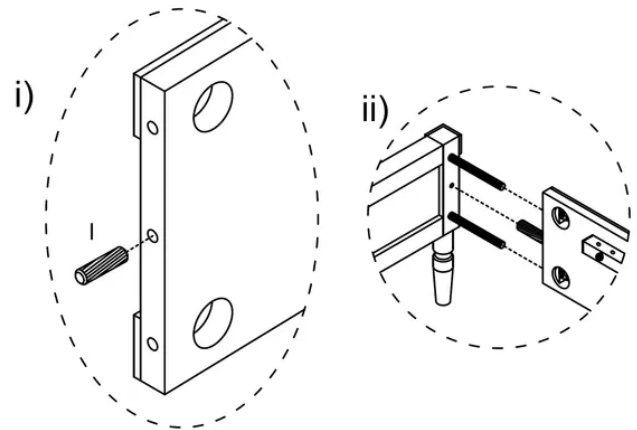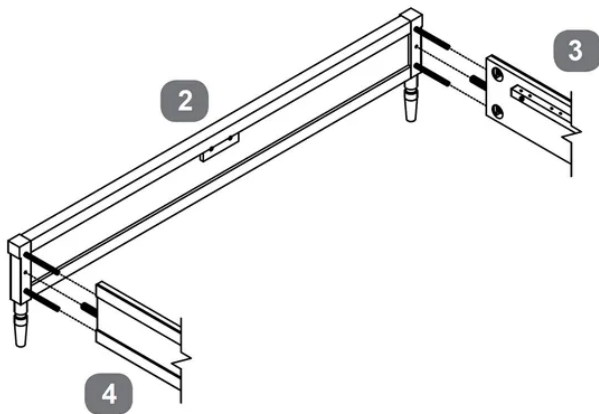




4. Attach the Support Legs to the Centre Support Rail

1. Position the **Centre Support Rail (5)** with the pre-drilled holes facing upward.
2. Align a **Support Leg (7)** under the centre rail so the top hole matches the hole in the rail.
3. Insert **Bolt E** through **Washer A**, then **Washer C**, and tighten the bolt into the leg.
4. Repeat the process for the second support leg.
5. Verify that both legs are straight and firmly secured to the rail.

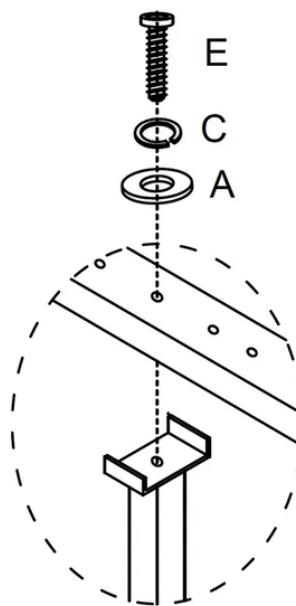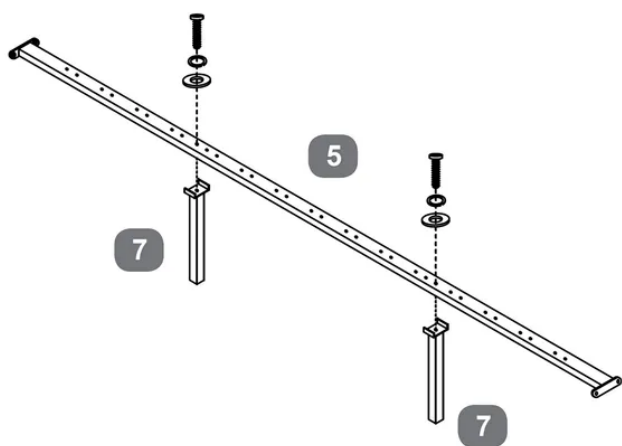



5. Attach the Side Rails to the Headboard

1. Insert **Wooden Dowels (I)** into the pre-drilled holes on both ends of the **Side Rail - LH (3)** and **Side Rail - RH (4)**.
2. Align each side rail with the **Headboard (1)** and slide the dowels into the matching holes until fully seated.
3. Insert two **Threaded Studs (F)** through the headboard posts and into the metal bracket on each side rail.
4. Secure each connection using **Half Moon Bracket (H)**, **Flat Washer (B)**, **Flat Washer (C)**, and **Nut (G)**.
Tighten using the **Spanner (K)**.

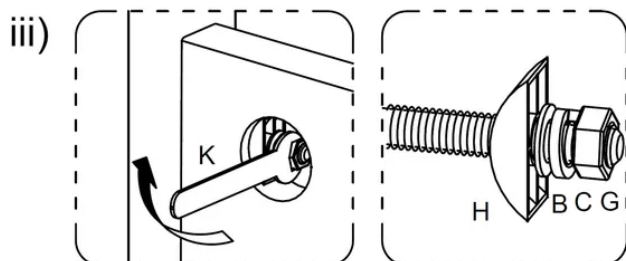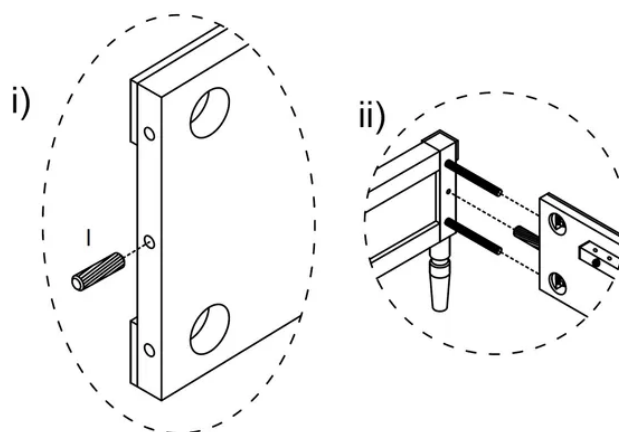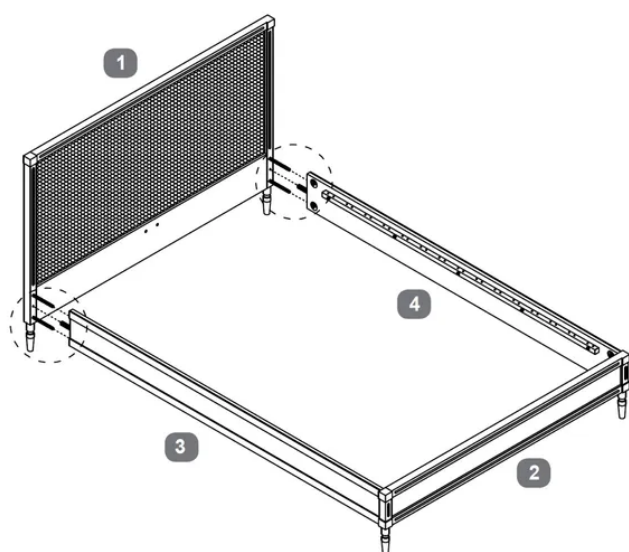



6. Attach the Centre Support Rail

1. Position the **Centre Support Rail (5)** between the two side rails.
2. Align the end plates of the centre rail with the pre-drilled holes on each side rail.
3. Insert **Bolt D** through **Washer A** and **Washer C**, then fasten the centre rail to each side rail.
4. Ensure the full bed frame is **properly squared**, as shown in the diagram. Once aligned, tighten all bolts on the bed frame **100%**.

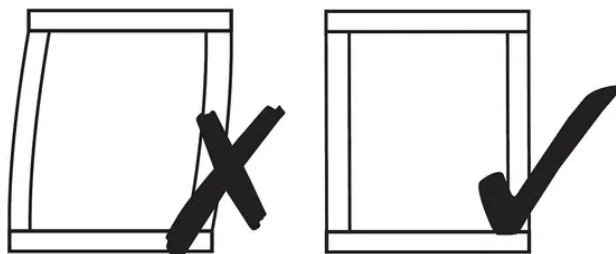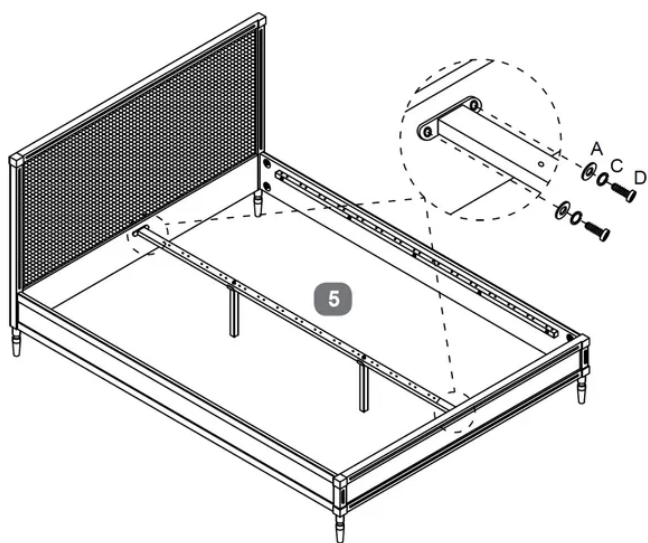


7. Insert the Slats

1. Insert a **Slat End Cap (L)** onto each end of the **Bentwood Slat (6)**.
2. Position the slat above the side rail supports and press both ends down firmly until the caps click into place.
3. Continue inserting slats evenly across the width of the bed frame.
4. Once all slats are installed, insert the **Slat Centre Caps (M)** between each pair of slats along the centre support rail.

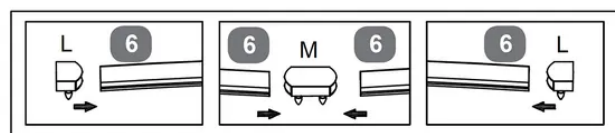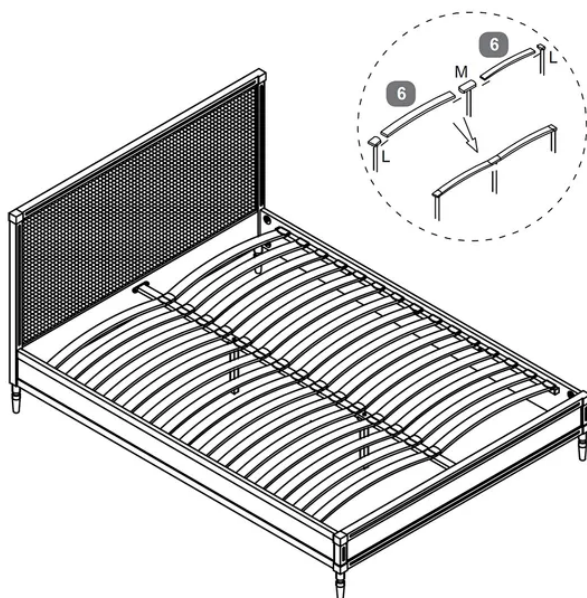

8. Final Check

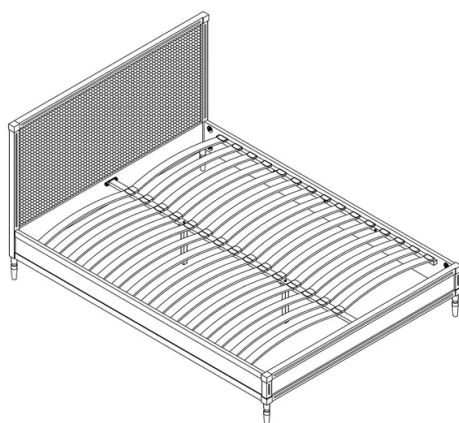

- Verify that all slats are securely fastened and evenly spaced.
- Check for any loose connections and tighten the screws if necessary



Instructions by Time4Sleep Products

Palais Oak Rattan Bed Frame