

Instructions by Time4Sleep Products

Savannah Upholstered Drawer Bed Frame

Assembly instructions for Savannah Upholstered Drawer Bed Frame by Time4Sleep




Product Information

Savannah Upholstered Drawer Bed Frame

Description

The Savannah offers a unique take on the upholstered bed with its winged headboard and clean vertical lines. The deep cushioning to the headboard will offer comfortable support. Upholstered in an easy to coordinate luxurious textured weave fabric the Savannah will be a versatile and stylish addition to any bedroom. The bed comes with a sprung slatted base and features practical spacious drawers with one large drawer to the foot and smaller drawers on each side.

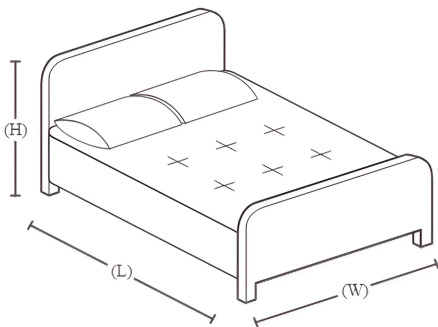

Product specifications

	Double	King Size
Width	153 cm	167 cm
Length	209 cm	220 cm
Height	123.2 cm	123.2 cm
Foot End Height	35.5 cm	35.5 cm



SKU

Sav46Oat, Sav50Oat, Sav46Mist, Sav50Mist

Adjusting Centre Legs Properly






Please note that the recommended process for adjusting centre legs when assembling your bed.

- Before placing the mattress on the base, ensure that the support legs are not quite touching the floor.
- When the bed is in use, the support legs will sit firmly on the solid surface.
- Ensure that the legs are vertical to maintain proper support

Preventing Floor Damage

- Laminate/Wooden Flooring Precaution: Due to the nature of these surfaces, we recommend placing a small piece of non-slip material under the legs. This allows the adjusters to function correctly.
- Lifting the Bed: When moving the bed, always lift it into the new position.
- Never drag the bed, as this can misalign the legs, weakening the centre rail's support.
- Adhering to the recommended process should ensure that your bed gives you years of trouble free service.

Tools

1 - JCBC (M6 x 40mm) 2		2 - Small Adjuster (35 mm) 2	
3 - Allen Key (M4 x 65mm) 1		4 - Allen Key (M5 x 70mm) 1	
5 - CSK (M3.5 x 16mm) 56		6 - CSK (M4 x 28mm) 8	
7 - CSK (M4 x 32mm) 42		8 - CSK (M4 x 50mm) 28	
9 - Roller 14		10 - Wooden Dowel (20mm) 8	
11 - Middle Holder 14		12 - End Holder 28	



13 - Power Nail (6/8)

23



14 - JCBC (M6 x 50mm)

4



15 - Spring Wshers

4



16 - Flat Washers

4



17 - Metal Stopper

6



Parts

A - Headboard

1 piece(s)



B - Footboard

1 piece(s)



C - Side Rail

2 piece(s)



D - Centre Rail

1 piece(s)



E - Support Leg

2 piece(s)



F - Side Rail Support

4 piece(s)



G - Legs

2 piece(s)



H - Footboard Front Panel (Label: 1)

1 piece(s)



I - Footboard Back Panel (Label: 2)

1 piece(s)



J - Footboard & Side Rail Side Panel (Label: 3)

6 piece(s)



K - Footboard Bottom Panel (Label: 4)

1 piece(s)



L - Side Rail Front Panel (Label: 5)

2 piece(s)



M - Side Rail Back Panel (Label: 6)

2 piece(s)



N - Side Rail Bottom Panel (Label: 7)

2 piece(s)



O - Bottom Panel Big Support (Label: 8)

7 piece(s)



P - Bottom Panel Small Support (Label: 9)

4 piece(s)



Q - LVL Slat

28 piece(s)



R - Side Wing

2 piece(s)



S - Stiffener Slat


2 piece(s)



Steps (14)


1. Attach the Side Wings

Tighten the side wings (R) to headboard (A) as shown.

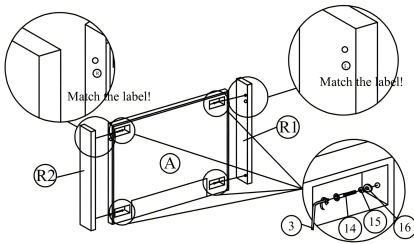


2. Attach the Legs

Tighten the legs (G) to both footboard (B) as shown.

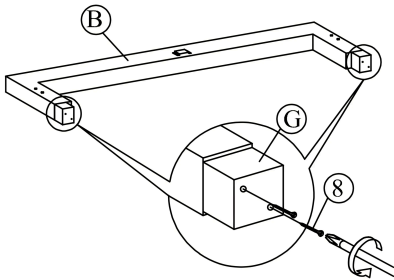


3. Prepare the Side Rails

Attach wood dowel (10) to side rail (C). Tighten the side rail support (F) to the side rail (C) with screws (6) using screw driver (not included).

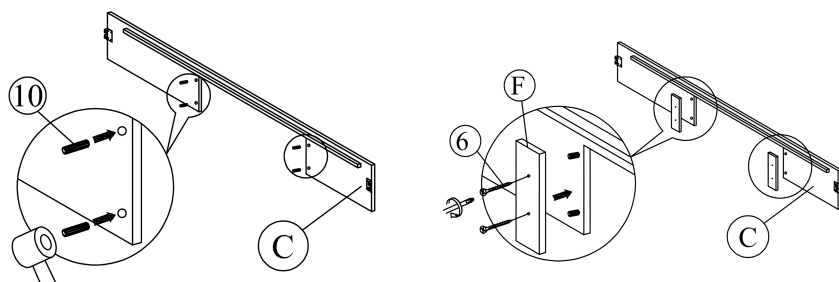

4. Attach Side Rails


Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

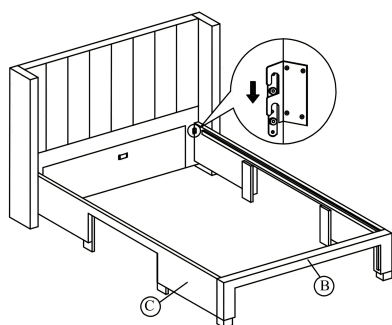

5. Install the Center Support Rail


Attach the support legs (E) to the center rail (D) of the bed as shown. Slide the center rail (D) to the headboard (A) and footboard (B).

ATTENTION: Please keep the adjuster around 5 to 8 mm distant away from the floor.

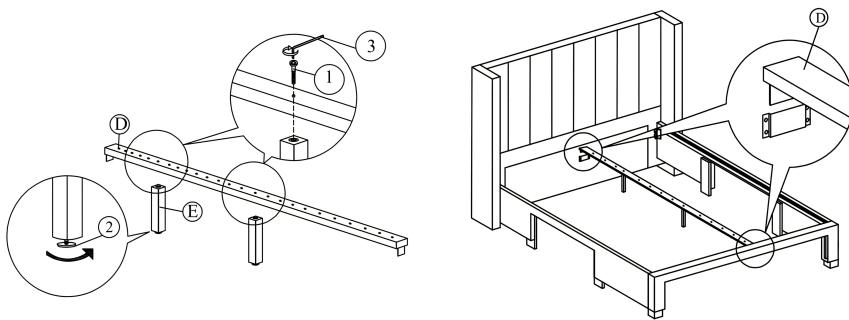


6. Assemble Footboard Drawer

Tighten the footboard side panel (J) to the footboard front panel (H) and footboard back panel (I) with screws (8) using screw driver (not included).

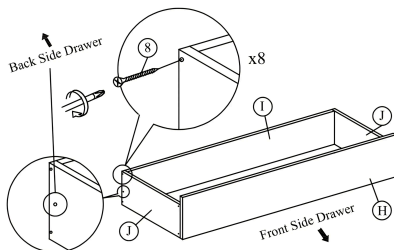


7. Add Bottom Panel to Drawer

Slide the footboard bottom panel (K) to the set up drawer.

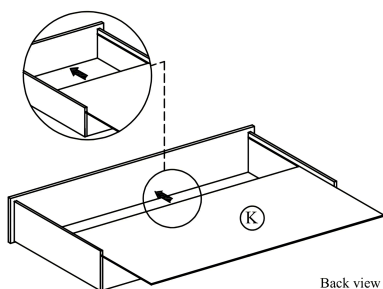


8. Finish Footboard Drawer

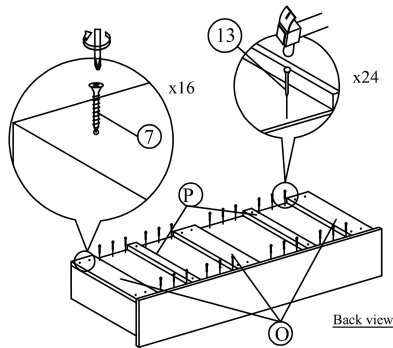


Tighten the bottom panel support (O & P) with screws (7) using screw driver (not included). Attach the bottom panel with Nail (13) using the hammer (not included).

9. Attach Rollers

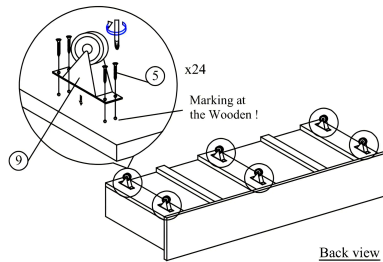

Tighten the roller (9) with screws (5) using screw driver (not included).

10. Assemble Side Rail Drawers

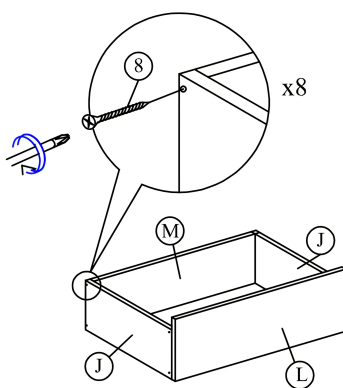


Tighten the side rail side panel (J) to the side rail front panel (L) and side rail back panel (M) with screws (8) using screw driver (not included).




11. Add Bottom Panel to Drawer

Slide the side rail bottom panel (N) to the set up drawer.

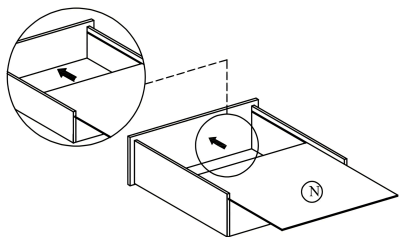


12. Finish Side Rail Drawer

Tighten the bottom panel support (O & P) with screws (7) using screw driver (not included).

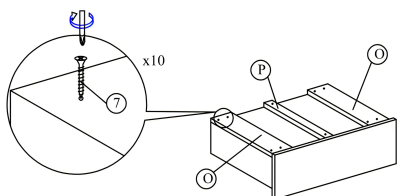

13. Attach Rollers


Tighten the roller (9) with screws (5) using screw driver (not included).

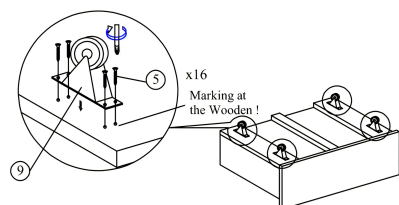

14. Install the Slats and Drawers

Affix the Stiffener Slat (S) to the side rail support wood and the center rail (D). Tighten all the 4 corner, follow by assembly of the slat holders with LVL slats as shown.

ATTENTION: Prevent the drawer from being pulled out too far and drop. It is optional to choose attach the drawer stopper.

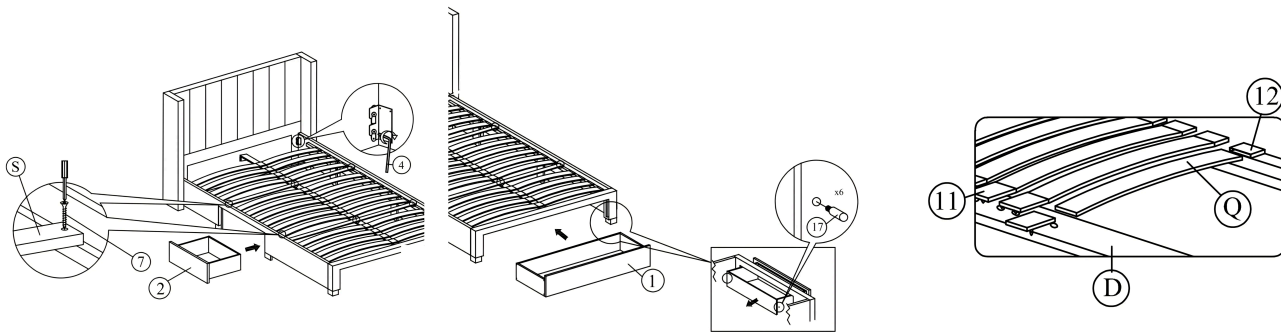

Need Help? Call 01484 500 560 or email hello@time4sleep.co.uk - please include your order number if you have one!

