
MODEL: CF 9380-B (46") Step 1: Zip the black non-woven fabric after take out the headboard Step 2: Install the headboard legs (D) / footboard legs (E) to footboard (B) and headboard (A). Tighten the legs. 0 Ζ Ξ Ω D С Z ₿ Small Adjuster CSK M4 x 25mm JCBC M6 X 40 Spring Washers Middle Holder JCBC M6 X 70 JCBC M6 X 60 ICBB M8 X 20 End Holder 0 Legs 53x360(H) Legs 53x1190(H) Footboard 2 pcs 26 pcs 13 pcs 10 pcs 26 pcs Step 3: Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it. Step 4: Attach the support legs (G) to the center rail (F) of the bed as shown. 2 pcs 2 pcs 2 pcs 1 pc 2 pcs 4 pcs 6 pcs 8 pcs 10 pcs 2 pcs 2 pcs 1 pc 1 pc l pc \triangleright $(\triangleright$ **ASSEMBLY INSTRUCTION** \bigcirc \bigcirc distant away from the floor. ATTENTION: Please keep the adjuster around 5 to 8 mm

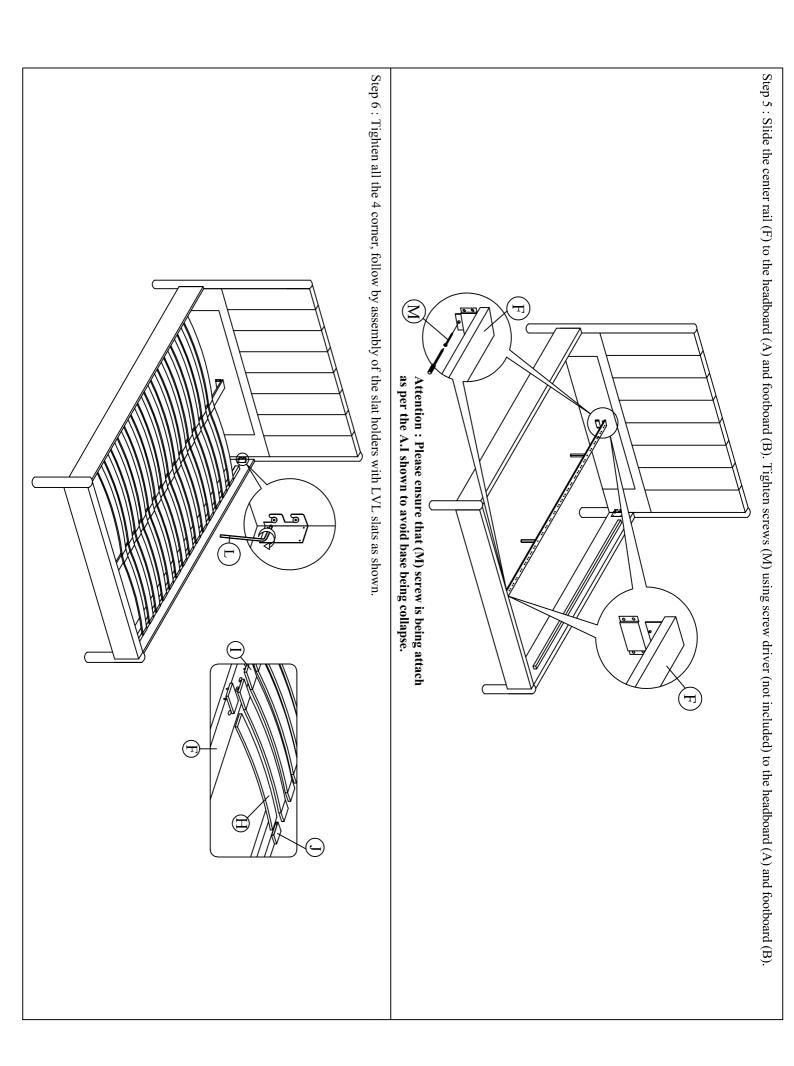

Important Information

Please note that the recommended process for adjusting centre legs when assembling your bed.

Before placing the mattress on the base, please ensure that the <u>SUPPORT LEGS</u> <u>ARE NOT QUITE TOUCHING THE FLOOR</u>. When the bed is then in use the support legs will sit firmly on the solid surface.

PLEASE ENSURE THAT THE LEGS ARE VERTICAL.

DUE TO THE NATURE OF LAMINATE / WOODEN FLOORING WE RECOMMEND THAT YOU PLACE A SMALL PIECE OF NON SLIP MATERIAL UNDER THE LEGS WHICH WILL GIVE YOU THE FLEXIBILITY THE ADJUSTERS NEED.

When moving the bed it is essential that it is <u>LIFTED</u> into the new position. <u>NEVER DRAG</u> the bed as this will move the legs from the vertical position thus weakening the support of the centre rail.

Adhering to the recommended process should ensure that your bed gives you years of trouble free service.