Thank you for your purchase.

Please read the instructions carefully to ensure safe operation of the product. NOTE, you will need 2 people to lift and assemble all parts of this bed frame safely.

Please open the packaging carefully, all parts needed will be located in the packaging. Tools required. - 1 x 4mm Allen Key (Supplied) CAUTION: Keep children away from the work area until the bed is complete Packaging should not be left around children and must be disposed of immediately.

INFORMATION

Due to the size of the product it is advised that it is assembled in the room intended for use. When you are ready to start, make sure you have the correct tools & plenty of space to work. Open the accessory pack and ensure you have all the parts needed. Ensure that this product is fully assembled before use. Check all bolts are tightened and inspect regularly. Please dismantle for transportation.

WARNINGS

DO NOT use power tools to construct this product.

DO NOT over tighten the bolts.


DO NOT stand on this product.

DO use caution when operating, this bed uses a pressurized mechanism.

DO keep hands and fingers clear of the mechanism when opening and closing the bed.

Only use the storage compartment when the Frame is fully raised in the up position.


Please note, the warranty only covers use and assembly of product as directed, any damage to the bedframe which has been deliberate or accidental will void the warranty and replacements and repairs will be chargeable.

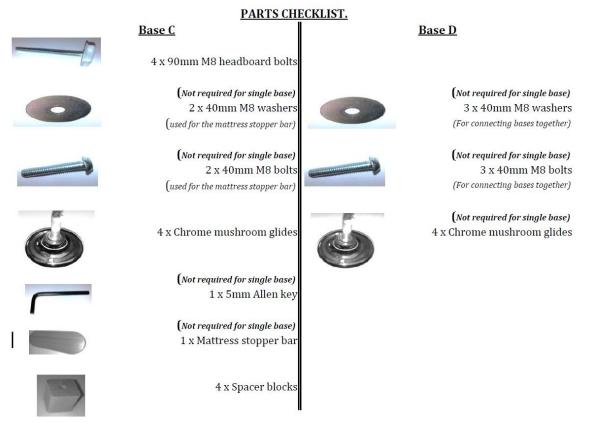

Before freeing the lid, attach the 4x Chrome Mushroom Glides to the bottom of the base(s)


Step 1

Carefully discard the spare fabric holding the lid in place.

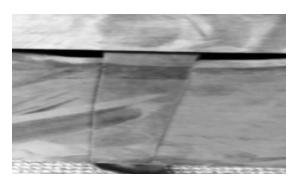

Step 2

Lift up the lid & while the lid is in the upright position attach the gas piston to the hinge mechanism. (Repeat for both bases, only 1 base on a Single -3'0

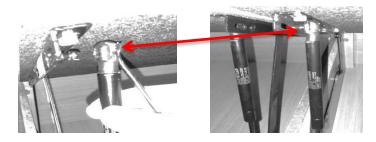

Step 3 – Not required for single base

Join both bases together so that they are flush at the opening end.

Step 4 – Not required for single base

When the bases are flush together lift up the lids (both lids should stay in position now that the pistons are attached) Locate the connecting holes in the frame of the base and attach 2 x 40mm Bolts & washers (do not overtighten)




Step 6 – Not required for single base

Attach the Mattress stopper bar by screwing to the base with 2 x 40mm bolts & washers.




Step 5 – Not required for single base

Locate the hole in the lid and using the 5mm Allen key and 1 x 40mm bolt & washer fix the lids together.

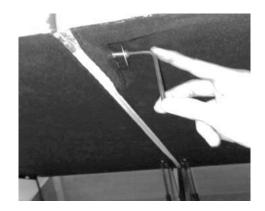

Step 7

Attach headboard to the head of the base with the x M8 x 90mm headboard bolts & spacer blocks.



Note: The pistons in this product are very strong and it may appear that the pistons are stiff when opening and closing the frame, this is normal, once the frame as been used a few times the action will become easier.

Hints & tips: To operate the ottoman lid always use two hands from the side of the bed. You must ensure the mattress is on the base before lifting, failure to do so may result in **injury.** If removing the mattress secure the lid first to avoid the possibility of the lid springing up.