ASSEMBLY INSTRUCTION FOR WC 3-7480L-WSR-BW-75"

Note:

*Read Instructions carefully.

*Carefully identify each component especially those that are similar.


*Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.

*Co not over tighten the screws or bolts when assembling.









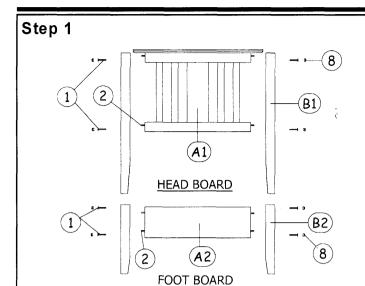

Assemble the bed frame component as shown.

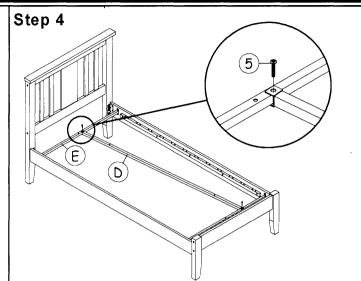


Fix center bar 'D' to the cross bar 'E' with bolt '5' as shown.

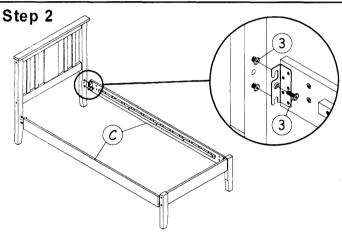


Fix bolt '3' (upper & lower bolts) into position on wood post as shown. After that, hook the side rail to the bolt and fix center bolts '3' as shown.


Important note: Do not tighten the bolts yet!

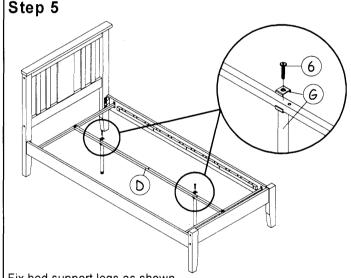

Fix bed support legs as shown.

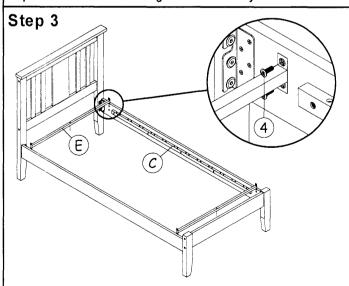

Fix cross bar 'E' to the side rail with bolts '4' as shown.

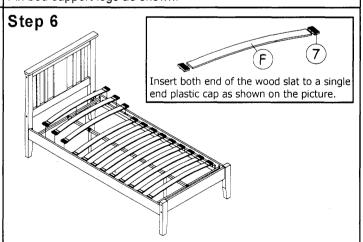

Once wood slats have been inserted into the plastic caps, fix one end of wood slat into the hole of side rail by pressing it accordingly to the defaults holes and the other end to the other side rail holes. Ensure the plastic cap's pin aimed to the hole.

Please follow our assembly instruction procedure for easier assemble.

Page 1/2 21 / 11 / 13 REV. 1

HARDWARE & PART LIST FOR WC 3-7480L-WSR-BW-75"

NO.	PART	QTY.	NO.	HARDWARE		QTY.
А	1 HEAD FRAME	1 PC	1	(a)	JCBC BOLT M6 x 80mm	8 PCS
	2 FOOT FRAME	1 PC	2		WOOD DOWEL M8 x 30mm	8 PCS
В	1 HEAD WOOD POST L/R	2 PCS 2 PCS	3		JCBC BOLT M8 x 25mm	12 PCS
	2 FOOT WOOD POST L/R		4		JCBC BOLT M6 x 15mm	8 PCS
С	SIDE RAIL	2 PCS	5	(a) Mariante de la constante d	JCBC BOLT M6 x 30mm	2 PCS
D	CENTER BAR		6	O Marie Comment	JCBC BOLT M8 x 40mm (ASSEMBLED)	2 PCS
		1 PC	7		SINGLE END PLASTIC CAP	24 PCS
E	CROSS BAR	2 PCS	8	0	WOOD BUTTON	8 PCS
F	WOOD SLAT	12 PCS	9		ALLEN KEY - M6	1 PC
			10		ALLEN KEY - M8	1 PC
G	SUPPORT LEG	2 PCS				J