


ASSEMBLY INSTRUCTION

Note:


- Read Instructions carefully.
- Carefully identify each component especially those that are similar.
- Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.
- Do not over tighten the screws or bolts when assembling.



TOOL REQUIRED




Step 1

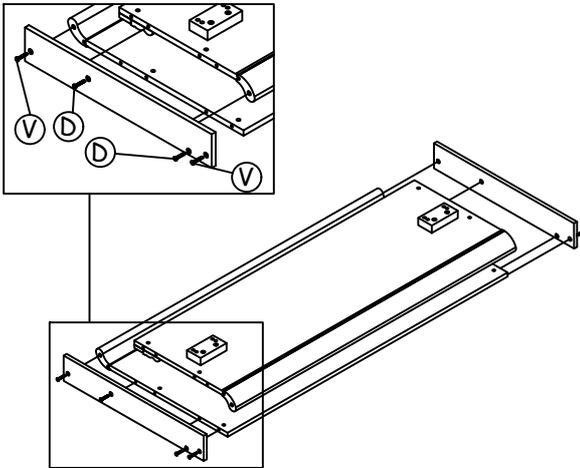


Move out the packing method by used the JCBC Bolt as shown and than screw will be used again for assemble hardware parts.

Step 3

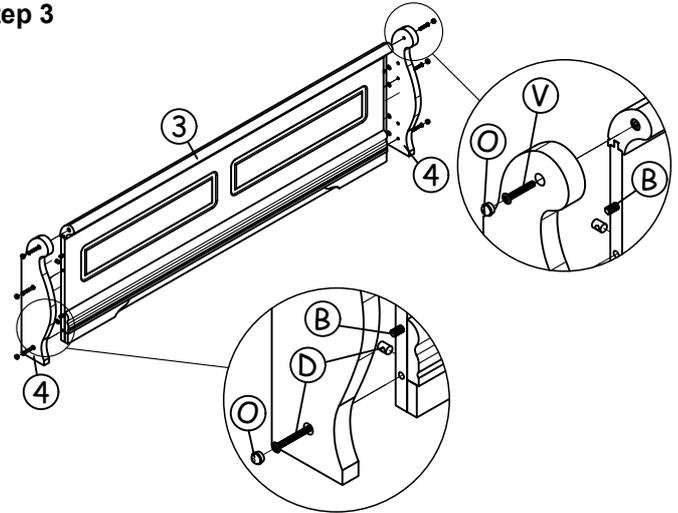


Fix the footboard frame panel (3) to the footboard wood post (L/R) (4) with hardware parts as shown.

Step 2

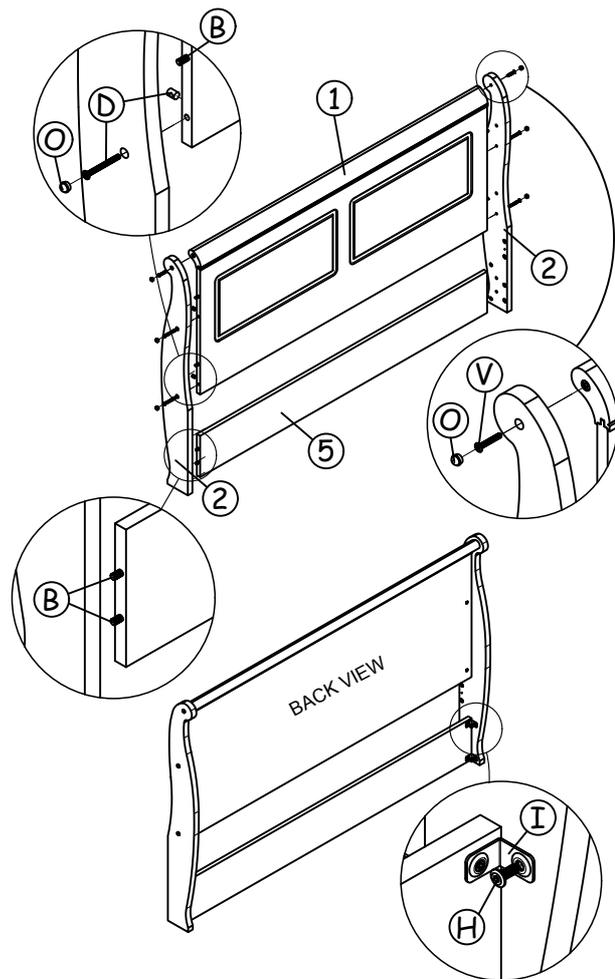


Fix the headboard frame panel (1) and headboard back panel (5) to the headboard wood post (L/R) with hardware parts as shown.

Step 4

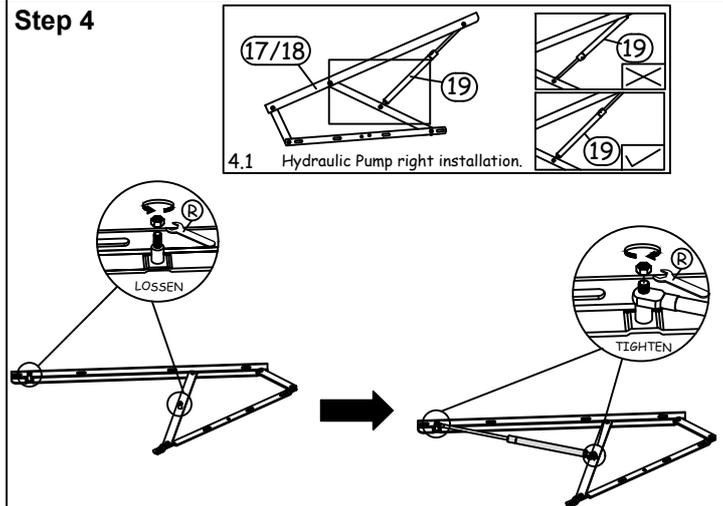

Firstly, Loosen the **Hex Nut** from the Left & Right Hydraulic Base Support ,then fix the hydraulic pump to each hydraulic base using the same **Hex Nut** & **V**. (shown in diagram 4.1.)


Step 5

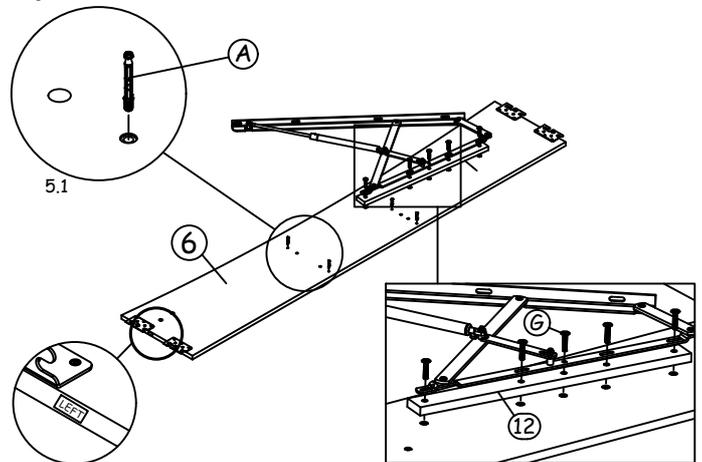

Fix the left & right hydraulic spacer together with hydraulic base supporter to the both side rails using bolts **G** and than screw the minifix part **A** to the both side rails as shown in diagram 5.1.


Please follow our assembly instruction procedure for easier assemble.

Step 6

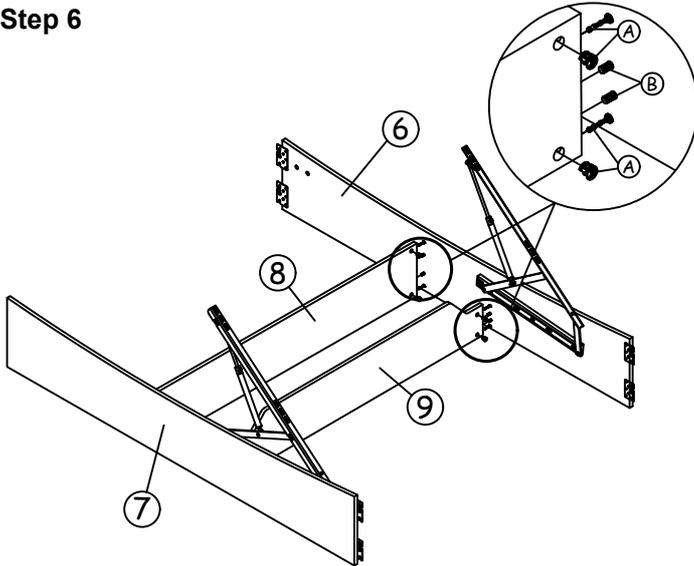


Join together the left side rail (6) and right side rail (7) with the centre storage panels ① (8) and centre storage panels ②(9) by using hardware parts **A** and **B**.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Step 9

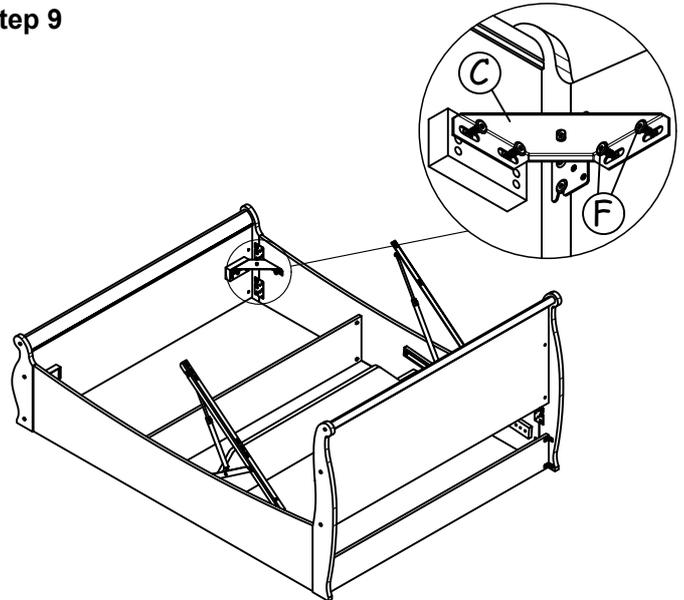


Fix metal corner block **C** to the edge of footboard and side rails with bolt **F** as shown.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Step 7

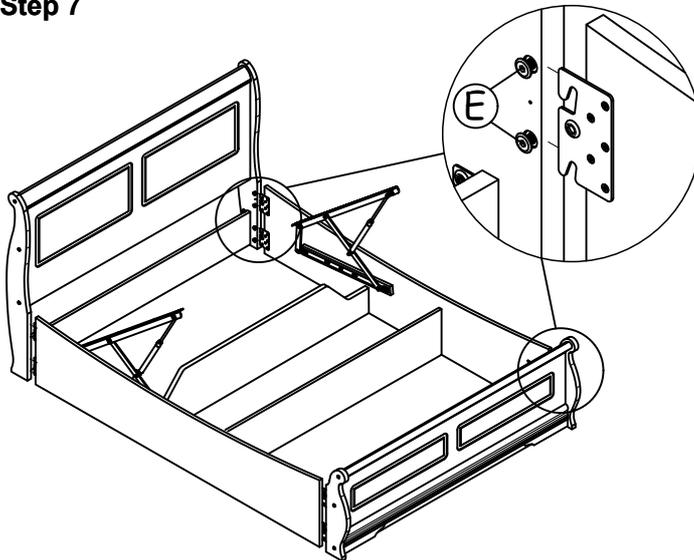


Attach the headboard frame (1) and footboard (4) using hardware part **E** than tighten up.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Step 10

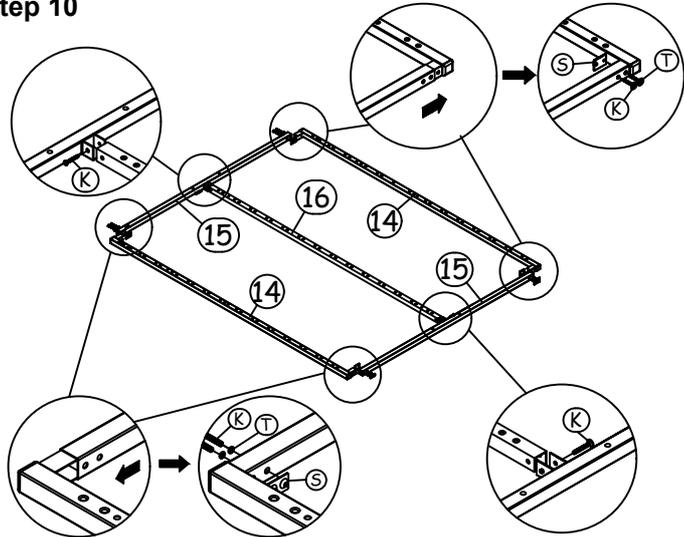


Join together all the bed base parts (14),(15), and (16) by using hardware parts **K,S,T**.
Important note: Please assemble follow arrow direction.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.

Step 8

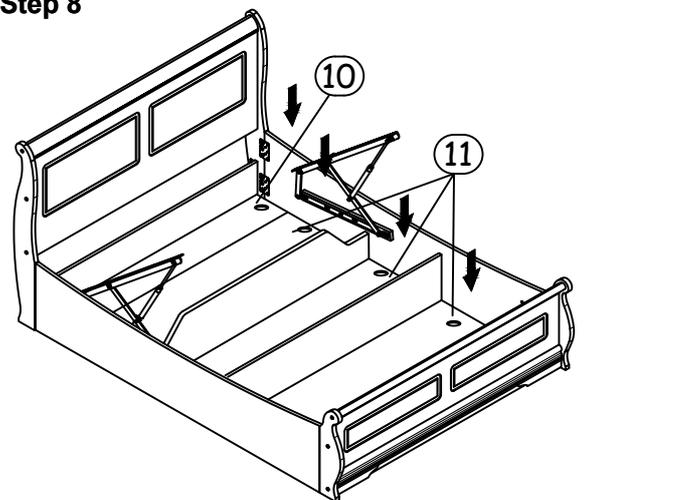

Insert the large base panel (11) and small base panel (10).
DO NOT use any power tools as this may damage the frame and will invalidate any claim.



Step 11

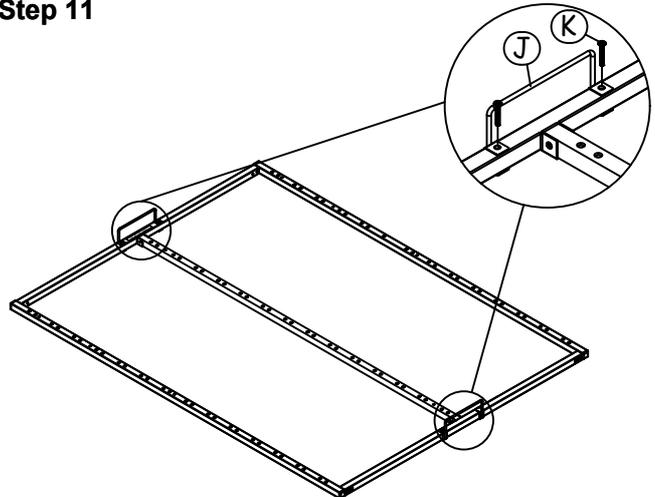

Attach hardware parts **J** using hardware part **K**.
Important note: Please assemble follow arrow direction.
DO NOT use any power tools as this may damage the frame and will invalidate any claim.


Please follow our assembly instruction procedure for easier assemble.

Step 12

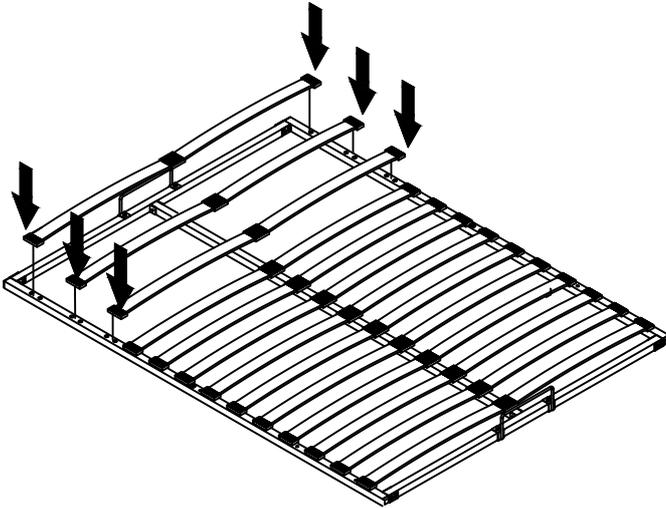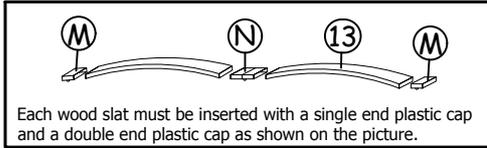


Insert the slats (13) to hardware parts **M** and **N** then press into the base making sure they are secure.

Step 13

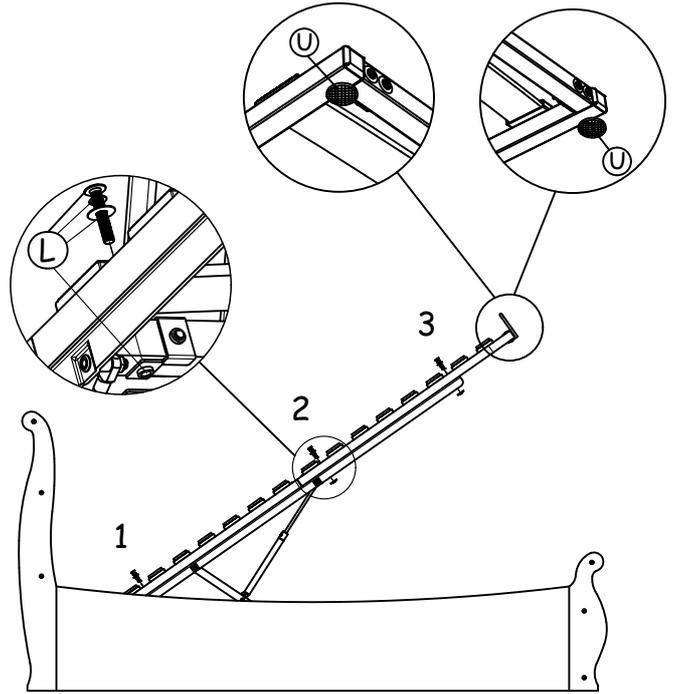




Assemble the bed base on the right & left hydraulic frame and fix bolts **L** starting from '1' to '3' as shown and then stick it the self adhesive **U** as shown.
Important note : **Do not tighten the bolts yet!**

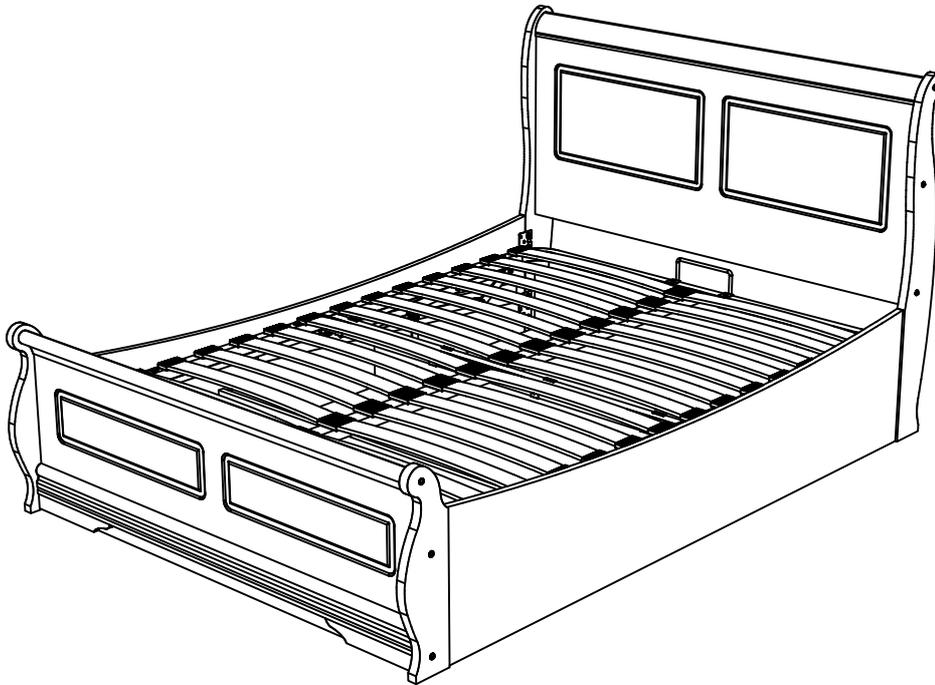

THE BED HAS BEEN FULLY ASSEMBLED.

Please follow our assembly instruction procedure for easier assemble.

HARDWARE & PART LIST




PART LIST			HARDWARE LIST		
NO.	ITEM	QTY.	NO.	ITEM	QTY.
1	 HEADBOARD FRAME	1 PC	A	 MINI FIX	8 PCS
2	 HEADBOARD WOOD POST (L/R)	2 PCS	B	 8 X 30 mm WOODEN DOWEL	20 PCS
3	 FOOTBOARD FRAME	1 PC	C	 METAL CORNER BLOCK	2 PCS
4	 FOOTBOARD WOOD POST (L/R)	2 PCS	D	 M6 X 50mm + BARREL NUT RBW (Assembled 4 pcs)	8 PCS
5	 HEADBOARD BACK PANEL	1 PC	E	 M8 X 20 mm JCBB BOLT RBW	16 PCS
6	 SIDERAIL (L)	1 PC	F	 M8 X 15 mm JCBB BOLT RBW	8 PCS
7	 SIDERAIL (R)	1 PC	G	 M8 X 35 mm JCBB BOLT RBW	10 PCS
8	 CENTRE STORAGE PANEL - 1	1 PC	H	 M6 X 15 mm JCBC BOLT RBW	8 PCS
9	 CENTRE STORAGE PANEL - 2	1 PC	I	 L-BRACKET 30 X 30	4 PCS
10	 BOTTOM BASE PANEL - SMALL	1 PC	J	 BASE HANDLE	2 PCS
11	 BOTTOM BASE PANEL - BIG	3 PCS	K	 M6 X 40 mm JCBC BOLT BLK	14 PCS
12	 HYDRAULIC ARM SPACER	2 PCS	L	 M8 X 45 mm JCBB BOLT RBW WITH NUT, BRACKET, SPRING WASHER AND FLAT WASHER	6 PCS
13	 SLAT	28 PCS	M	 SINGLE SLAT CAP	28 PCS
14	 LEFT & RIGHT SIDE METAL BAR	2 PCS	N	 DOUBLE SLAT CAP	14 PCS
15	 HEAD & FOOT END METAL BAR	2 PCS	O	 WOODEN BUTTON	12 PCS
16	 CENTER METAL BAR	1 PC	P	 M4 ALLEN KEY	1 PC
17	 LEFT HYDRAULIC BASE SUPPORT c/w PUMP STOPPER	1 PC	Q	 M5 ALLEN KEY	1 PC
18	 RIGHT HYDRAULIC BASE SUPPORT c/w PUMP STOPPER	1 PC	R	 M12.8 SPANNER	1 PC
19	 HYDRAULIC PUMP	2 PCS	S	 WASHER BRACKET	4 PCS
			T	 FLAT WASHER BLK	8 PCS
			U	 SELF ADHESIVE 4mm X 35mm	2 PCS
			V	 M6 X 35 mm JCBC BOLT RBW (Assembled)	4 PCS

CAUTION : KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN

Please follow our assembly instruction procedure for easier assemble.

CAUTION :

PLEASE USE HYDRAULIC PUMP STOPPER FOR SAFETY PURPOSE.

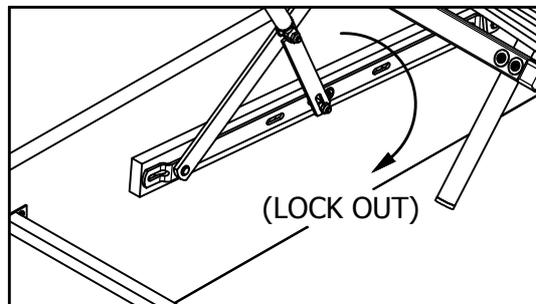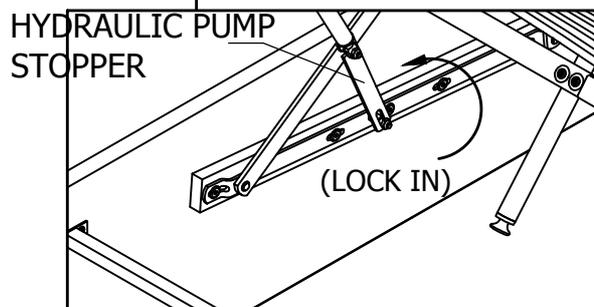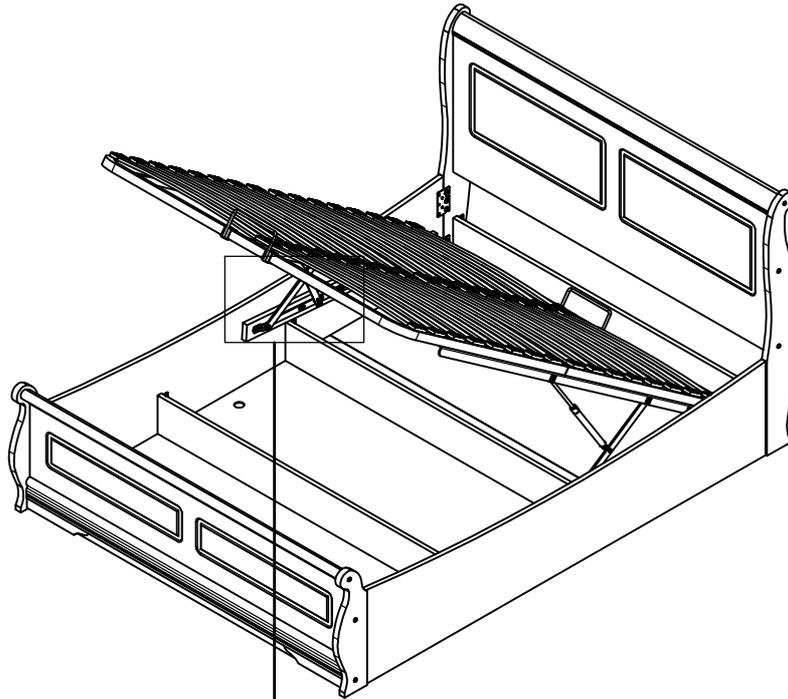

" IMPORTANT NOTE "

WHEN THE BED IS BUILT AND THE MATTRESS FRAME IS AT 45 DEGREE
PLEASE PLACE THE MATTRESS ON THE BED.
PLEASE NOTE THAT THE WEIGHT OF THE MATTRESS IS REQUIRED TO
HELP CLOSE THE BED.
TO LOWER THE SLEEPING PLATFORM STAND AT THE FOOT END OF THE
BED AND PUSH SHARPLY
DOWNWARDS USING BOTH HANDS.

