

ASSEMBLY INSTRUCTION FOR OTO-3-GLENEAGLE-BW-75-W


Note:

- ☑ Read Instructions carefully.
- ☑ Carefully identify each component especially those that are similar.
- ☑ Separate and identify each component from the hardware pack and rest each one in its proper location before fastening.
- ☑ Do not over tighten the screws or bolts when assembling.




2 Persons

TOOL REQUIRED

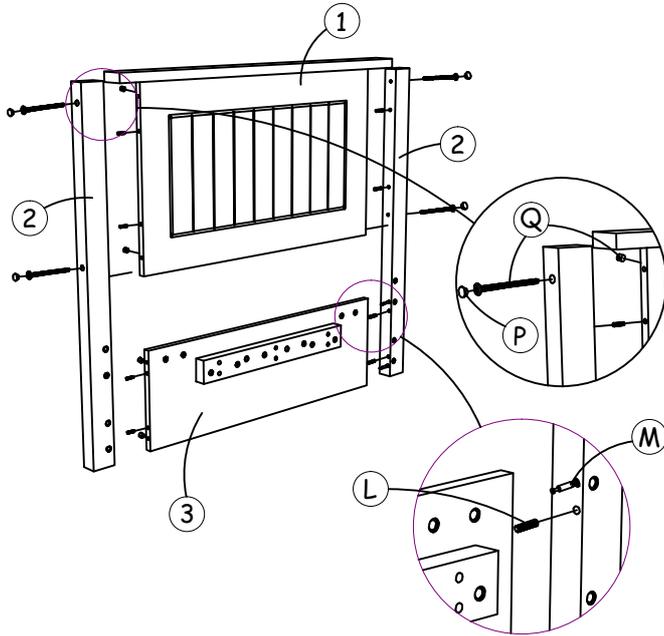


Fix headboard with hardware screws as shown.

Step 3

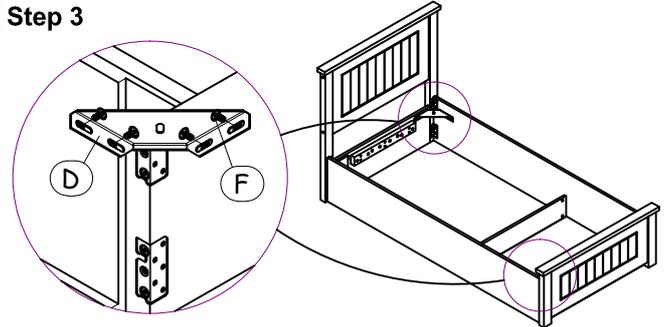

Select & Ensure your bed base opening side before fix the metal corner block & hydraulic base support. Fix metal corner block 'D' to the edge of footboard and side rails with bolts 'F' as shown.

Step 4

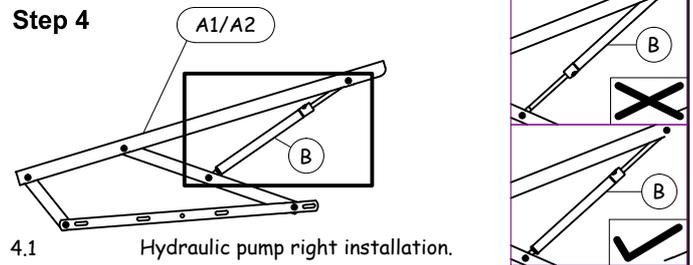


4.1 Hydraulic pump right installation.


Firstly, fix the hydraulic pump to each hydraulic base support as shown in diagram 4.1.

Next, Ensure your hydraulic opening side, locate your hydraulic base support trough the JCBC holes L1,L2,L3,&L4 or R1,R2,R3,&R4 at the headboard and footboard as shown in diagram 4.2.


OPTION 1 (LEFT OPENING)

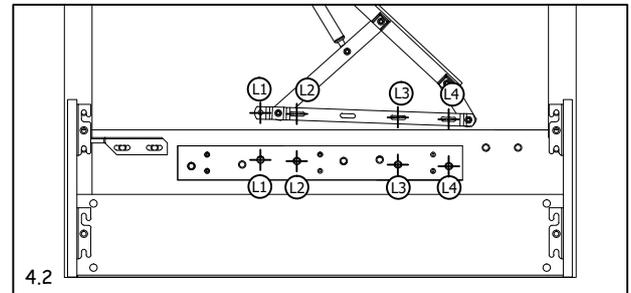

4.2 HYDRAULIC BASE SUPPORT INSTALLATION FOR **OPTION 1**

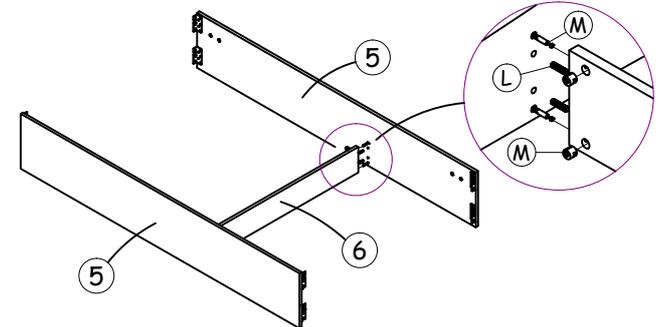


Assemble the left & right side rails to the center panel with minifix screws as shown.

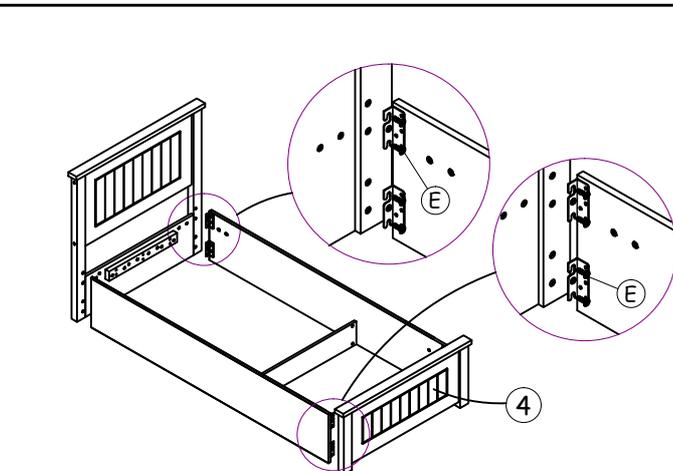


Fix headboard and footboard to the side rails with bolts 'E' as shown.

(LEFT OPENING)



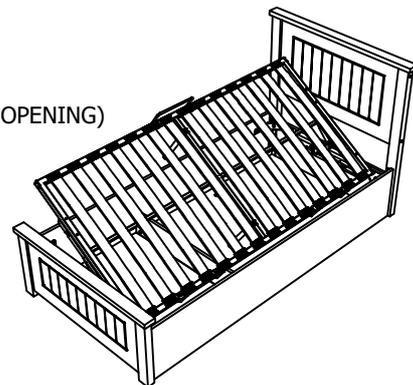


Please follow our assembly instruction procedure for easier assemble.

OPTION 2 (RIGHT OPENING)

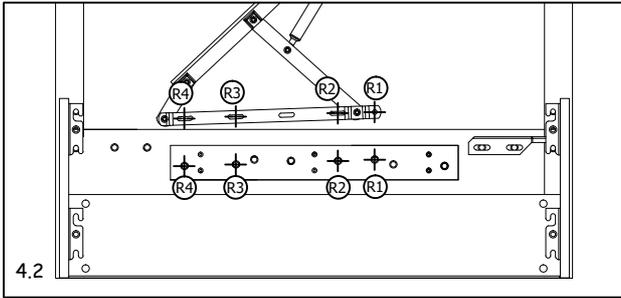


HYDRAULIC BASE SUPPORT INSTALLATION FOR **OPTION 2**

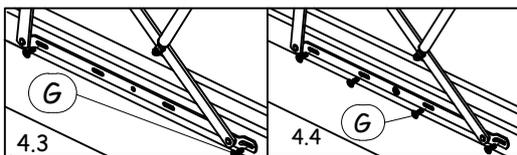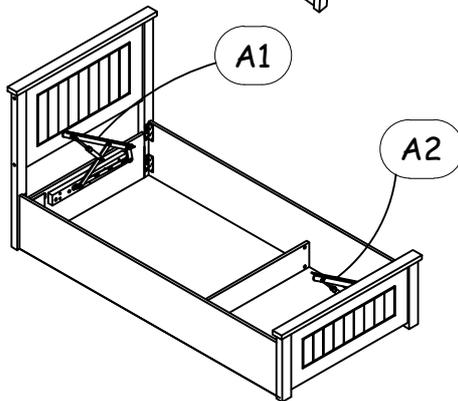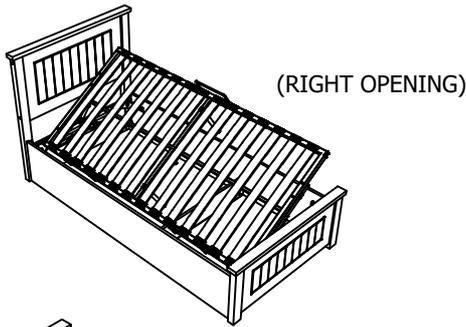


Then, fix bolts 'G' at round end hole first (L1/R1) as shown in diagram 4.3 and do not tighten yet. Finally, fix all bolts and tighten as shown in diagram 4.4.

Step 5

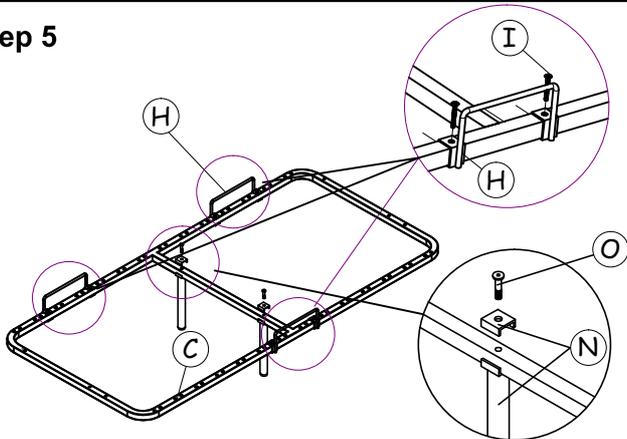


Fix base handles to the bed base with bolts 'I' and then fix support leg to the bed base with bolts 'O' as shown.

Step 6

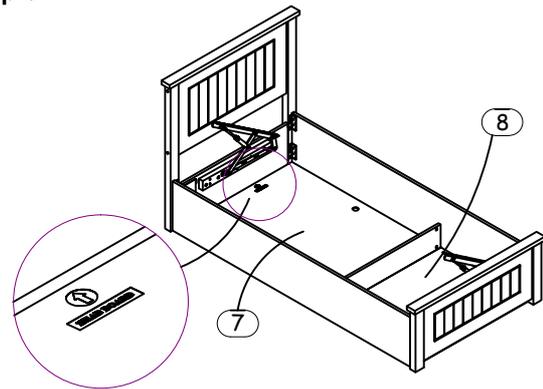


Place panels '7','8' as shown.

Step 7

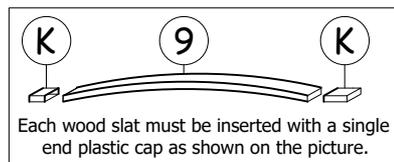


Each wood slat must be inserted with a single end plastic cap as shown on the picture.

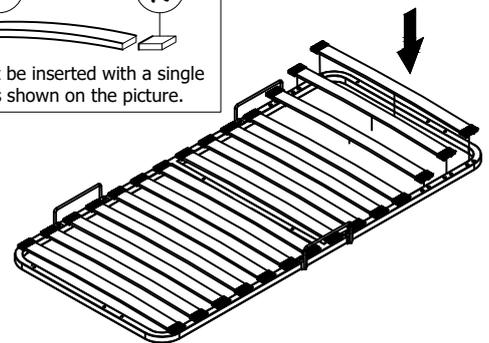


Place wood slats with plastic caps as above drawing. Then, fix it on the bed base by pressing it accordingly to the default holes. Ensure the plastic cap's pin is aimed to the hole.

Step 8

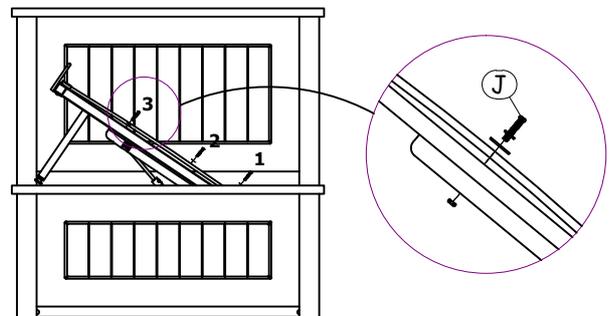

Assemble the bed base on the right & left hydraulic base support and fix bolts starting from '1' to '3' as shown. **Important note : Do not tighten the bolts yet!**










Step 9

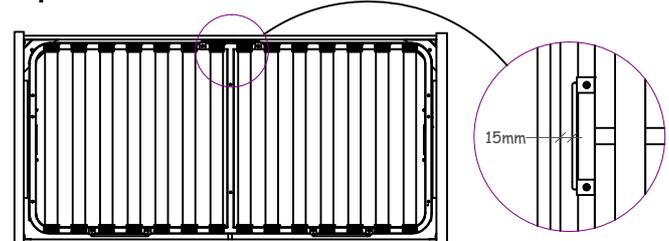

Adjust the bed base, please make sure distance with the front footboard approximately 10 -15mm gap as shown. **Important note : Tighten all screws.**

Please follow our assembly instruction procedure for easier assemble.

HARDWARE & PART LIST FOR OTO-3-GLENEAGLE-BW-75-W-147

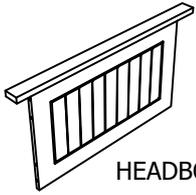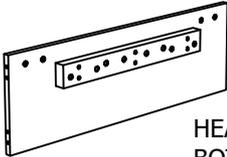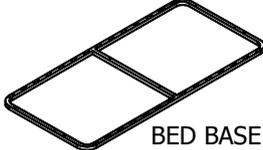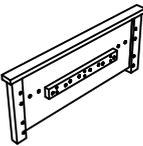PART LIST			HARDWARE LIST		
NO.	ITEM	QTY.	NO.	ITEM	QTY
1	 HEADBOARD FRAME	1 PC	A	 1.HYDRAULIC BASE SUPPORT (L) 2.HYDRAULIC BASE SUPPORT (R)	2 PCS
2	 HEADBOARD WOOD POST L/R	2 PCS	B	 HYDRAULIC PUMP	2 PCS
3	 HEADBOARD BOTTOM PANEL	1 PC	C	 BED BASE	1 PC
4	 FOOTBOARD	1 PC	D	 ML-CB (METAL CORNER BLOCK)	2 PCS
5	 SIDE RAIL L/R	2 PCS	E	 JCBC BOLT M8 x 25MM	16 PCS
6	 CENTER PANEL	1 PC	F	 JCBC BOLT M8 x 15MM	8 PCS
7	 BOTTOM BASE BIG	1 PC	G	 JCBC BOLT M8 x 20MM	8 PCS
8	 BOTTOM BASE SMALL	1 PC	H	 BASE HANDLE	3 PCS
9	 WOOD SLAT	14 PCS	I	 JCBC BOLT M6 x 40MM	6 PCS
			J	 M8 x 40MM RH BOLT c/w HEX NUT, SPRING & FLAT WASHER	6 PCS
			K	 SINGLE END PLASTIC CAP	28 PCS
			L	 WOOD DOWEL M8 x 30mm	12 PCS
			M	 MINIFIX	8 PCS
			N	 SUPPORT LEG	2 PCS
			O	 JCBC BOLT M8 x 40MM (ASSEMBLED)	2 PCS
			P	 WOOD BUTTON	4 PCS
			Q	 JCBC BOLT M6 x 100MM BARREL NUT	4 PCS
			R	 ALLEN KEY - M6	1 PC
			S	 ALLEN KEY - M8	1 PC
			T	 M12.8 SPANAR	1 PC
			U	 M14 SPANAR	1 PC

CAUTION : KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN

Please follow our assembly instruction procedure for easier assemble.