

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction. Carefully open the pack supplied and check the contents against the parts and fittings check list.


Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

Please ensure that the packaging is disposed of in a safe environmentally friendly way.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children during assembly, to avoid the danger of choking.

IMPORTANT: BEFORE STARTING TO ASSEMBLE THE BED - PLEASE READ THESE INSTRUCTIONS CAREFULLY

### Parts Identification

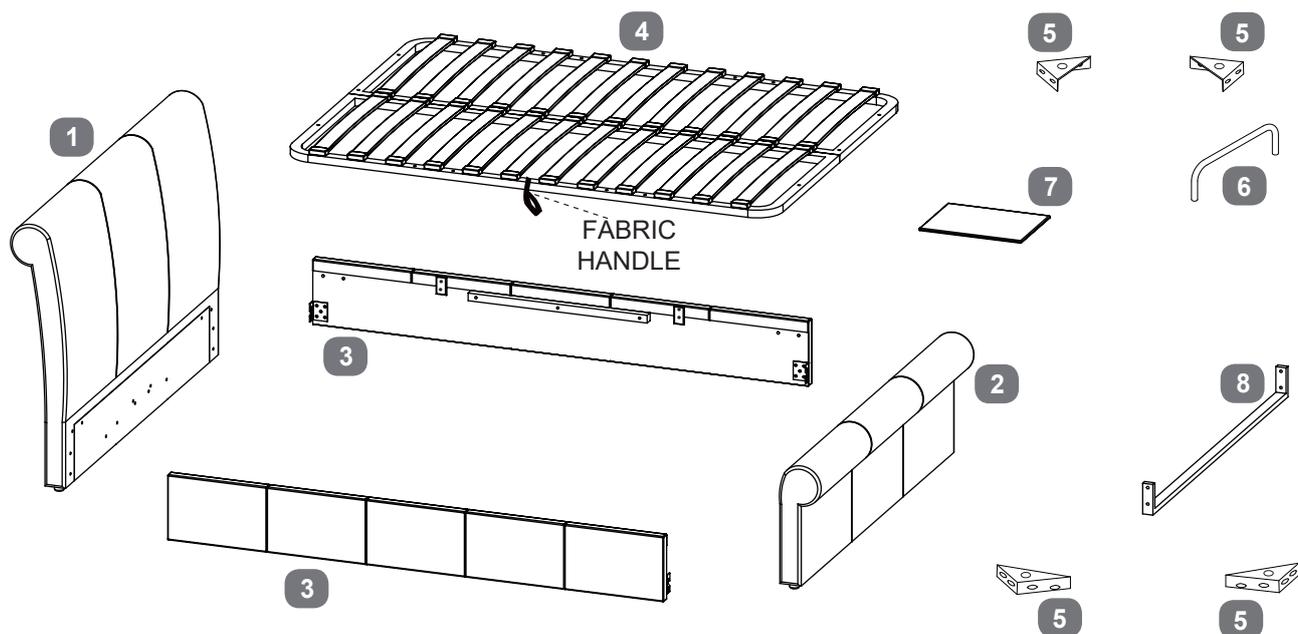

### Parts Checklist

Ref.	Description	Qty	Ref.	Description	Qty
1	Headboard	1	5	Angle Brackets	4
2	Footboard	1	6	Mattress Stoppers	2
3	Side Panels	2	7	Fabric Base Cover	1
4	Metal Slat Frame	1	8	'U' Shaped Cross Bar	1

## Fittings Checklist

### HARDWARE NEEDED FOR FITTING GAS-LIFT MECHANISMS (PACK A)

Code	Description	Qty	Code	Description	Qty
A	Bolts (M8x30mm) for fitting gas-lift mechanisms (J) to headboard & footboard (1&2).	x8	J (a)	Gas-Lift Mechanisms	x1
B	Spring Washers (for M8 bolts)	x8			
C	Flat Washers (for M8 bolts)	x8			
D	Allen Key (for M8 bolt)	x1	J (b)		x1


### HARDWARE NEEDED FOR BED ASSEMBLY (PACK B)

Code	Description	Qty	Code	Description	Qty
A	Bolts (M8x30mm) for fitting side panels (3) to headboard & footboard (1&2).	x24	C	Flat Washers (for M8 bolts)	x24
B	Spring Washers (for M8 bolts)	x24	K	Screws (4x45 for fitting 'U' shaped cross bar (8) to side panels (3))	x4


### HARDWARE FOR FITTING METAL SLAT FRAME (PACK C)

Code	Description	Qty	Code	Description	Qty
B	Spring Washers (for M8 bolts)	x6	G	Flange Lock-Nuts (M8) for gas-lift pistons	x2
C	Flat Washers (for M8 bolts)	x16	H	Spanner (for M8 nut)	x1
E	Bolts (M8x50mm) for fitting metal slat frame (4) to gas-lift mechanisms (J)	x6	L	Bolts (M8x20mm) for fitting metal connection plate (M) to metal slat frame (4)	x4
F	Nuts (for M8 slat frame bolts)	x6	M	Metal Connection Plates	x2

### Additional Tools Required

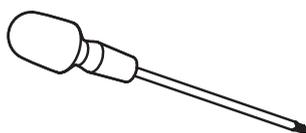

Cross-head Screwdriver

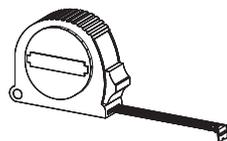

Tape Measure



Please retain your assembly instruction and tools provided for future use. Periodically check that all bolts are still tight.

### Care & Maintenance

In the unlikely event of missing or damaged parts, please contact your retailer. Please have this guide at hand quoting the part code reference numbers shown when requesting spare or replacement parts.


Assembly requires two persons.




1.5 Hr

Approximate time to assemble this product




Stage  
1a

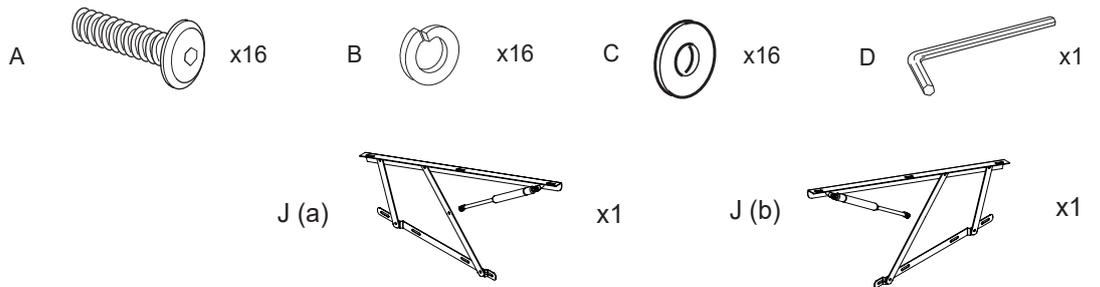

LIFT FROM LEFT

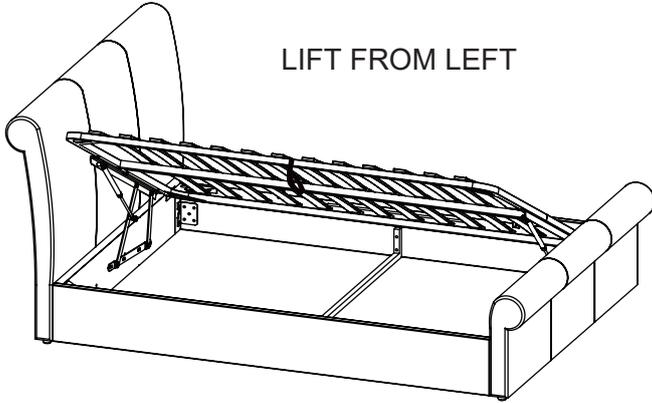


CHECK THIS DIAGRAM AND IF ACCESS IS NEEDED FROM LEFT SIDE OF BED, FIT BOTH LIFT MECHANISMS TO **RIGHT** SIDE OF THE BED. BOLT INTO THE HOLES MARKED (R) WITH BLUE LABELS. THE MECHANISMS ARE LABELED J (a) & J (b) PLEASE CAREFULLY FOLLOW THE DIAGRAM BELOW.

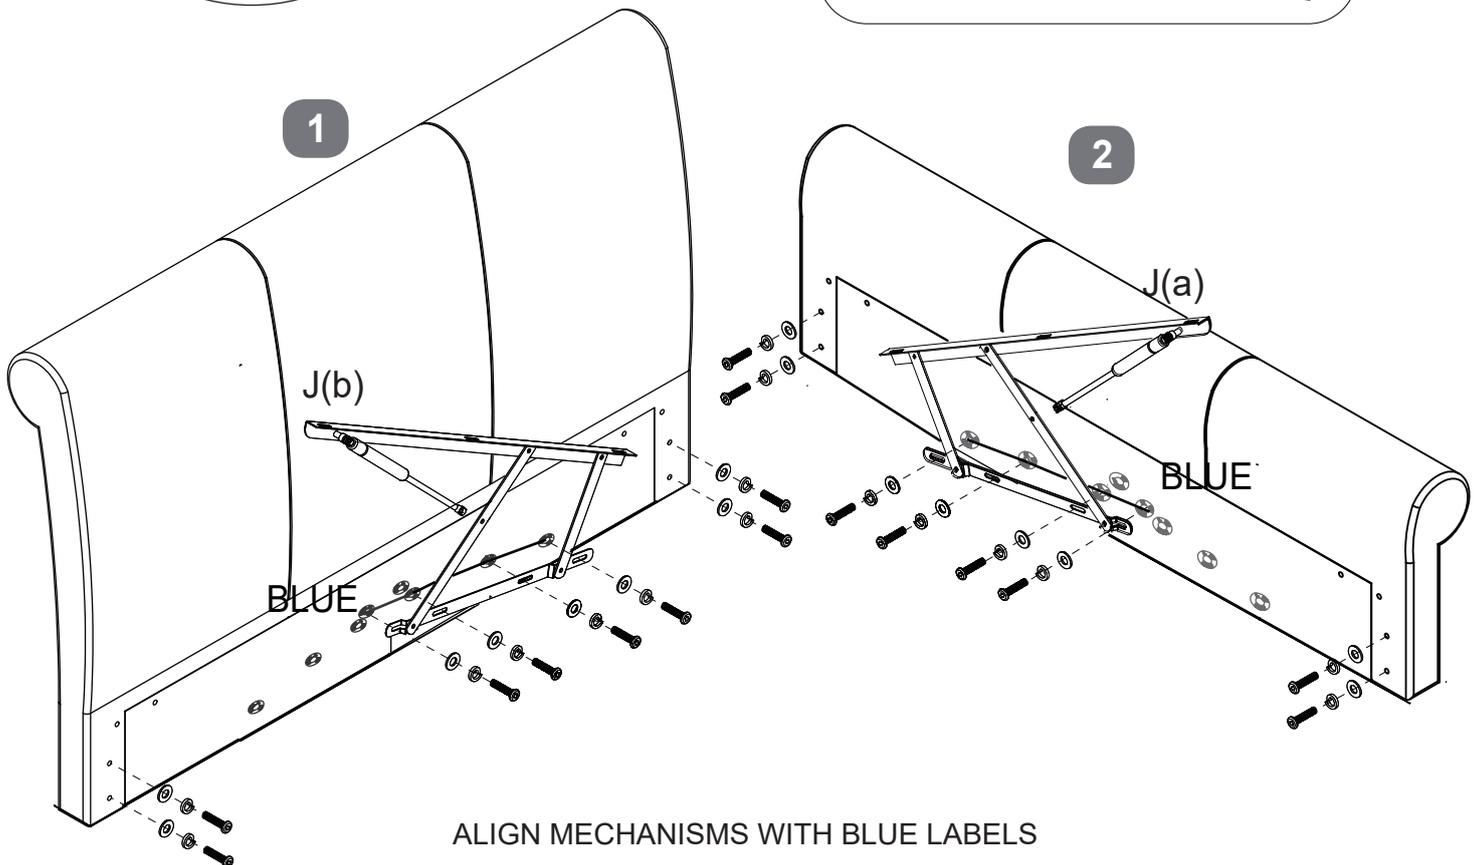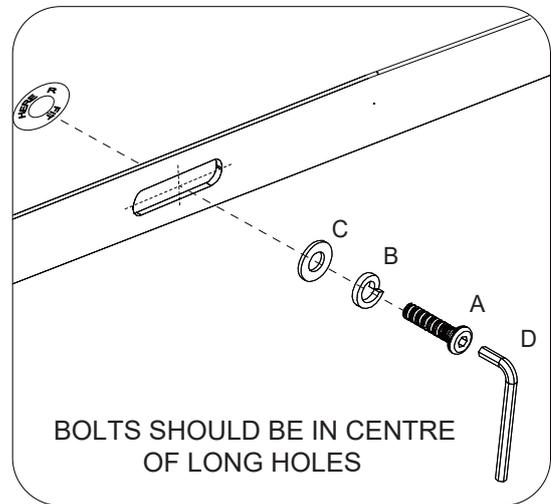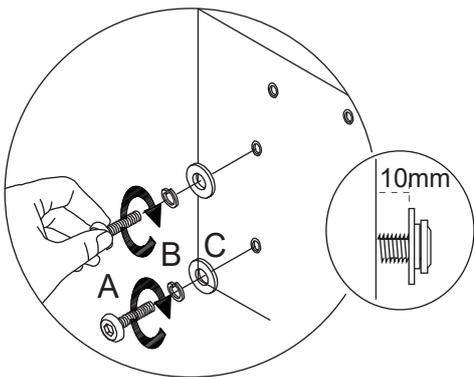


ALIGN MECHANISMS WITH BLUE LABELS




Stage  
1b

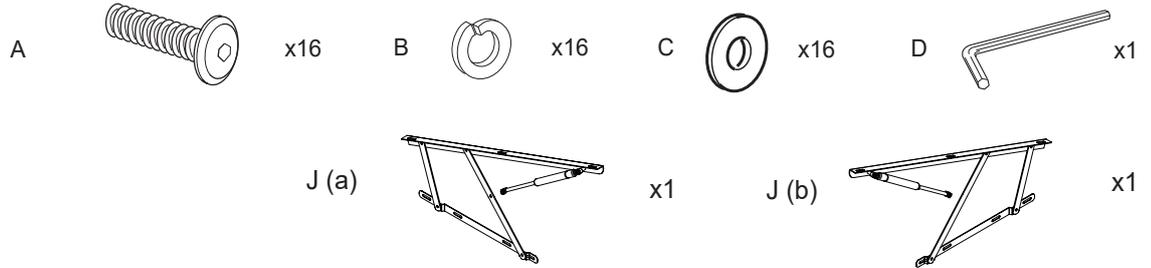

LIFT FROM RIGHT

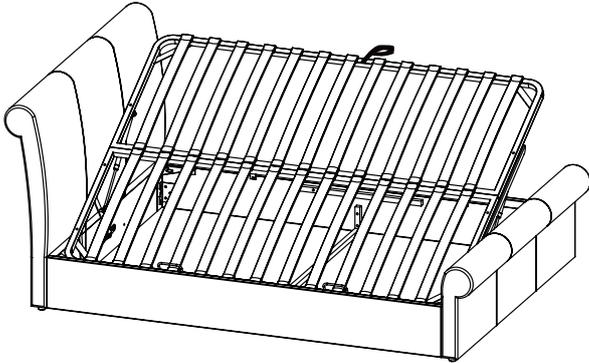

CHECK THIS DIAGRAM AND IF ACCESS IS NEEDED FROM RIGHT SIDE OF BED, FIT BOTH LIFT MECHANISMS TO **LEFT** SIDE OF THE BED. BOLT INTO THE HOLES MARKED (L) WITH RED LABELS. THE MECHANISMS ARE LABELED J (a) & J (b) PLEASE CAREFULLY FOLLOW THE DIAGRAM BELOW.

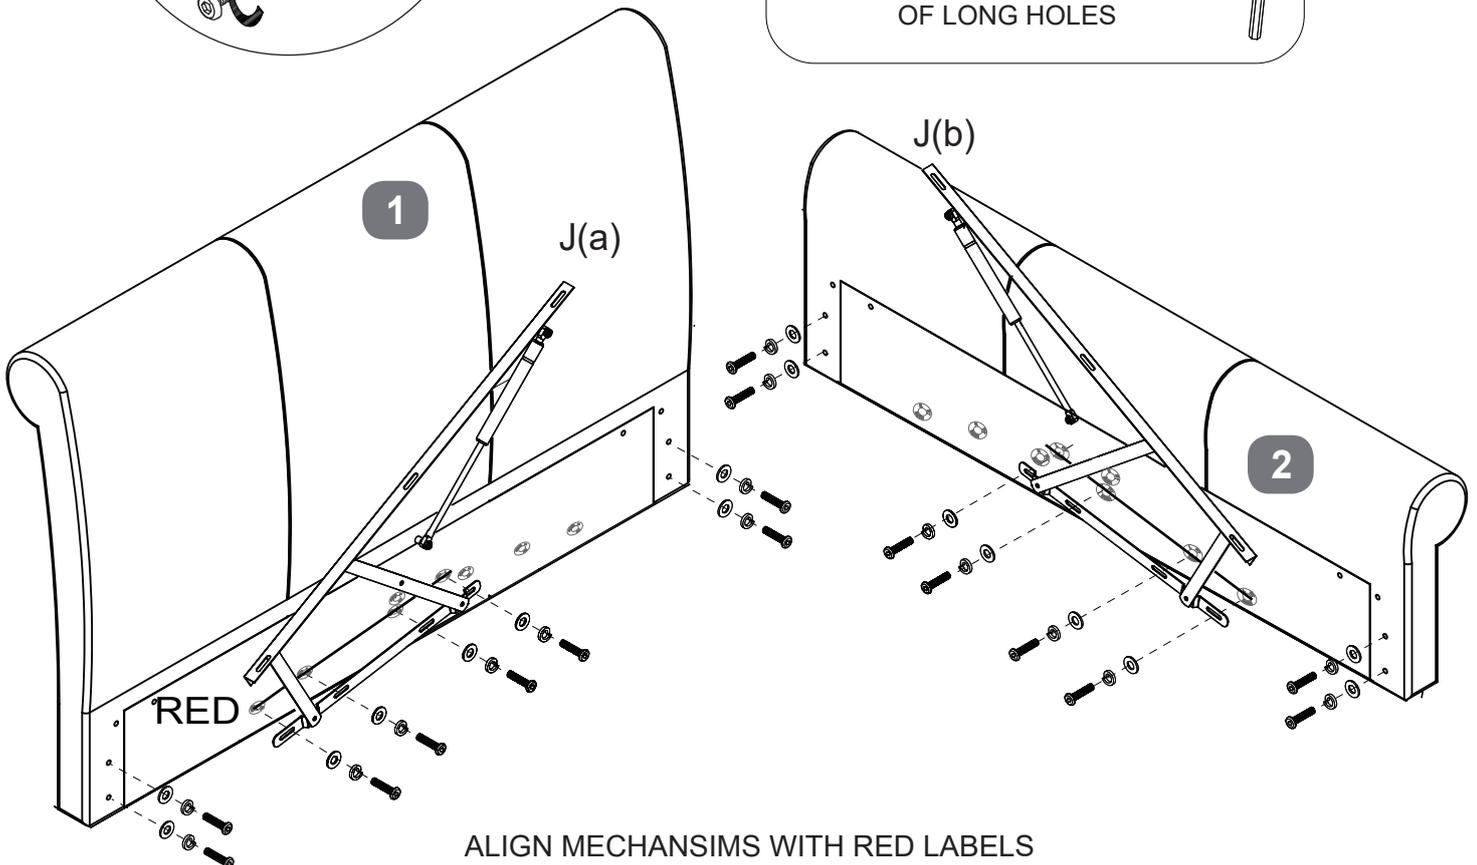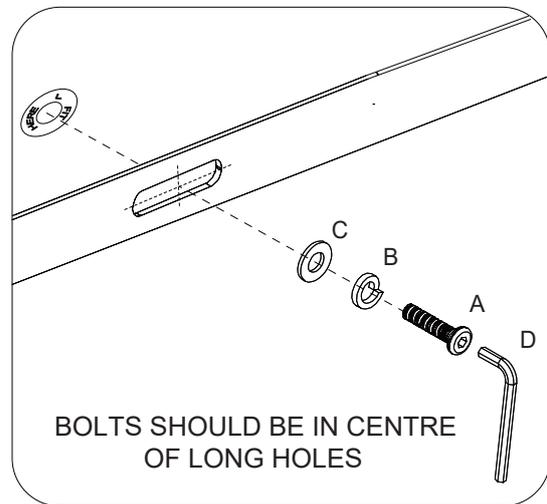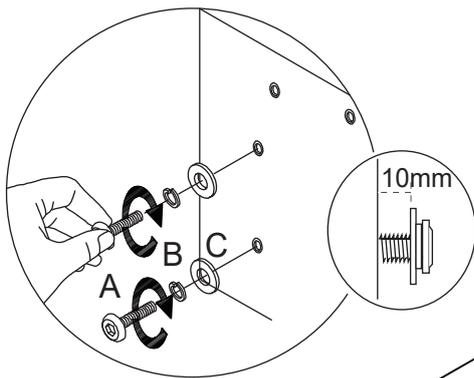


# Bed Assembly - Use Pack 'B'

Stage

2

1

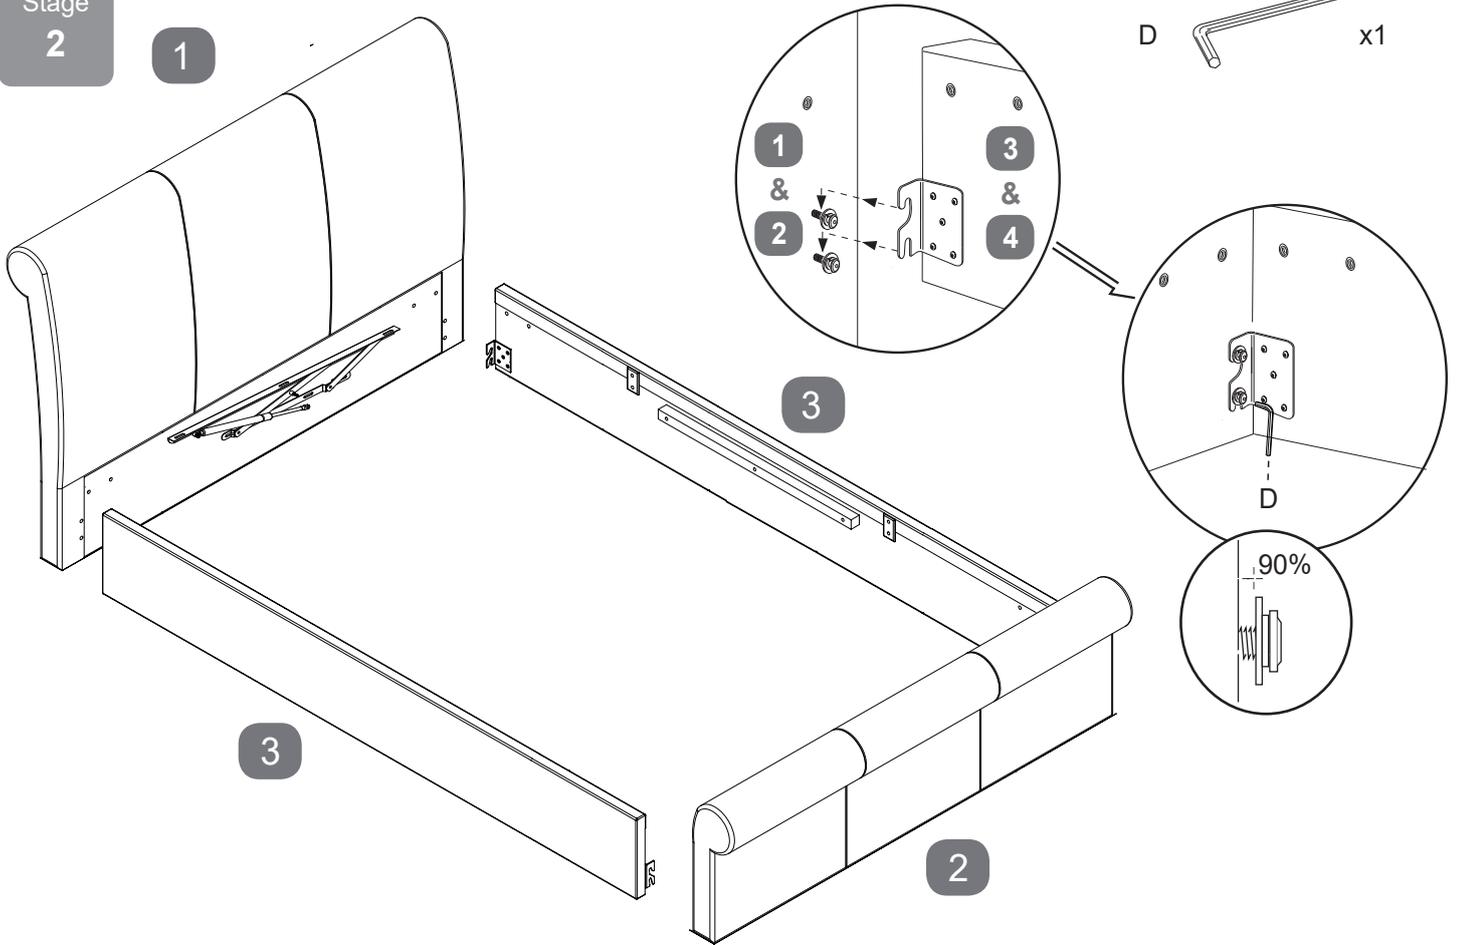

D

x1

1

&

2

3

&

4

3

D

90°

3

2

Stage

3

A



x16

B




x16

C



x16

D

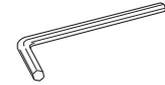


x1

K



x4

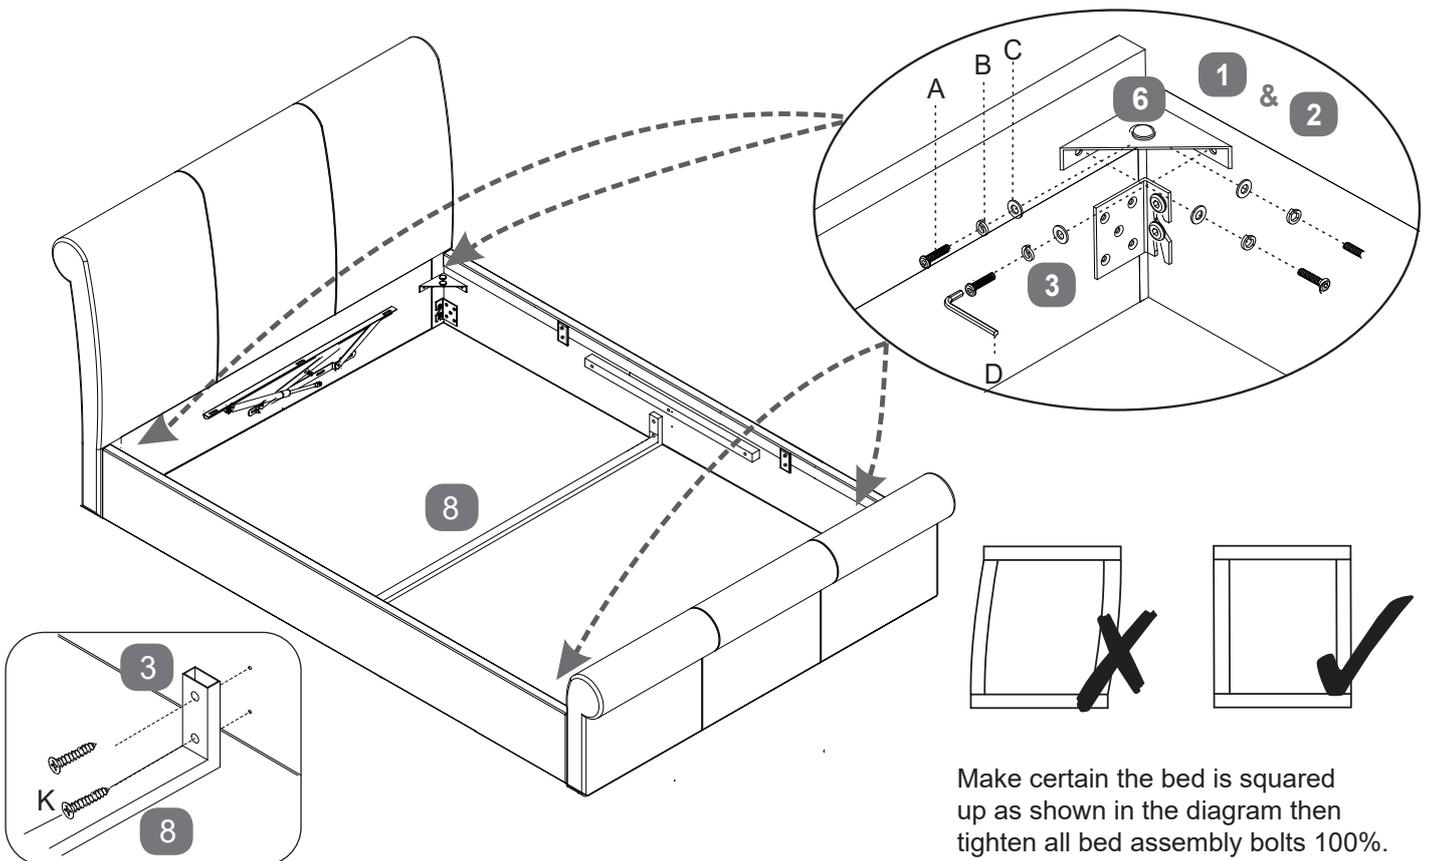


Make certain the bed is squared up as shown in the diagram then tighten all bed assembly bolts 100%.

## Bed Assembly

Stage

4



Turn the bed on its side and using the velcro tape attach the Fabric Base Cover (7) carefully to the bottom of the side-panels, headboard & footboard. Make sure fabric is fitted evenly all round.

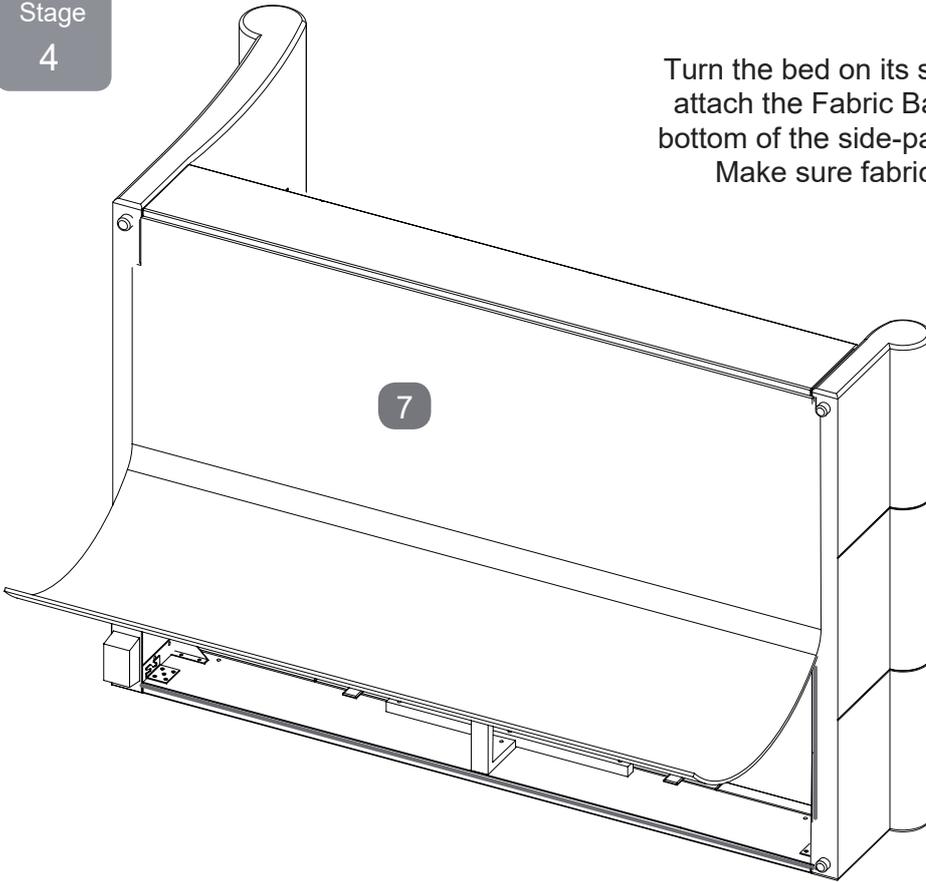

## Fitting Slat Frame - Use Pack 'C'

Stage


5

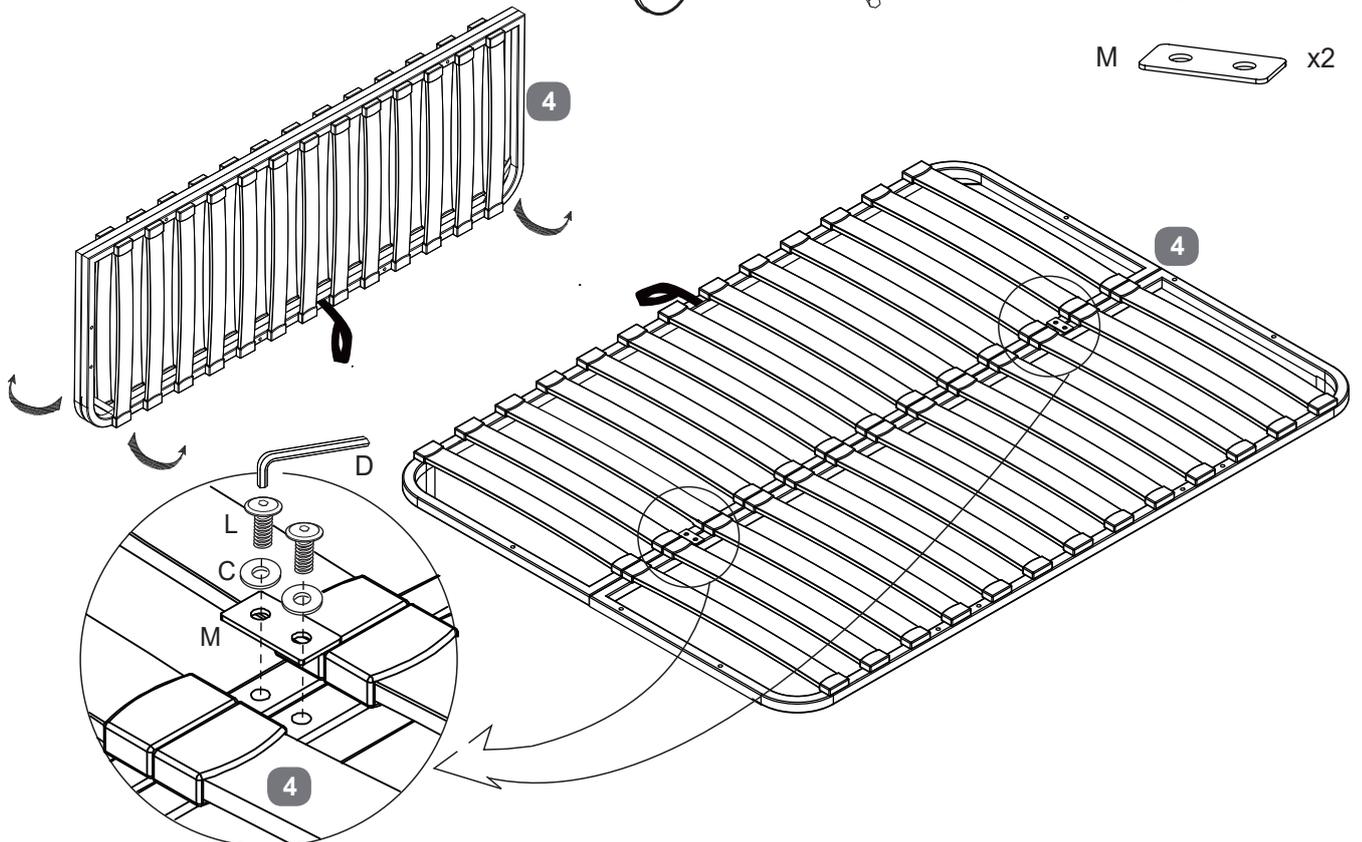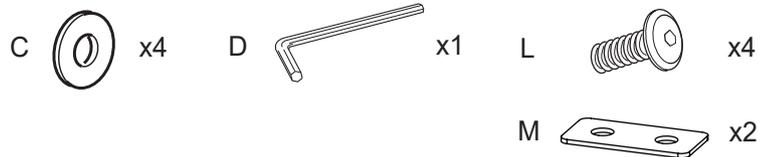


# Fitting Slat Frame

Stage

6

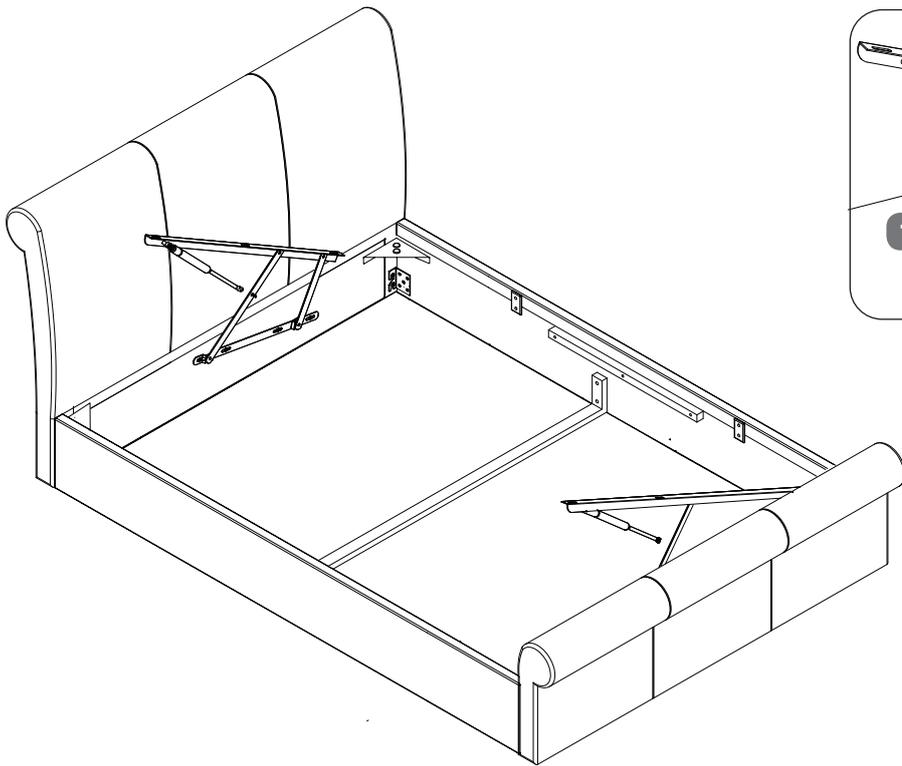



HOLD THEM FORWARD

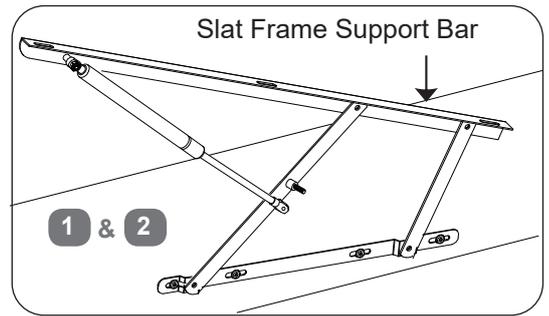

# Fitting Slat Frame - Use Pack 'C'



Stage

7

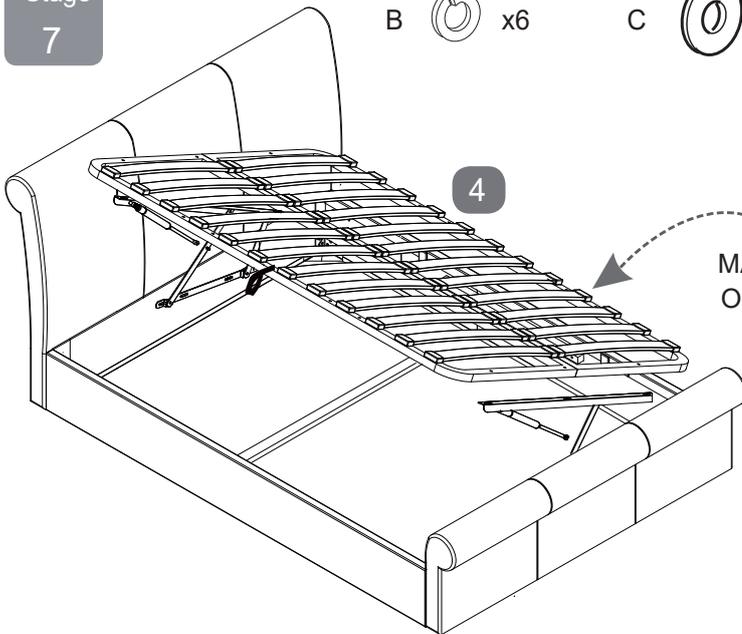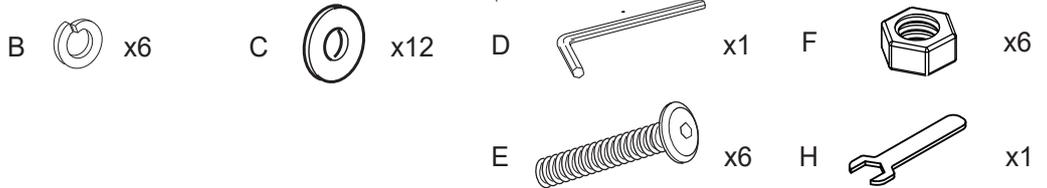

PLEASE NOTE: MAKE SURE THE HOLES FOR MATTRESS STOPPERS ARE ON THE CORRECT SIDE OF THE SLAT-FRAME BEFORE BOLTING TOGETHER.

- i) With help, lift Slat Frame (4) onto slat frame support bars.
- ii) Using two bolt sets on each side, (E), (C), (B) & (F), loosely fix slat frame to six holes - finger tight.

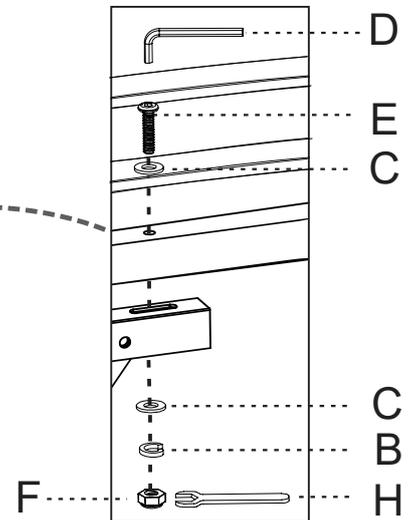
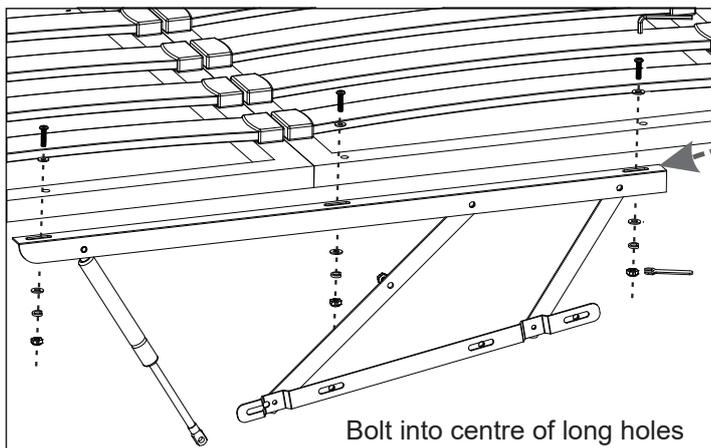


Stage


8



Carefully lay frame down. Make sure there is an even gap each side of about 10mm, as in the sketch.

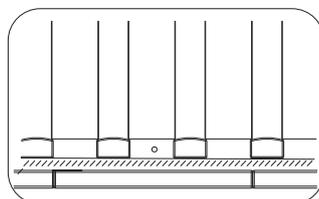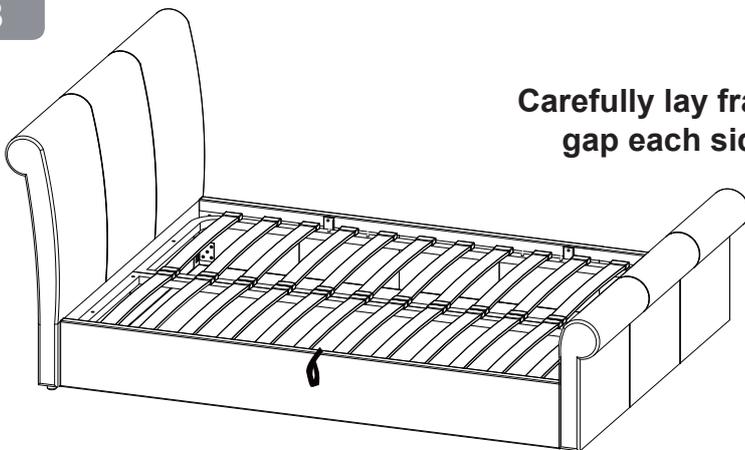

10mm

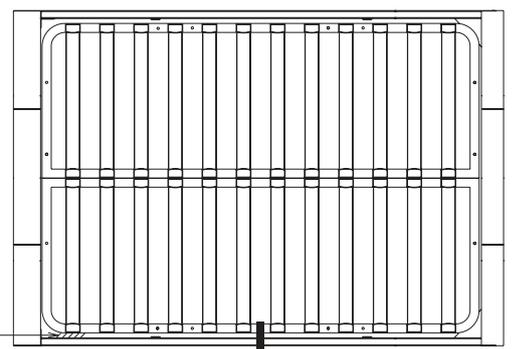

Hold frame then tighten all six bolt sets 100% using spanner (H) & Allen key (D).

## Fitting Slat Frame - Use Pack 'C'

Stage

9

G




x2

H






x1

Note: Be very careful what you store under the bed - the height of the item, like a suitcase or a box, must not touch the slats or they shall be damaged.

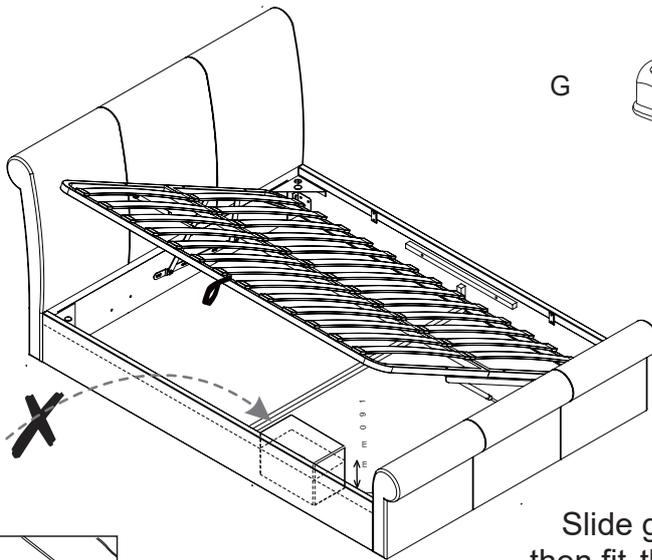


Slide gas-lift piston stem onto the axle then fit the flange lock-nut (G). Tighten nut with spanner (H) - do not over-tighten. A small gap must be left so stem can move freely - see sketch below.

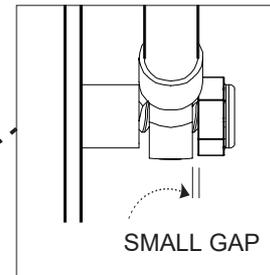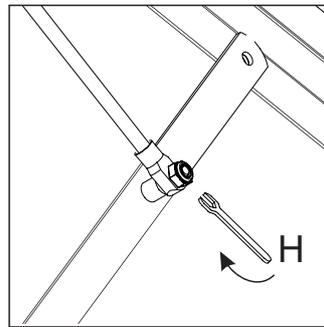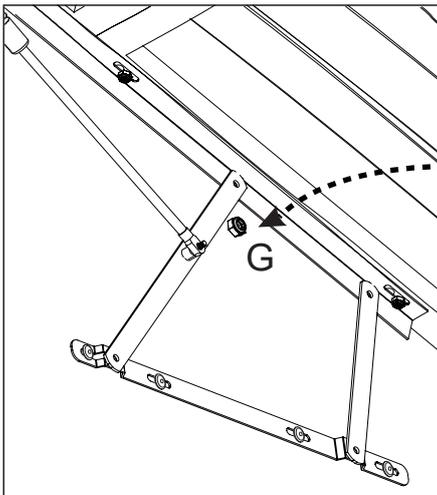

Stage

10

Push x2 Mattress Stoppers (6) into metal frame.

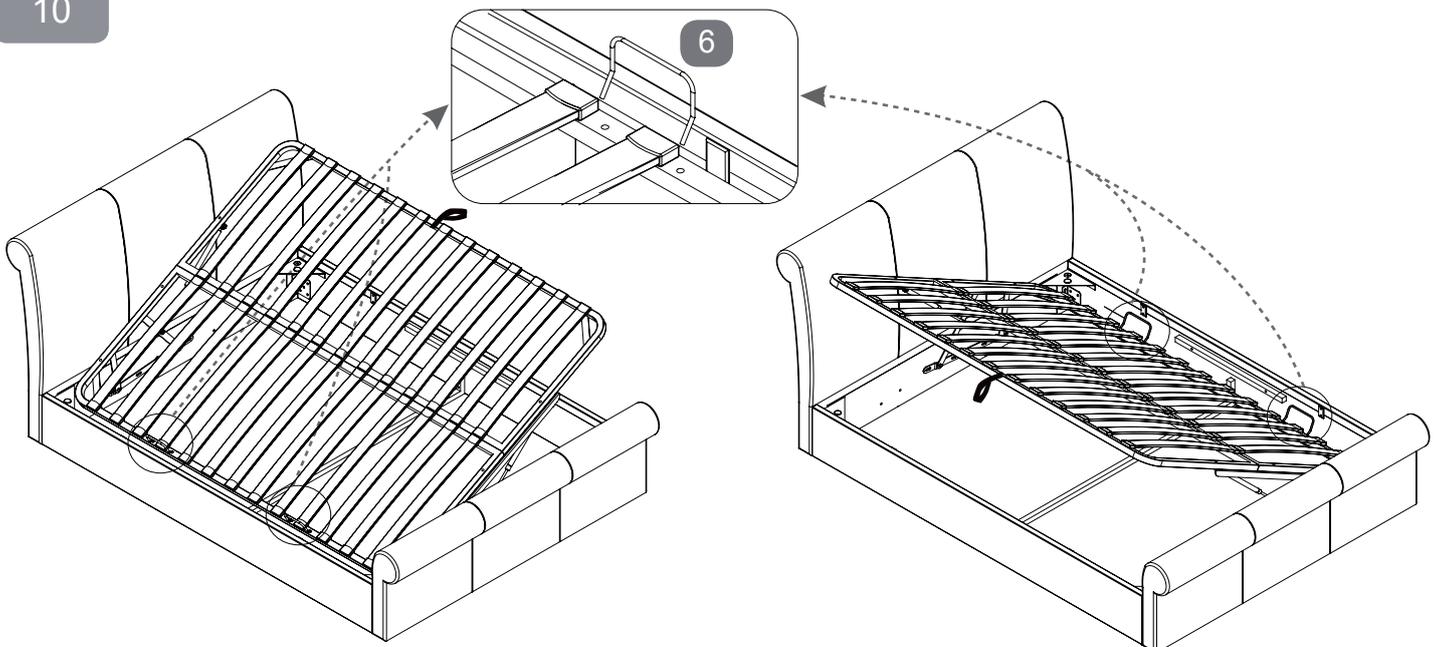

Note: Place mattress on slats then slowly push down metal frame ensuring the frame is aligned with the side panels. Depending on the weight of the mattress, the speed of the lift will vary so be careful until you get used to the speed. Always use the fabric handle to lift or lower the frame - keep fingers well away from the moving parts.