

SOFIA 2 DRAWER BEDSIDE



PLEASE READ this guide prior to installation, to familiarise yourself with the various stages of construction required. Carefully open the pack and check the contents against the parts and fittings check list.

Do not destroy any of the packaging until you are certain that you have all the necessary parts.

Please ensure that the packaging is disposed of in a safe and environmentally friendly way.

In the unlikely event of missing or damaged parts, please email hello@time4sleep.co.uk

Please have this guide close at hand, quoting the part code reference numbers shown, when requesting spare or replacement parts.


Warnings


- This product should only be used on a firm and level floor.
- Make sure the legs/base always remains in contact with the floor.
- Keep small parts out of the reach of children during assembly to prevent choking.
- DO NOT use power tools to construct this product.
- DO NOT tighten screws until parts are assembled or as advised in this guide.
- DO NOT over tighten screws or bolts.
- DO NOT use this product if parts are missing, damaged or worn.
- DO NOT sit or stand on the product.

Care Information

- To clean, wipe with a damp cloth.
- Never use scourers, abrasives or chemical cleaners.
- Do not use solvent based cleaners or detergents as they can bleach or damage the product.

Parts Identification

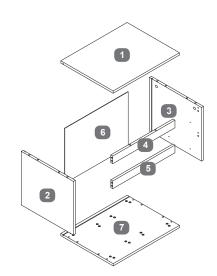

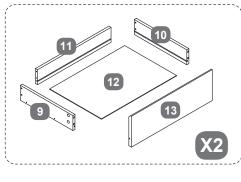



Pack 2/2 Feet supplied in a separate carton

Parts Checklist


Ref	PACK 1/2	Qty	Ref		Qty
1	Top Panel	1	10	Drawer Right Side Panel	2
2	Left Side Panel	1	11	Drawer Back Panel	2
3	Right Side Panel	1	12	Drawer Base Panel	2
4	Upper Cross Rail	1	13	Drawer Front	2
5	Lower Drawer Cross Rail	1			
6	Back Panel	1			
7	Base Panel	1			
9	Drawer Left Side Panel	2			

Fittings Checklist

HARDWARE NEEDED FOR CABINET ASSEMBLY

Code	Description	Qty	Code Description	Qty	
а	Thin Thread Metal Cam Dowel (Ø 7 x 40mm)	x10		x2	
b	Lock (Ø 15 x 12mm)	x10	CL CR DL	DR	
С	Thin Thread Metal Dowel (Ø 5 x 34mm)	x8	For Fitting the Feet		
d	Lock (Ø 12 x 10mm)	x8	k Set Screw (M6x15 mm)	x16	
е	Wooden Dowel (Ø 8 x 30mm)	x12	I Allen Key (M 4)	x1	
f	Screw (Ø3x16 mm)	x4	n Flat Washers (Ø6/Ø16 mm)	x16	
g	Screw (Ø 3.5 x 12 mm)	x32	p Spring Washers (Ø10 mm)	x16	
h	Screw (Ø 4 x 35 mm)	х8	q Foot Pad (20 x 8 x 3 mm)	x4	
j	Screw (Ø5x40 mm)	х4			
m 	Back Tension Support	x4			

Tools Required




General Hints & Tips



Please retain your assembly instruction and tools provided for future use.
Periodically check that all bolts are still tight.

Assembly requires two persons.






Care & Maintenance


In the unlikely event of missing or damaged parts, please contact your retailer. Please have this guide at hand quoting the part code reference numbers shown when requesting spare or replacement parts.


General Information


- This product is designed to hold 15Kg in total, spread evenly over the whole unit.
- Do not exceed this weight.
- Do not sit or stand on the product.
- We recommend that this unit is assembled in the room intended for use.
- When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
- Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent them from scratching.
- Check the pack and make sure you have all the parts listed.
- Ensure that this product is fully assembled as illustrated before
- Check all screws or bolts are tightened and inspect regularly.
- Tools are not included unless they are specified in the parts list.




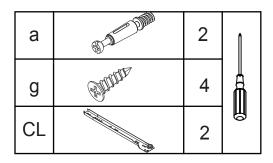

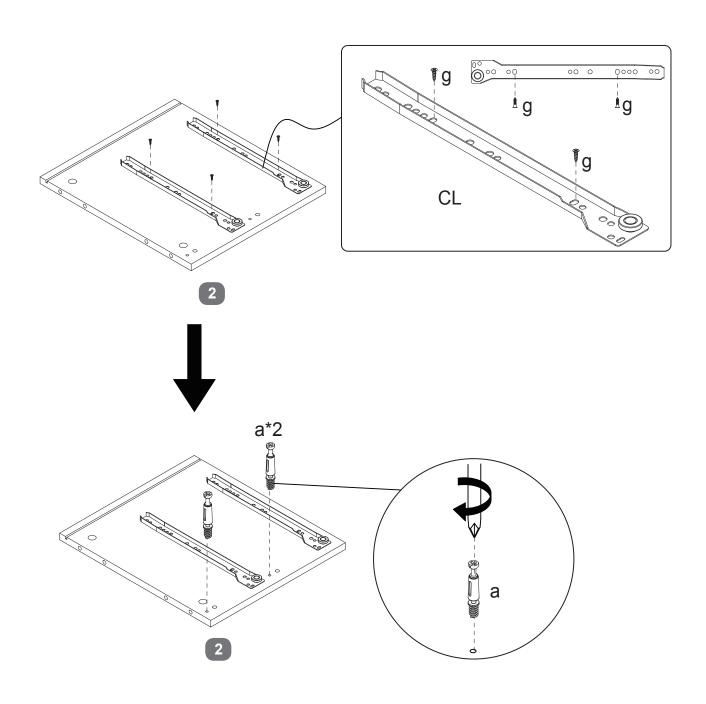


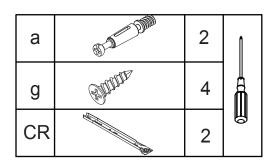


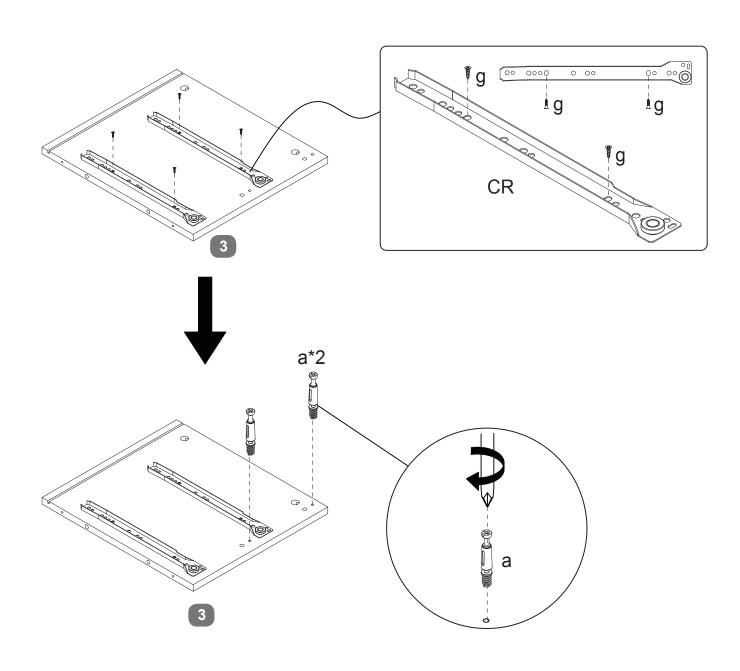

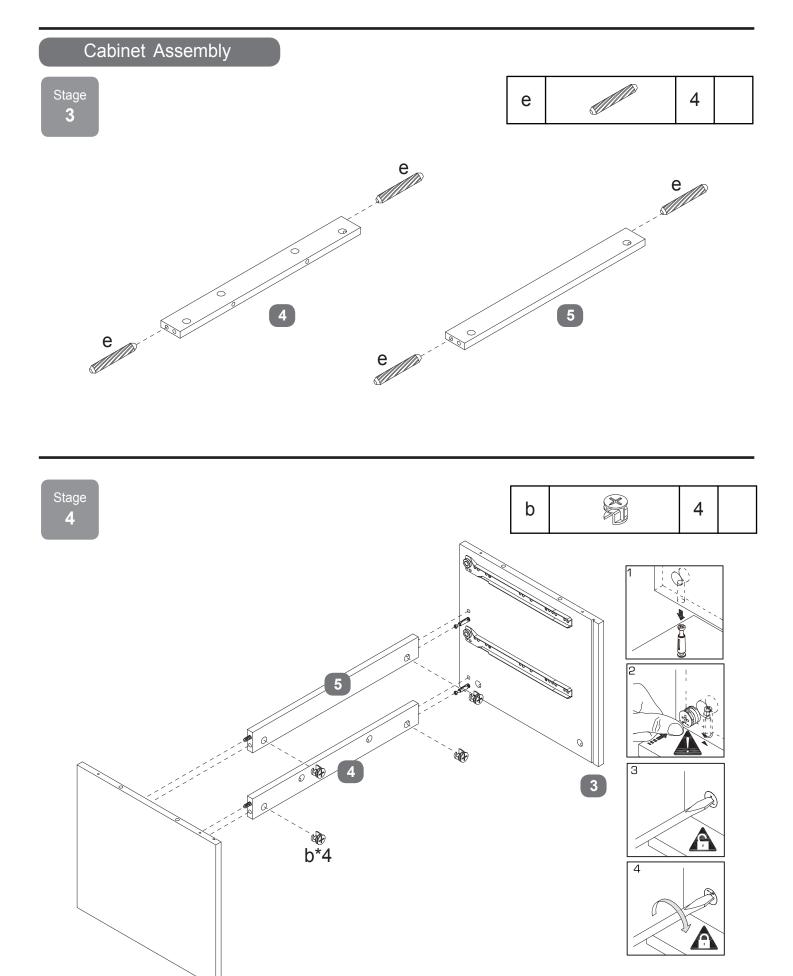



2

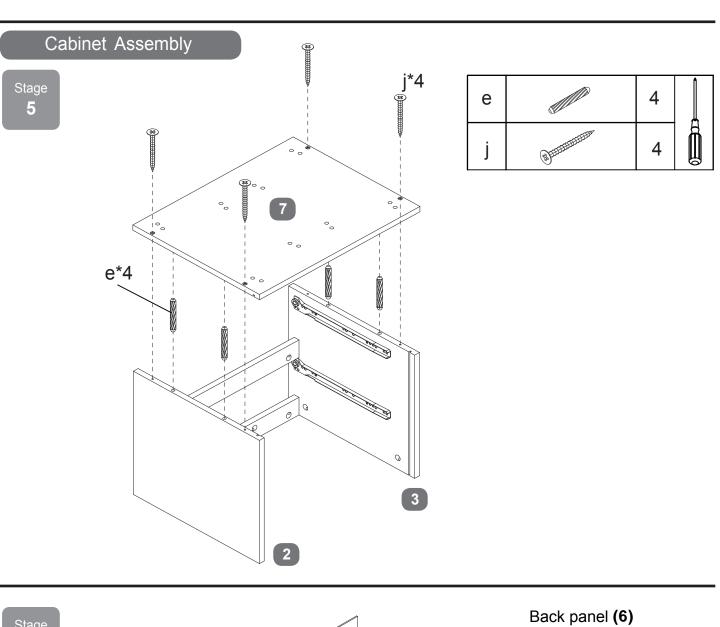


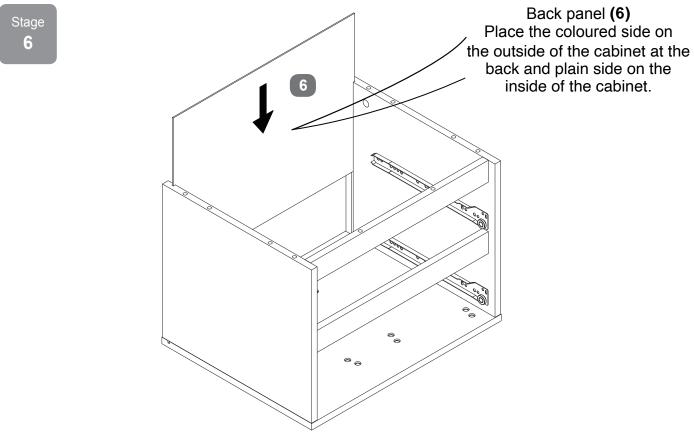


Page 7 of 14

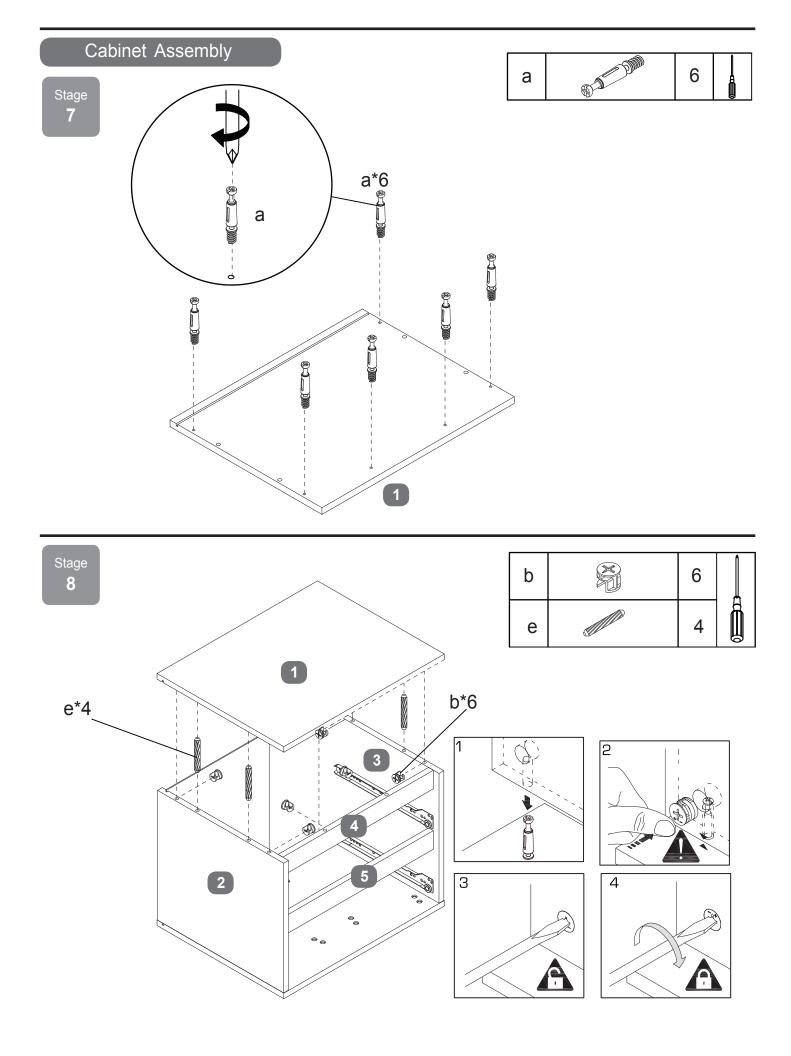

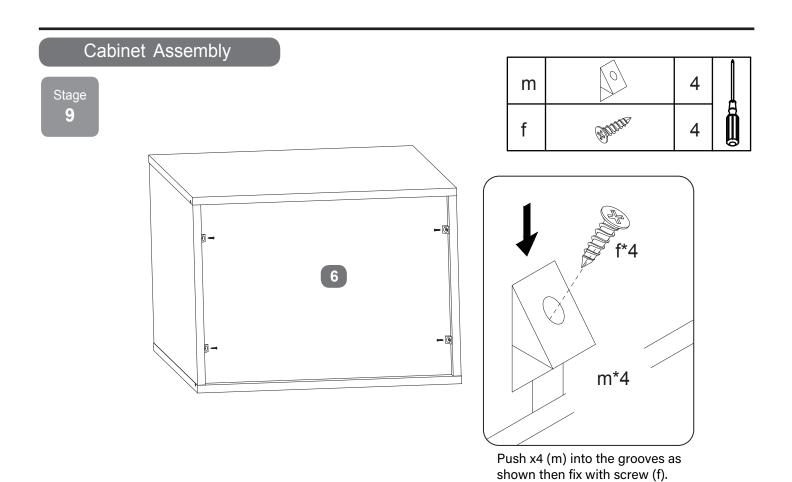


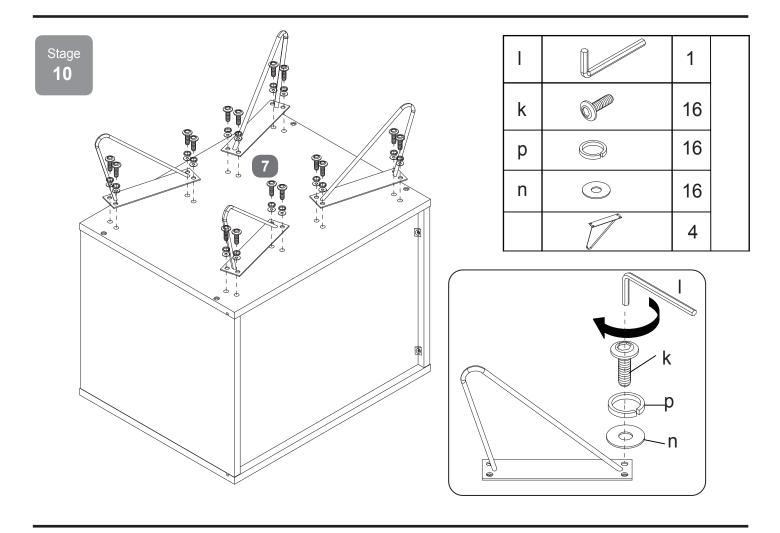



Page 9 of 14

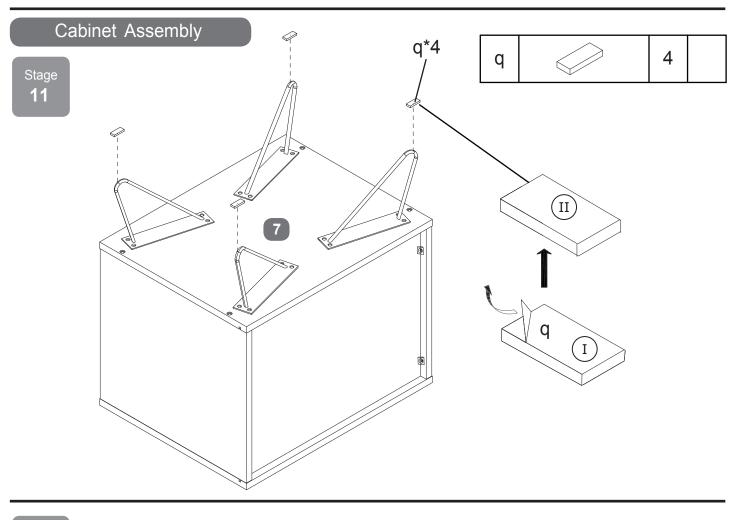


2X




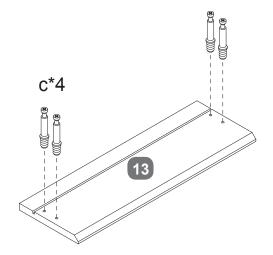


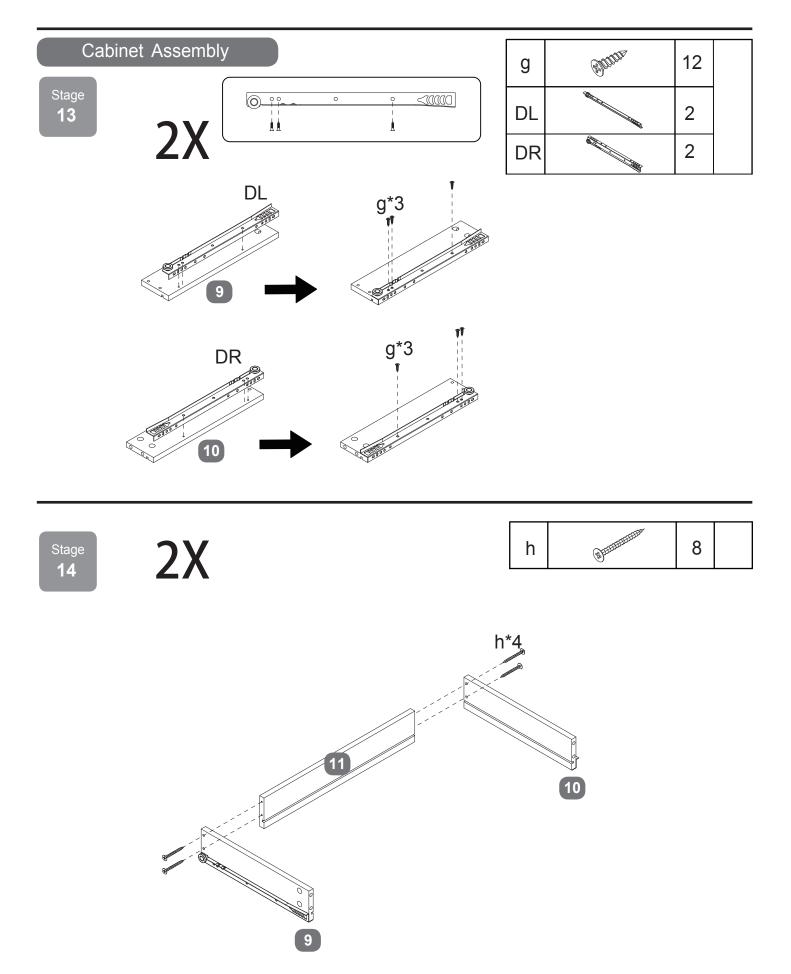

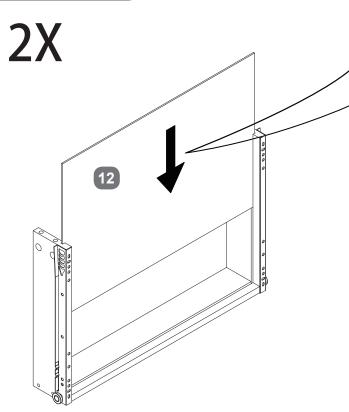

Drawer base (12)
Place the coloured side on
the inside of the drawer
and the plain side
underneath the drawer

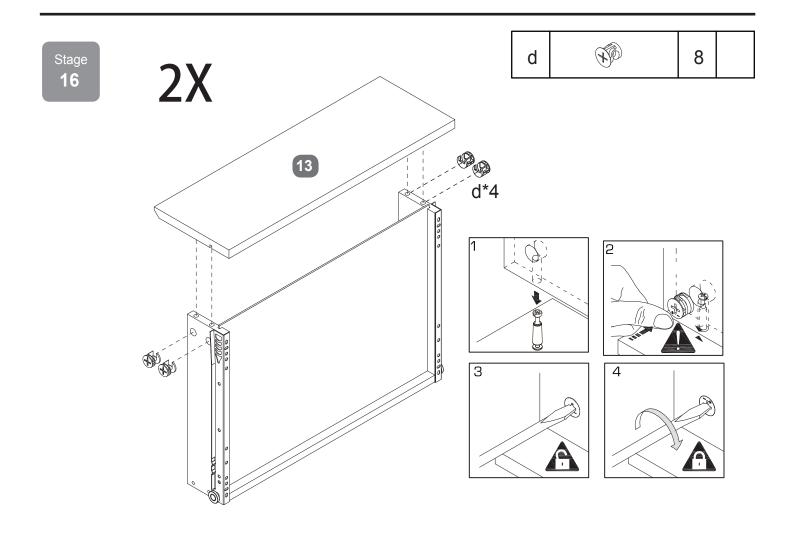

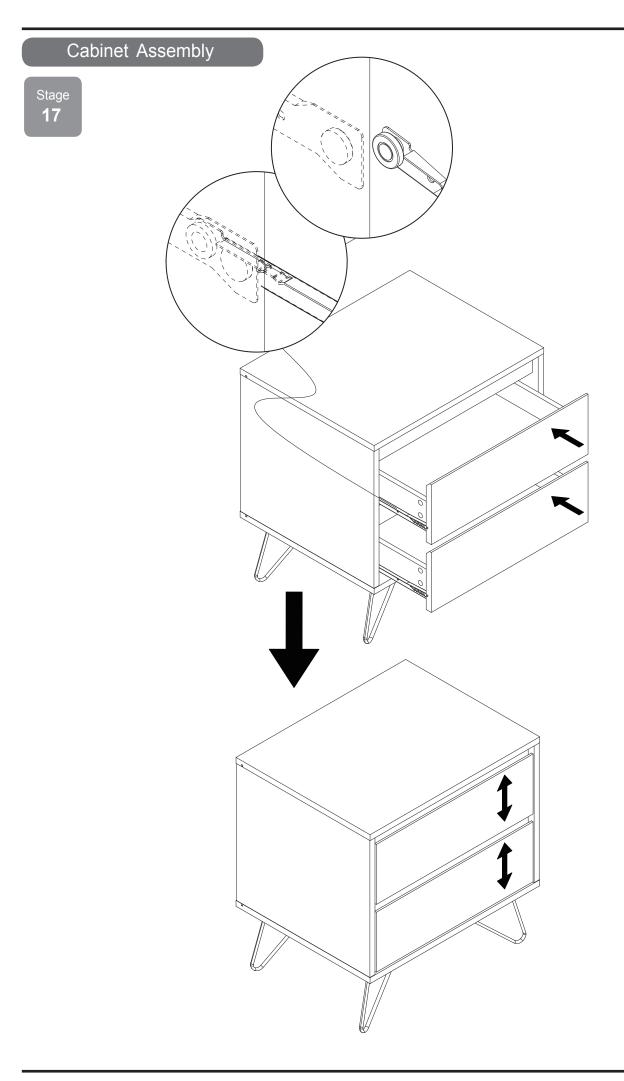

Page 13 of 14

